

## **NEEDLE & SEAT ASSEMBLY INSTALLATION INSTRUCTIONS**

### **CAUTION!**

**Excessive tightening of the needle seat locknut can cause thread distortion and damage to the fuel bowl.**

**Proper installation is as follows:**

- 1. Install and adjust the needle and seat to provide the correct fuel level.**
- 2. Tighten the locknut until the nut contacts the fuel bowl surface.**
- 3. Tighten an additional 1/8 turn or to a torque value of 15 – 20 in./lbs.**

**199R10071**

## **NEEDLE & SEAT ASSEMBLY INSTALLATION INSTRUCTIONS**

### **CAUTION!**

**Excessive tightening of the needle seat locknut can cause thread distortion and damage to the fuel bowl.**

**Proper installation is as follows:**

- 1. Install and adjust the needle and seat to provide the correct fuel level.**
- 2. Tighten the locknut until the nut contacts the fuel bowl surface.**
- 3. Tighten an additional 1/8 turn or to a torque value of 15 – 20 in./lbs.**

**199R10071**

## **NEEDLE & SEAT ASSEMBLY INSTALLATION INSTRUCTIONS**

### **CAUTION!**

**Excessive tightening of the needle seat locknut can cause thread distortion and damage to the fuel bowl.**

**Proper installation is as follows:**

- 1. Install and adjust the needle and seat to provide the correct fuel level.**
- 2. Tighten the locknut until the nut contacts the fuel bowl surface.**
- 3. Tighten an additional 1/8 turn or to a torque value of 15 – 20 in./lbs.**

**199R10071**

## **NEEDLE & SEAT ASSEMBLY INSTALLATION INSTRUCTIONS**

### **CAUTION!**

**Excessive tightening of the needle seat locknut can cause thread distortion and damage to the fuel bowl.**

**Proper installation is as follows:**

- 1. Install and adjust the needle and seat to provide the correct fuel level.**
- 2. Tighten the locknut until the nut contacts the fuel bowl surface.**
- 3. Tighten an additional 1/8 turn or to a torque value of 15 – 20 in./lbs.**

**199R10071**