

# INSTRUCTION SHEET


BERT/BRINN TRANSMISSION *XStORQUE* STARTERS (PART #9514)

## ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal. NOTE: Be sure to use at least a 12 AWG wire for this jumper.

[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]

2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.

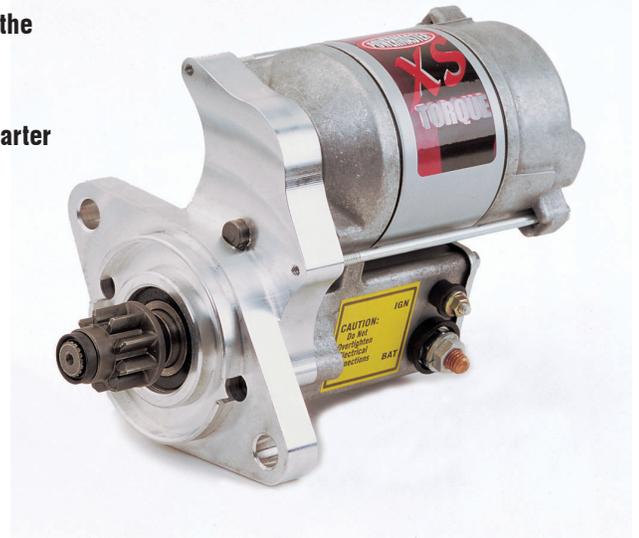

2401 Dutch Valley Dr. ~ Knoxville, TN 37918

(865)688-5953

fax (865)281-9844

# INSTRUCTION SHEET

BERT/BRINN TRANSMISSION *XStORQUE* STARTERS (PART #9514)

## ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal. NOTE: Be sure to use at least a 12 AWG wire for this jumper.

[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]

2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



2401 Dutch Valley Dr. ~ Knoxville, TN 37918

(865)688-5953

fax (865)281-9844