



Manufacturers and Designers of Performance Power Steering Systems and Components


CAST IRON PUMP INSTRUCTIONS

IMPORTANT! PLEASE READ THESE SHEETS BEFORE INSTALLATION

You must first calculate pump rpm prior to installing this pump. Divide your crank pulley diameter by the power steering pump pulley diameter and multiply by maximum engine rpm. (Example: $4.5'' \text{ cp} \div 6'' \text{ psp} = 0.75 \times 7,200 = 5,400 \text{ rpm pump speed.}$) **Maximum recommended aluminum pump speed is 5,500 rpm.** The higher the pump rpm the more horsepower the steering pump will consume. Our aluminum pumps are rated at 9,000 rpm and may be a better choice for your application. Torque on the pump pulley nut is 46 ft lbs.

Please fill out the enclosed Warranty Card. If you have problems once the pump has been installed, **do not return it to your dealer. All pumps must come back to the factory for replacement or repair.** Please call 770-422-5135 for a RGA number for all returns.

This unit will replace GM Saginaw style power steering pumps in every dimension, except the pressure out fitting will point down instead of up. Each pump is packaged with 2 spacers, .50"OD x 2.212" long, that will fill the space between the pump ears and the mounting bracket. Use bolts furnished with your mounting bracket kit to attach the pump as shown in drawing below. Depending on the diameter of the pulley, you may need to install pump mounting bolts before you attach your pulley.

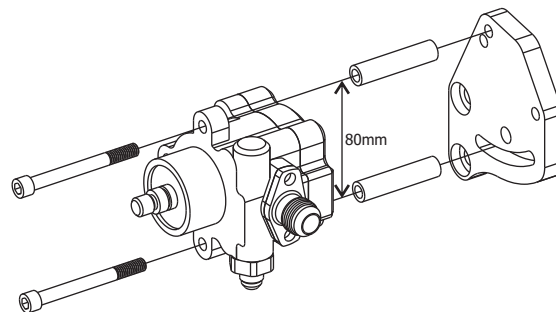


Installation Instructions:

- 1) Mount your pump according to the instructions supplied with your mounting bracket kit. If needed, use flat washers or machine custom spacers to align the steering pump pulley with your drive system. Make sure the spacing is the same on all mounting points or you may experience belt problems.
- 2) Using only high pressure power steering hose (Aeroquip Blue P/S Hose or equivalent). Connect the (-6) pressure line **A**, on the pump, to the servo or the largest hole on the stock steering box. O-ring or inverted flare stock steering box to -6 adapters are sold separately. Connect the return line on the servo, or small hole on a stock steering box, to **B** on the tank.
- 3) Fill the tank (KRC Power Steering Fluid is highly recommended) to the weld line. Then rotate pump several times to prime it before starting the engine. Raise the front wheels off of the ground. Start the engine and turn the steering wheel from lock to lock several times to bleed all of the air out of the system. Twist the cap off to allow the air to escape. Lower the car and check the fluid level. **With the car at idle make sure the fluid level is at the weld line. If the top of the tank is leaned counter-clockwise (facing the pulley) make sure the fluid level covers the -6 return tube inside the tank, while the engine is running. If not aeration of the fluid may occur.**

Bolt-On Tank Notes:

- Bolt-on reservoirs will always increase the fluid temperature in the system. If temperature exceeds 250° you must add a cooler somewhere in the return line.
- Now that there is no inlet line that can potentially suck shut, you have eliminated one of the most common reasons for pump failure.
- On high volume pumps, back pressure may occur in the steering system. We offer tank part number KRC 9131800 that has a -8 return fitting, allowing you to use a -8 return lines to alleviate the back pressure problem.
- DO NOT use a vented cap with this tank. Foaming of the fluid will occur.
- We highly recommend a mineral based power steering fluid or equivalent. In our test, it runs cooler than synthetic based fluids. **For best results use KRC Power Steering fluid.**

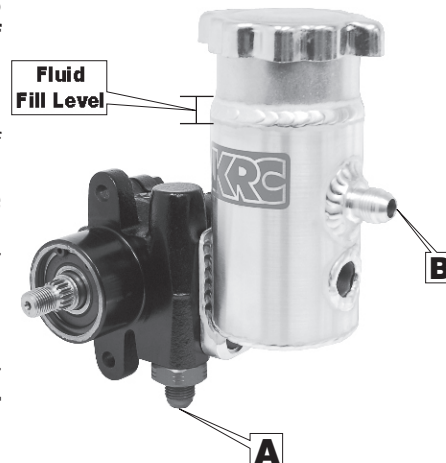

CAST IRON PUMP INSTRUCTIONS

KRC'S EXCLUSIVE CHANGEABLE FLOW VALVE TECHNOLOGY

Flow Fitting Part Number	Cast Iron Pump GPM	ID Mark
KRC 25300407	SET OF 4	—
KRC 25300912	SET OF 4	—
KRC 25304000	1.50 GPM	4
KRC 25305000	1.75 GPM	5
KRC 25306000	2.00 GPM	6
KRC 25307000	2.25 GPM	7
KRC 25308000	2.50 GPM	NONE
KRC 25309000	2.80 GPM	B
KRC 25310000	3.10 GPM	C
KRC 25311000	3.45 GPM	D
KRC 25312000	3.70 GPM	E

KRC offers the only pump with changeable flow control fittings. KRC pumps are shipped with a standard flow control fitting that will give you excellent feel and assist in 90% of all applications. The standard -6 flow fitting has no identification mark on the hex. All optional flow fittings have an identifying mark stamped on the hex, and they will allow you to change the feel in your steering (see chart to right). The more flow your steering system receives the easier it will be to turn the wheels. If you increase the flow too much, the road feel in the steering will go away at higher speeds. Higher flow fittings are required when using steering quickeners or 3.4 inch per revolution, or faster, rack & pinions on short tracks with tight turns. Lower flow fittings are required to put feel and stability back in the steering on tracks with long straightaways. Cars on super speedways can use number 4 through 7 fittings, while a 1/4 mile track open wheel modifieds with 2-to-1 steering quickeners could try a B through E fitting. When selecting a flow control valve for a race track only car, the driver should use the valve that feels best at race speeds. On street driven race cars, you must consider finding a happy medium between the ease of parking and highway speed stability. Optional flow control valves are available individually or in sets of 4 from KRC or your local dealer. In high vibration applications you may want to use a steel flow fitting. To order a steel flow fitting change the 3 in the part number to a 4.

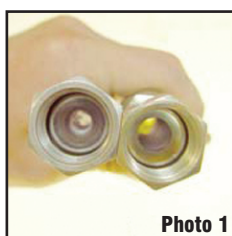


Photo 1



Photo 2



Photo 3

Power Steering Hose Tech

Power steering pumps require a hose with a vacuum rating of 28 INCHES/HG on the inlet side, and a minimum 1/2" inside diameter. This is required to keep the hose from collapsing at higher RPMs. As seen in Photo 1 to the left, common hydraulic hose may have a -10 fitting on them, but the inside diameter is smaller than -6 (.265"). This will damage the pump because there is no way for the pump to intake enough fluid to meet its requirement through such a small hole.

Push-lock hose may be the proper inside diameter, but the vacuum rating is only 18 INCHES/MG. As the fluid warms up, this rating actually goes down. Push-lock hose will suck shut anywhere there is a bend in it, starving the pump of fluid and can cause severe damage to the internals of the pump. See Photo 2.

The -6 pressure hose, leaving the pump, must have an operating pressure of 2,250 psi. and an inside diameter of .31". Common hydraulic hose may have the proper operating range, but their inside diameter is slightly smaller. See Photo 3. The smaller diameter can restrict the flow to the steering gear. This can cause problems in your steering, such as tight spots in the turns and increased driver effort.

KRC only recommends Aeroquip AQP High Pressure power steering hose with steel AN fittings.



Manufacturers and Designers of Performance Power Steering Systems and Components

CAST IRON PUMP INSTRUCTIONS

Tips To Extend the Life of Your New Pump:

- 1) Never start your engine without fluid in the reservoir tank. One minute without fluid can permanently damage the pump.
- 2) Route all hoses away from headers to keep from adding heat to the system and burning the fluid.
- 3) We highly recommend a mineral based power steering fluid or equivalent. In our test, it runs cooler than synthetic based fluids. **For best results use KRC Power Steering fluid.**
- 4) When assembling new hoses, clean them with a rifle bore brush, then flush them out with hot water and air dry before use. Most problems with power steering systems are due to contamination from new hoses, or other steering components, which in turn damages the pump. Always place caps on pumps, steering gears and hoses when system is open to the air.
- 5) Install any filters or coolers on the return side if they are needed.



Common Questions and Answers:

- 1) **Steering feel is too heavy in the turns:** Change optional flow fitting to a higher letter.
- 2) **Steering feel is too light in the turns:** Change optional flow fitting to a lower number.
- 3) **Pump stopped working after only a few laps:** The most common problem on installation is forgetting to clean out the hoses and steering box when installing a new pump. The pump may have to be returned to the factory for cleaning to remove all trash.
- 4) **Assist fades the longer you race:** Overheating the fluid is the problem. Check the fluid temperature immediately after the race. The fluid should not be over 250 degrees. If it is over 250 degrees the heat is coming from an outside source or maximum rpm of pump has been exceeded. Use only high temperature, anti-foaming power steering fluid. Check for lines or tank that may be near headers. You can add a cooler in the return line if needed, this may cure the problem.

Checking for Suspension Bind:

It is critical to check for any suspension bind in the steering system. Place the car on jack stands and remove the springs from the front of the car. Move the suspension up one inch past the normal suspension travel, then move the steering wheel left and right (with the suspension up). Repeat the same process, but move the suspension down one inch past the normal suspension travel. Check for any binding in the suspension and steering. This will insure you have proper clearance of all steering components. Dirt cars may require the use of a limiting strap on the left front wheel. When the wheel lifts in the corner and is dangling, the steering system may be placed in a bind. Ball joints also have a limit to the travel they can move. If the ball joints extend past their travel limits, it will lock down the steering. Any bind in the suspension will increase the amount of pressure inside your steering system. It could cause the pump to go into pressure relief. The driver will feel a loss of power steering when this occurs.

Flow Valve and Pressure Relief Valve Installation:

Install spring first, then pressure relief valve, the last the flow valve. Torque flow valve to 46 ft lbs. This installation process is the same for both KRC aluminum and cast iron power steering pumps.

