

# Instructions for Model No. 72603, 72608, 72609, 72652, 72627, 72628

4/08

- 1) Set up pads along side car. Scale pads are marked RF, LR, etc. They are closely matched and can be interchanged if desired.
- 2) Connect cables from control box - note RF, LR, etc. on cables. The locking nut on the connector can be used or not.
- 3) Turn on control box, allow to warm up for a few seconds. Push **ZERO**. This defines "0" weight. **DON'T PUSH ZERO AFTER CAR IS ON SCALES.**
- 4) Lift car and place pads under wheels. "Shake" car up & down at each corner to settle out any shock or suspension friction.

## Customize 4 line display:

To change the 4 line % display to your preference push **CHANGE DISPLAY** and hold for 5 sec. Top line will start to flash. Use arrows to scroll up or down to the % you want on that line. Push **CONTINUE**. The second line starts to flash. Use arrows to select this line. Press **CONTINUE** after each selection. Normal function resumes after last selection or push **ON**. This will stay until you change.

## Shows Low Batt:

on display when batteries need to be replaced. Use 2) Alkaline 9 volts.

Low Battery indication has 2 steps:


1) **LOW BATT CHANGE SOON** comes on when you have approx. 4 hours left.

2) **LOW BATT CHANGE NOW** comes when you have approx. 1/2 hour left.

**NOTE: THIS MODEL DOES NOT USE RECHARGABLE BATTERIES.** Power consumption is so low that it only needs battery replacement about once a year. **BATTERY ACCESS IS ON RIGHT SIDE OF THE ELECTRONIC BOX.**

This eliminates all potential service issues associated with rechargers and rechargeable batteries and makes for a more reliable system with the added convenience of not having to recharge the batteries every week.

- System shuts off after 1 hour. Push **ON** to resume operation (DO NOT re-zero)
- Keep the system clean and dry. Do not drop either the pads or the control box.
- Route the cables so that no one trips and they do not get run over by floor jacks.
- Store in a clean dry place. Replace batteries as needed - approx. once per year.
- A cable disconnected is indicated by "- - -". • Do not exceed capacity per wheel.
- Keep away from static electricity. • System can be set for Metric readout. See reverse.

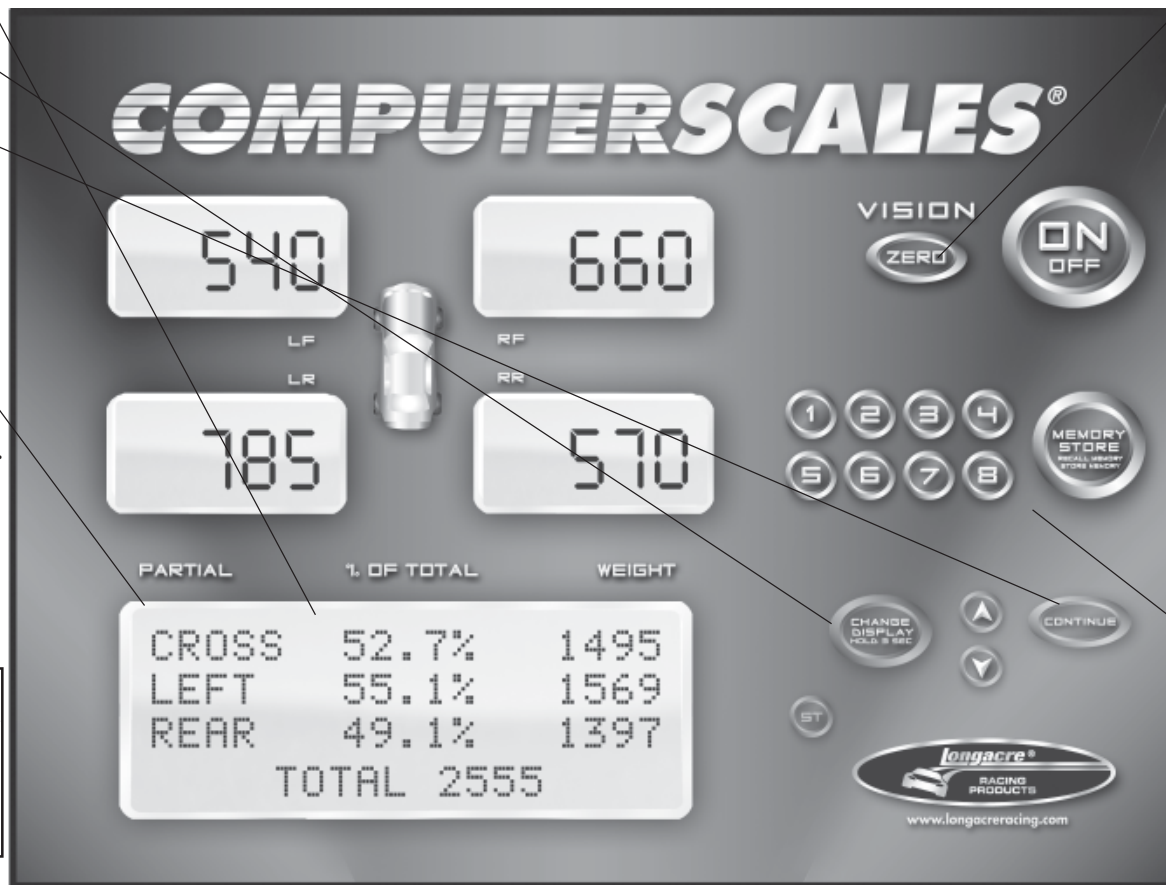

## Cable to Pad Connections:

The locking nuts can be used or not as you prefer.

## Zero:

Push **BEFORE** putting car on scales. **DON'T** push **ZERO** **AFTER** car is on scales. This defines zero weight.

## Batteries:

Access is on the right side of the box. Use notch to lift up and slide out "drawers". Replace with 2 quality Alkaline 9 volt batteries (can use 1 only but do not replace only 1) as needed. Power use is so low these should last 1 year or more.

## Memory:

To store weights in Memory push & hold **MEMORY STORE** button and push #1 - 8. To recall push and hold #1 - 8.

**Call, FAX, or e-mail**  
if you have any questions  
or problems.



**Longacre Racing Products, Inc.**  
16892 146<sup>th</sup> St SE, Monroe, Wa. 98272  
(360) 453 2030 FAX (360) 453 2031  
[www.longacreracing.com](http://www.longacreracing.com)