
# Installation Instructions for AFCO Cross Flow Aluminum Radiators

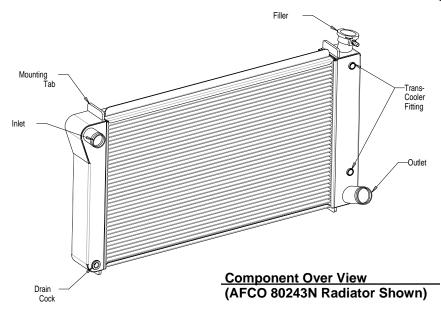



American Fabricating Co. 977 Hyrock Blvd, Boonville, IN 47601 800-632-2320 www.AFCOracing.com

#### **WARNING:**

- Radiator fluid must be handled properly. Please observe local ordinances with regards to handling and disposal.
- Allow vehicle and components to cool a minimum of 1 hour before handling.
- 3. Never attempt to open the radiator cap when hot.
- 4. Do not allow any tools or limbs to contact fans SERIOUS INJURY MAY RESULT.
- Always follow directions and disconnect the battery before attempting installation.
- AFCO is not responsible for personal injury or damage to vehicle resulting from improper installation of this product.
- Due to vehicle variations / tolerances it is ultimately up to the installer to determine proper installation.

#### Disconnecting the radiator

- Allow the vehicle to cool completely
- Disconnect the battery (fig.1)
- Remove the radiator cap and overflow hose. Never attempt to open the cap when hot.
- Drain the coolant by opening the drain cock.
- Disconnect both inlet and outlet hoses by loosening the clamps holding them in place.\* (fig. 2)
- Disconnect the transmission cooler lines (in automatic transmission applications only)\*

\*It may be necessary to first remove shrouds and other items to gain access to hoses, clamps and fittings. (fig.3)

### Removing the radiator

- Remove all fasteners and brackets holding the radiator in place. (fig. 4)
- Carefully remove the radiator.



Fig. 5



Fig. 1



Fig. 2



Fig. 3



Fig. 4

## Installing the AFCO radiator

- Carefully lower the AFCO radiator into place. (fig. 5)
- Bolt the radiator into place using the original hardware and mounting brackets.
- Reinstall the lower hose.
- Connect the transmission lines. With this conversion, transmission lines will have to be fabricated.
- Reinstall the upper hose.
- Reinstall any shroud or accessory that was removed for access to the radiator.
- Carefully check the hood for clearance.
- Fill the system with coolant mix per the manufacturers specifications.
- Reconnect the battery.
- Run the car at idle until the thermostat opens. Top off the coolant.
- Install a new radiator cap. The old cap may have imperfections and cause the system to leak.
- Check for leaks.
- Congratulations, you have just installed your new AFCO high performance radiator!



Installed Radiator

<sup>\*</sup>Radiator cap not included