



Tech Dept.
(630) 957-4019

Tech@powermasterperformance.com

WIRING INSTRUCTIONS

GM CS144 Alternator (One Wire or OE Hookup)




*The Following Units are OE hookup only:

38202
48202
58202
68202

Charge Post Size
M8 x 1.25 (Black Insulator)
12-24 (Red Insulator)


GM CS Style Plug

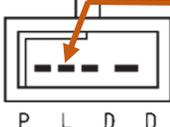

Charge Ind. Light

From Ignition Switch

Ground/Support Tab
M10 x 1.5

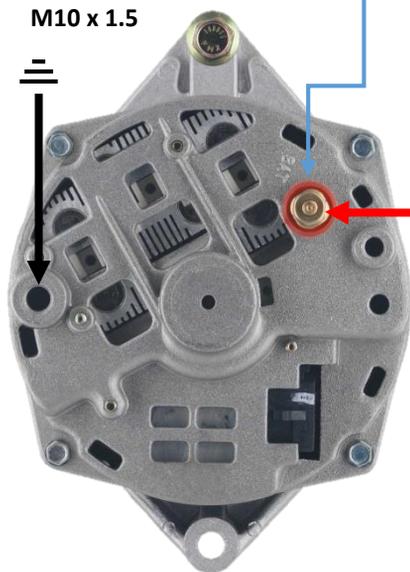

BATTERY + ← OR



BATTERY + ON
STARTER SOLENOID

Optional Charge Indicator Light Function: Your

Powermaster Alternator is designed to work as a 1 wire without any connections to the plug in. The function of the plug is to run a charge indicator (Idiot Light) only. This plug also does not serve as a hookup point for a voltmeter, or help charging at idle. **This connection has no effect on charging performance.** If your vehicle was already equipped with a CS style connector, simply reattach the factory connector and follow grounding instructions.

Disconnect Battery Negative (-)

READ ALL INSTRUCTIONS IN BOX!

Charge Wires:

170 Amp Alt. use 4 gauge up to 6 ft.

200 Amp Alt. use 4 gauge up to 6 ft.

Alternator Ground: Many mounting brackets are powder/clear coated, painted, or plated. The alternator will not ground properly without a ground wire from the Alt. housing to the engine block. (This wire should match charge wire size)

Battery must have a clean ground to engine block.

Wire Connections: Be sure all terminals are crimped securely, and connections are clean and tight.

Belt Tension: Inspect belt for signs of cracking or glazing. Replace if needed. **A loose belt will cause intermittent charging and generate excessive heat resulting in premature unit/bearing failure.**

For V belt units follow attached pulley tag.

A fully charged battery is at least 12.6V, not 12.0V. A weak/defective battery will cause premature failure. **Never disconnect the battery with engine running!** This causes voltage spikes that will damage the alternator.

DO NOT EXCEED 18,000 ALTERNATOR SHAFT RPM

(See Catalog pg.45 for more info)

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY VOID YOUR WARRANTY

Warranty void if unit is soaked in Oil or Mud