This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter may be used in a stock machine, with no modifications required. However, if any modifications have been made, tuning/jetting adjustments may be required. The following procedure MUST be followed to ensure a proper fit and seal of the K&N Filtercharger<sup>®</sup>.

- 1. Remove the stock air filter.
- 2. Carefully clean the inside of the air box.
- 3. Apply a light coating of K&N Sealing Grease or equivalent to the sealing surface of the open end of the K&N Filtercharger®.
- 4. Install the K&N Filtercharger®.

**Note:** Pay close attention to the orientation of the top and bottom of the open end of the K&N Filtercharger®, they are shaped differently.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

• 1455 CITRUS ST., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 951-826-4001 • e-mail: tech@knfilters.com • WWW: http://www.knfilters.com

172044a 2/23/06



This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter may be used in a stock machine, with no modifications required. However, if any modifications have been made, tuning/jetting adjustments may be required. The following procedure MUST be followed to ensure a proper fit and seal of the K&N Filtercharger<sup>®</sup>.

- 1. Remove the stock air filter.
- 2. Carefully clean the inside of the air box.
- 3. Apply a light coating of K&N Sealing Grease or equivalent to the sealing surface of the open end of the K&N Filtercharger®.
- Install the K&N Filtercharger®.

**Note:** Pay close attention to the orientation of the top and bottom of the open end of the K&N Filtercharger®, they are shaped differently.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.