



INSTALLATION INSTRUCTIONS

Part Number: E-1008

This filter fits: See catalog for current applications

*** FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal ***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modification will be required. However the following procedures MUST be followed to ensure the proper fit and seal of the K&N® air filter.

INSTALLATION:

1. Remove the air filter housing cover by unfastening the two clips.
2. Remove the dirty air filter from the housing.
3. With a damp rag, wipe off any dust or dirt from the inside of the air filter housing. The air filter housing must be clean and dry so that the self adhering gasket will stick to the housing. (Fig.1)
4. Install the gasket onto the air filter housing by removing the white backing and place the gasket at the 6 o'clock position one inch from the edge. (Fig 2 & 3)
5. Install the K&N® air filter into the air filter housing, making sure it is fully seated.
6. Re-install the air filter housing cover by lining the arrow on the housing to the arrow on the lid and refasten the two clips.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.