

## INSTALLATION INSTRUCTIONS Part Number: E-1999

This filter fits:

See catalog for current applications

\* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal \*

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modification will be required. However the following procedures MUST be followed to ensure the proper fit and seal of the K&N® air filter.

## **INSTALLATION:**

- 1. Remove the OE air filters.
  - NOTE: The 2 Torx screws that hold the OE filters to the airbox base will be used to install the K&N® air filters.
- 2. Install the hose clamp onto the K&N® air filter flange, ensuring the hose clamp's tightening screw is facing upward, in the location specified in Fig.1. Install the K&N® air filter onto the airbox's filter flange and ensure the hose clamp's tightening screw is facing upward as shown in Fig. 2.
- 3. Once the air filter is properly installed onto the flange, tighten the Torx screws, securing the K&N® air filter tabs to the airbox base. Fig.3
- 4. With a standard flat blade screwdriver, tighten hose clamps to secure the air filters to the airbox flange. Fig.4
- 5. Repeat steps 2 through 4 for opposite side air filter.
- 6. Re-install airbox lid.

## **CLEANING:**

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 3



Fig. 2



Fig. 4