



INSTALLATION INSTRUCTIONS

Part Number YA-4514XD

This filter fits: See catalog for current applications

* **FREE K&N® decal** To register your warranty, please see us online at knfilters.com/register. **FREE K&N® decal ***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

INSTALLATION:

- 1) Remove screws that attach cleaner cap to the motorcycle and pull up on air duct to remove from fairings. Fig.1&2
- 2) Remove screws that attach seat and then slide back while lifting. Fig 3&4
- 3) With the seat now removed, remove the screws that attach the front fairings to the gas tank. Fig. 5
- 4) Remove the remaining screws that attach the left and right fairings. Fig. 6
- 5) Remove the bolt that attaches the gas tank. Fig. 7
- 6) Gently pull down on the clip that holds the gas line to the frame to free it. Fig. 8
- 7) Locate the 2 push pins that hold the air deflector in place. Press the center of the pin to remove clip. Fig 9&10
- 8) Carefully lift gas tank to gain access to the screw that hold the air deflector and now remove the air deflector. Fig .11
- 9) Remove OE air filter.
- 10) Remove the OE plastic frame that attaches to the air boot. **NOTE: The frame will not be used, but the inserts will in a later step.** Fig. 12
- 11) Clean any debris that might be around or in the air boot. Fig. 13
- 12) Remove the OE inserts from the plastic frame. Fig. 14
- 13) Place the OE inserts into the K&N® filter. Fig. 15&16
- 14) Now place the K&N® filter into the air box. Fig. 17
- 15) Install the provided plate over the K&N® filter and tighten with the original screws.
- 16) Test the filter for proper fit and seating before riding or installing the seat.
- 17) Reverse steps to complete install.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig.1



Fig.2



Fig.3



Fig. 4

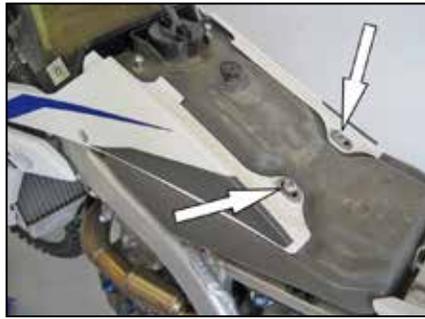


Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10



Fig. 11



Fig. 12



Fig. 13



Fig. 14

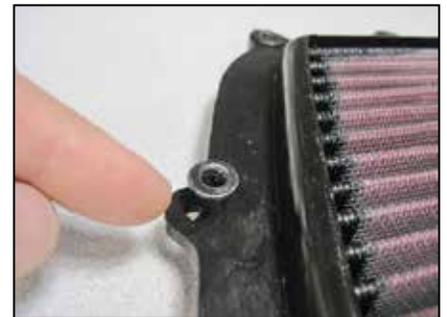


Fig. 15



Fig. 16



Fig. 17

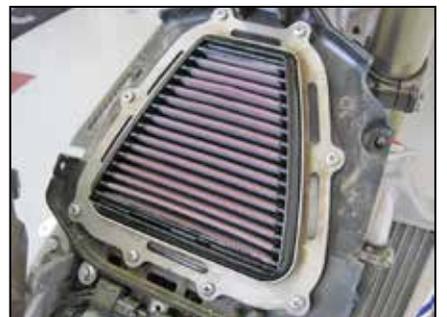


Fig. 18