



## Steering Wheel Alignment Indicator Instructions

- 1) Turn steering wheel so wheels are pointed straight ahead. Unbolt wheel.
- 2) Bolt pointer arm to steering wheel plate. Replace steering wheel with plate UNDER wheel and pointer at top pointed toward steering box. Use the longer bolts provided or bolts of the correct length.
- 3) Bolt shaft indicator bracket to steering shaft and align with pointer.

