




an ISO 9001:2015 Registered Company

Streamline

Gen IV ProLine Ellipse Panel

Polished

491240

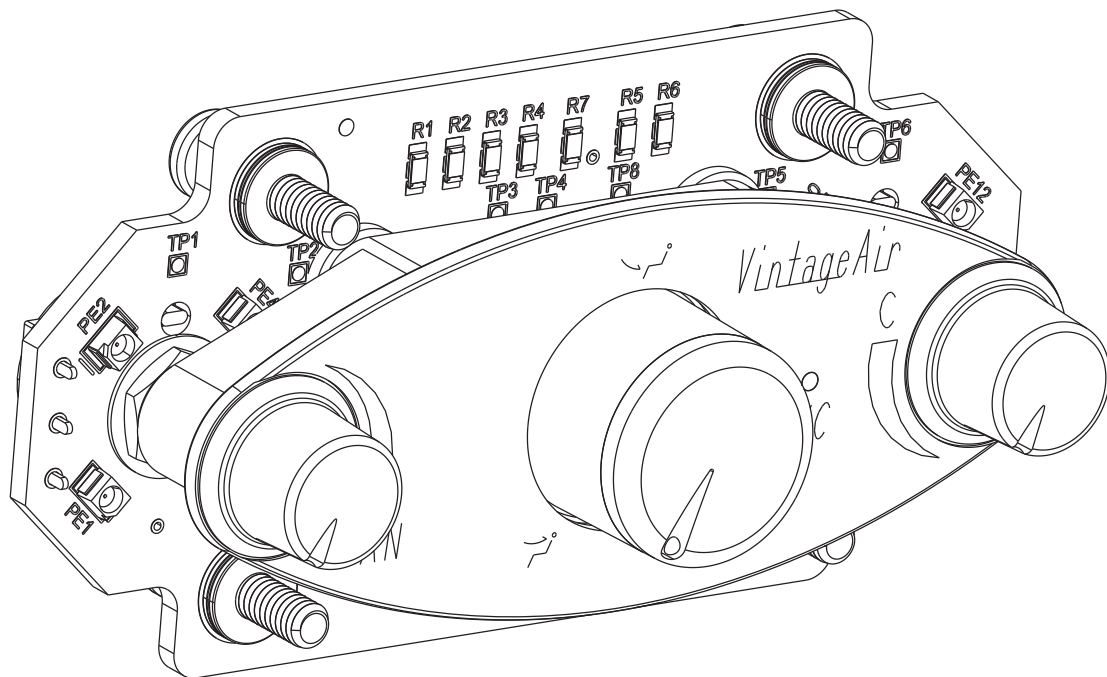

18865 Goll St. San Antonio, TX 78266
Phone: 800-862-6658
Sales: sales@vintageair.com
Tech Support: tech@vintageair.com
www.vintageair.com



www.vintageair.com

Table of Contents

Cover.....	1
Table of Contents.....	2
Packing List/Parts Disclaimer.....	3
Control Panel Dimensions, Control Panel Installation.....	4
Control Panel Installation (Cont.).....	5
Control Panel Removal.....	6
Wiring Diagram.....	7
Operation of Controls.....	8
Packing List.....	9





www.vintageair.com

Packing List: Control Panel Kit (491240)

No.	Qty.	Part No.	Description
1.	1	491240	Control Panel, Streamline Gen IV ProLine Ellipse


**** Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

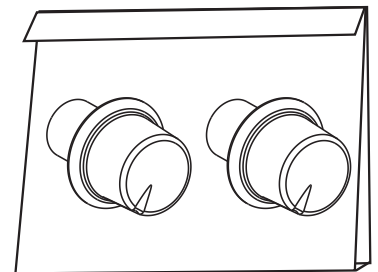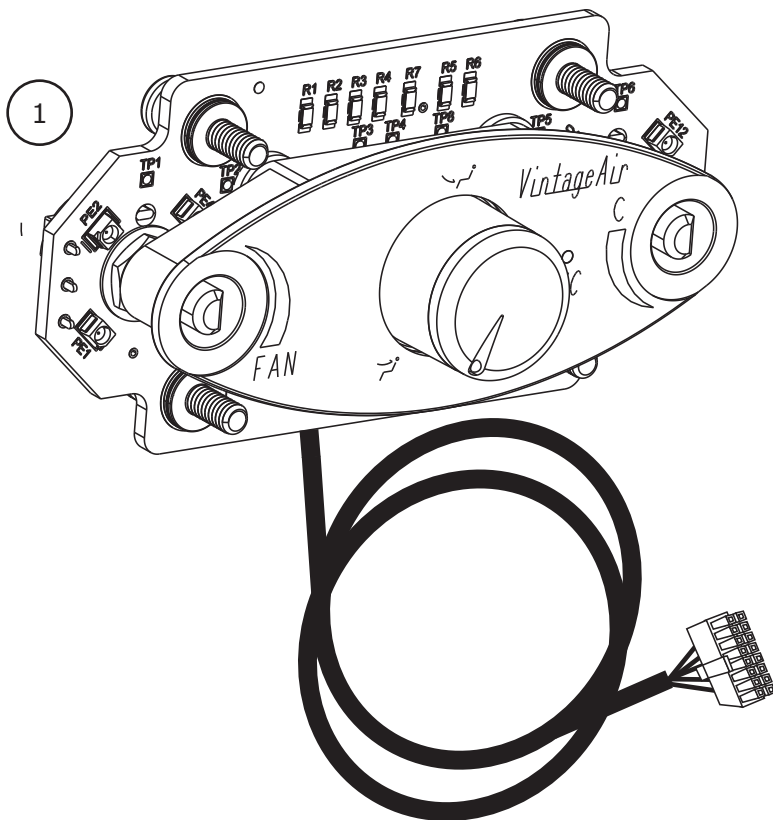



www.vintageair.com

Control Panel Dimensions

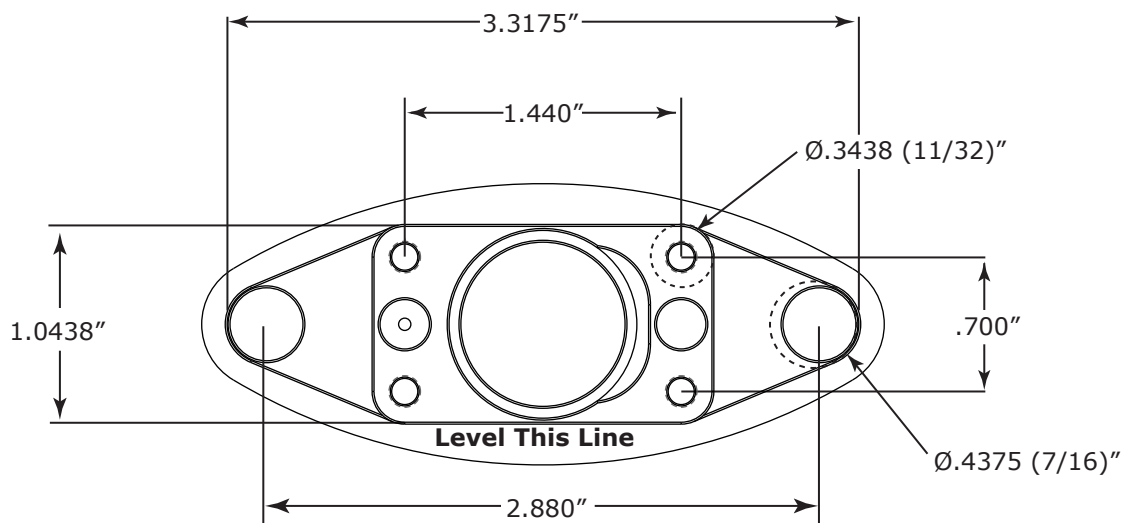

Control Panel Installation

NOTE: Do not install the (2) control panel knobs onto the control panel assembly until the panel has been installed in the dash. For knob removal after installation, refer to the Control Panel Removal instructions on Page 6. DO NOT attempt to remove the knobs using pliers.

1. Select a suitable location for the control panel, considering heater control valve location, wiring harness length and operator convenience.
2. After selecting a location for the control panel, mask the area 1 ½" (tall) x 4 ½" (wide).
3. Using the dimensions provided above, mark or scribe the control panel opening location onto the dash. When you are certain that the dimensions and markings are correct, cut the dash to make the control panel opening. **NOTE: Measure twice. Cut once. This opening MUST be a precise fit. Cut the opening undersize, and then file to fit. The mounting screws only hold the panel against the dash. They do not locate the panel laterally. If the opening is oversized, the panel may shift during use.**
4. Install the control panel face through the opening in the dash. Place the control panel PC board assembly behind the dash, and secure it to the control panel face using the (4) 8-32 x 3/8" screws (See Figure 1 and 2a, Page 5). **NOTE: When tightening the control panel mounting screws, hand tighten until the screw contacts the back side of the dash. Then, using a screwdriver, tighten an additional 1/2 turn. Do not overtighten, as this may cause damage to the PC board or the dash.**
5. Install the control panel knobs (See Figure 1, Page 5).
6. Plug the control panel wiring harness into the control panel and the ECU on the evaporator (See Figure 2, Page 5).
7. Wire according to the wiring diagram on Page 7.



www.vintageair.com

Control Panel Installation (Cont.)

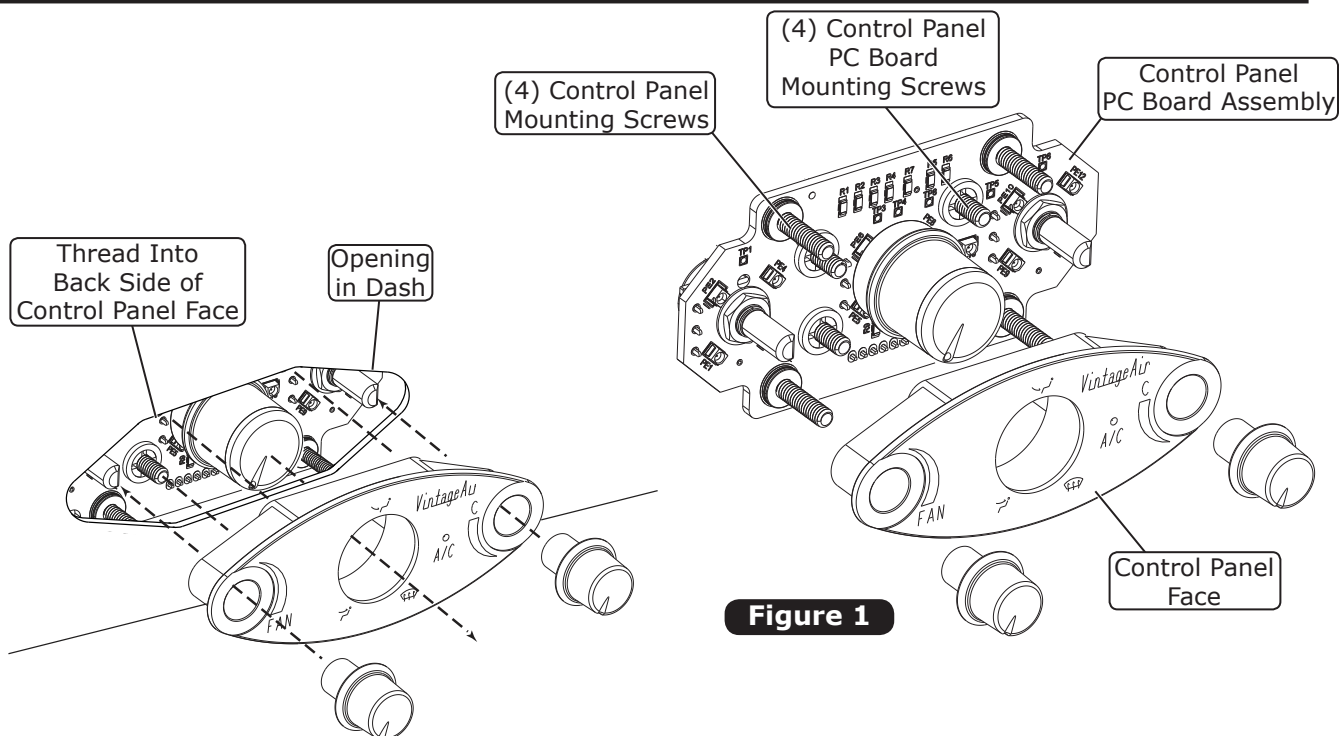


Figure 1

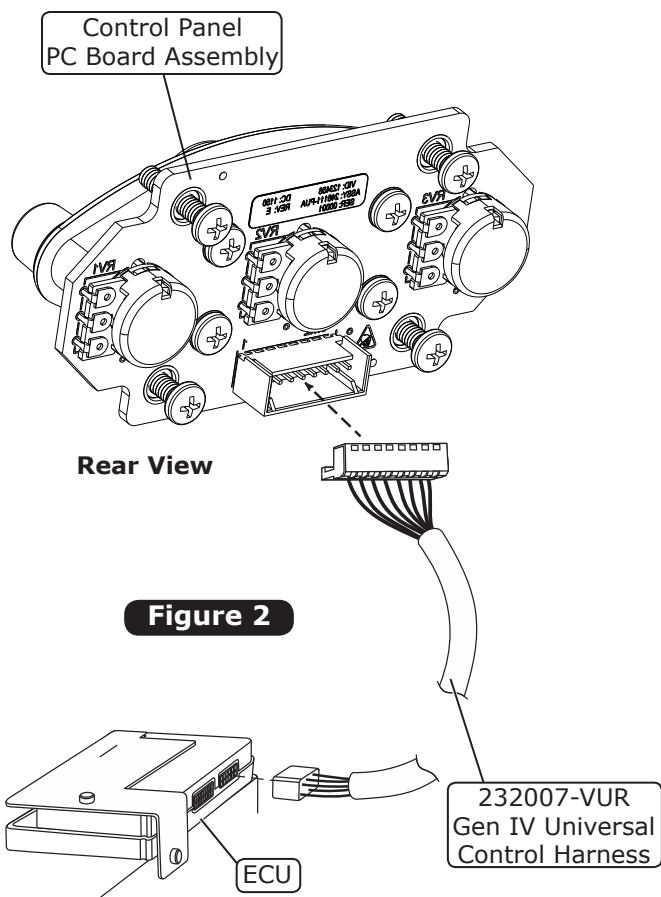


Figure 2

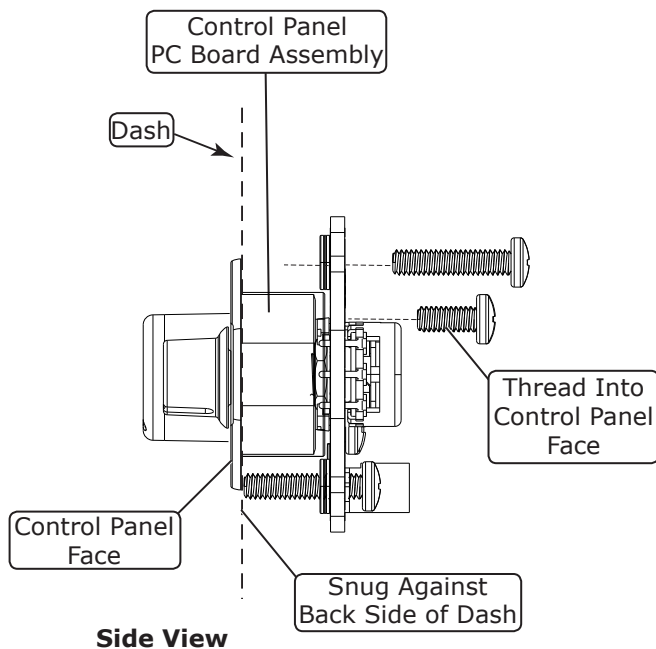


Figure 2a



www.vintageair.com

Control Panel Removal

NOTE: Do not attempt to remove the control panel knobs using pliers, as doing so may damage the knobs. To remove the knobs and/or the control panel assembly from the dash, follow the procedure below.

1. Disconnect the control harness from the back of the control panel assembly (See Figure 3, below).
2. Loosen the (4) control panel mounting screws securing the control panel to the dash (See Figure 3, below).
3. Remove the (4) 8-32 x 3/8" screws securing the PC board assembly to the control panel face (See Figure 3, below).
4. Hold the PC board assembly and pull it away from the dash until the board comes loose from the control panel face (See Figure 4, below). **NOTE: The control panel knobs will be loose in the control panel face.**
5. Carefully remove the control panel face and knobs from the dash.

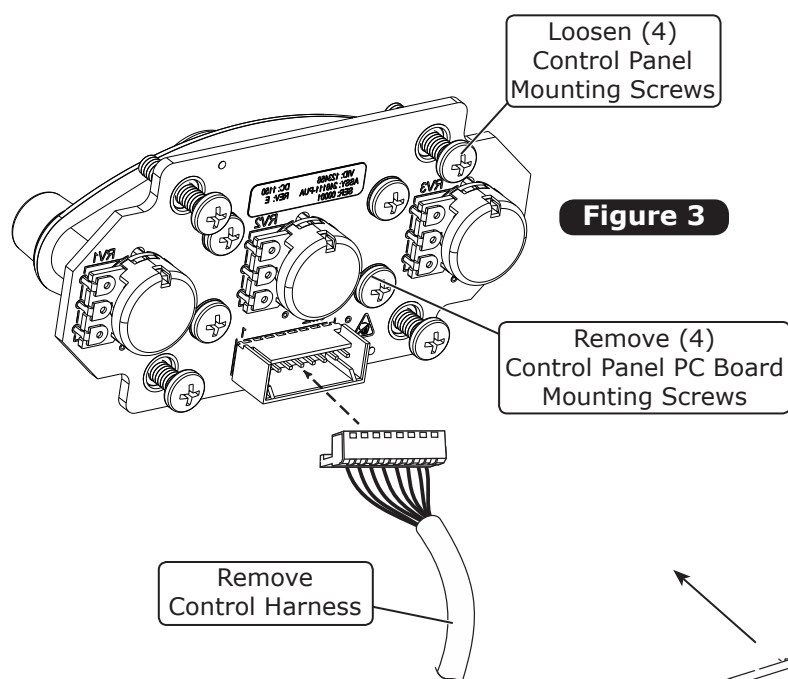


Figure 3

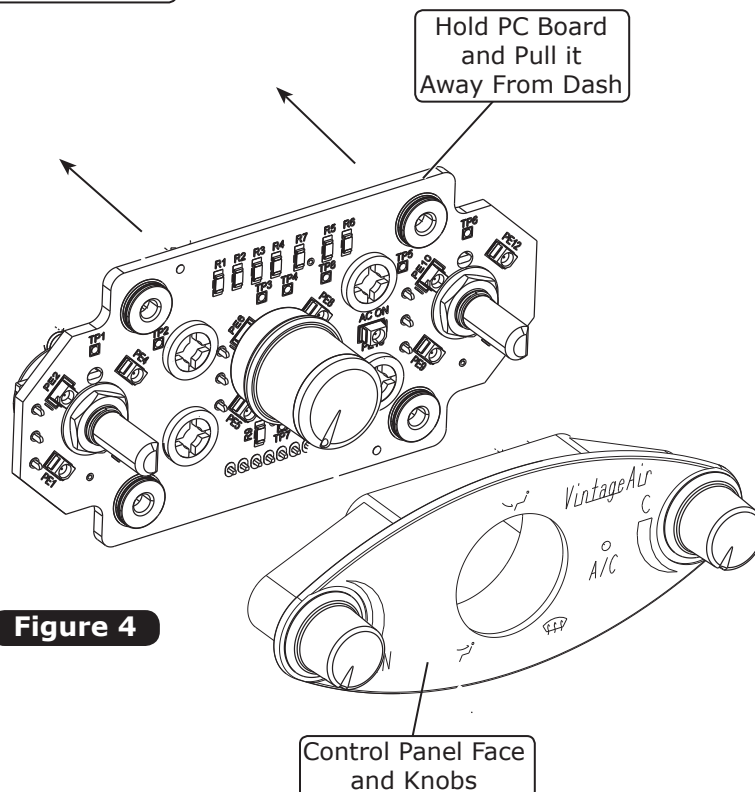


Figure 4




www.vintageair.com

Wiring Diagram


REVISION C 10/06/17

232007-VUR

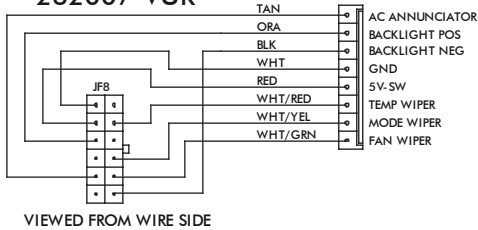

VIEWED FROM WIRE SIDE

232002-VUA

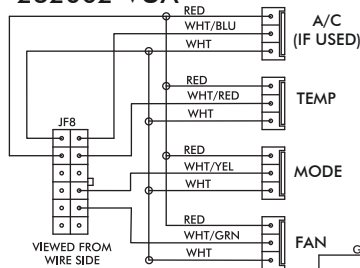


VIEWED FROM WIRE SIDE

PROGRAM

N/A
* DASH LAMP (IF USED)

*** WIDE OPEN THROTTLE SWITCH (OPTIONAL)

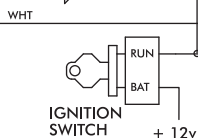

WHT

** CIRCUIT BREAKER 30 AMP

COMPRESSOR RELAY



30 86 87 85

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU

GRN

RED

WHT

ORA

GRY

BLK

YEL

BLU



www.vintageair.com

Operation of Controls

On Gen IV systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle between operations, to indicate the change.

Blower Speed


This lever/knob controls blower speed, from OFF to HI.

Mode Control

This lever/knob controls the mode positions, from DASH to FLOOR to DEFROST, with a blend in between.

Temperature Control

This lever/knob controls the temperature, from HOT to COLD.

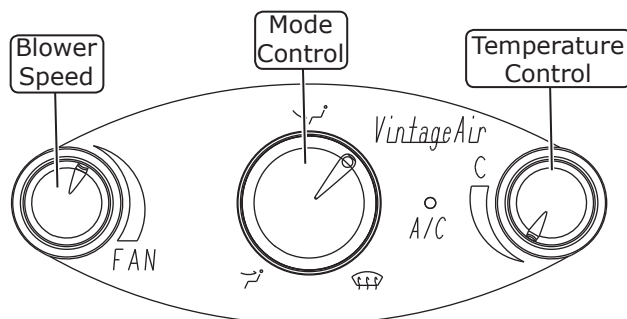

A/C Operation

Blower Speed


Adjust to desired speed.

Mode Control

Adjust to desired mode position (DASH position recommended).

Temperature Control

For A/C operation, adjust to coldest position to engage compressor (Adjust between HOT and COLD to reach desired temperature).

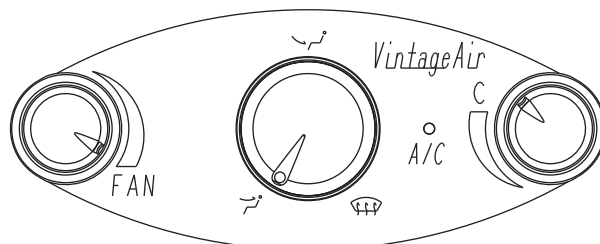

Heat Operation

Blower Speed


Adjust to desired speed.

Mode Control

Adjust to desired mode position (FLOOR position recommended).

Temperature Control

For maximum heating, adjust to hottest position (Adjust between HOT and COLD to reach desired temperature).

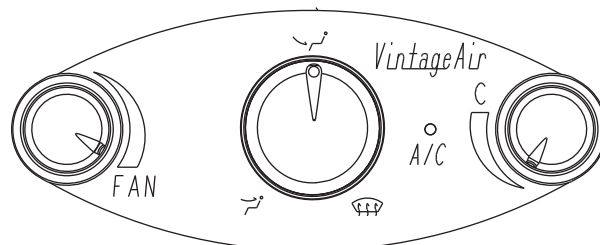

Defrost/De-fog Operation

Blower Speed


Adjust to desired speed.

Temperature Control

Adjust to desired temperature.

Mode Control

Adjust to DEFROST position for maximum defrost, or between FLOOR and DEFROST positions for a bi-level blend (Compressor is automatically engaged).

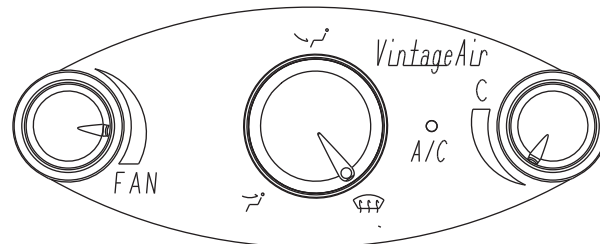



www.vintageair.com

Packing List: Control Panel Kit (491240)

No.	Qty.	Part No.	Description
1.	1	491240	Control Panel, Streamline Gen IV ProLine Ellipse

Checked By: _____
Packed By: _____
Date: _____

