


1968-69 CUTLASS

CONTROL PANEL CONVERSION KIT 473079

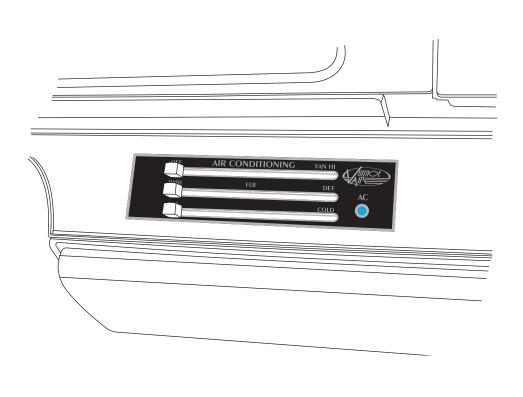

18865 GOLL ST. - SAN ANTONIO, TX. - 78266 ph.210-654-7171 - fax 210-654-3113



Table of Contents

PAGES

- 1. COVER
- 2. TABLE OF CONTENTS
- 3. PACKING LIST/ PARTS DISCLAIMER
- 4. REMOVING OEM CONTROL PANEL
- 5. CONTROL PANEL & CONTROL HARNESS INSTALLATION
- 6. WIRING DIAGRAM
- 7. OPERATION OF CONTROLS
- 8. CONTROL PANEL KIT PACKING LIST





CONTROL KIT PACKING LIST

CONTROL KIT 473079

No	QTY	PART No.	DESCRIPTION
1.	1	473078	68-69 CUTLASS CONTROL PANEL ASM
2.	1	232007-VUR	GEN IV UNIVERSAL CONTROL HARNESS

^{**} BEFORE BEGINNING INSTALLATION, OPEN ALL PACKAGES AND CHECK CONTENTS OF SHIPMENT. PLEASE REPORT ANY SHORTAGES DIRECTLY TO VINTAGE AIR WITHIN 15 DAYS. AFTER 15 DAYS, VINTAGE AIR WILL NOT BE RESPONSIBLE FOR MISSING OR DAMAGED ITEMS.

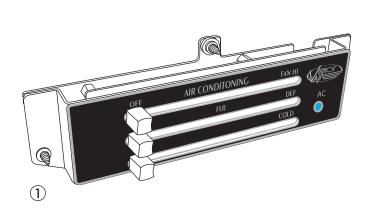

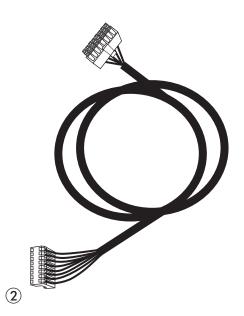


NOTE: IMAGES MAY NOT DEPICT ACTUAL PARTS AND QUANTITIES.
REFER TO PACKING LIST FOR ACTUAL PARTS AND QUANTITIES



REMOVING OEM CONTROL PANEL -

- ☐ DISCONNECT BATTERY GROUND CABLE.
- ☐ DISCONNECT ALL WIRE AND CABLES FROM CONTROL PANEL.
- ☐ REMOVE CONTROL PANEL FROM DASH BY REMOVING (3) OEM SCREWS.

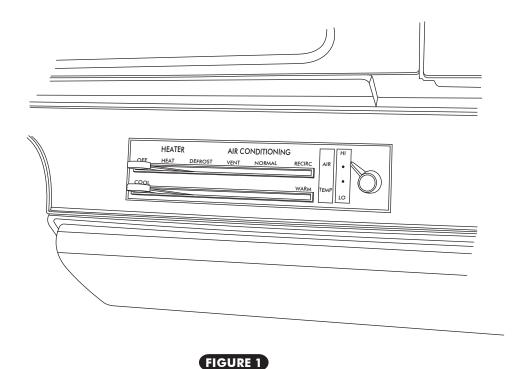


1




CONTROL PANEL AND CONTROL HARNESS INSTALLATION -

- ☐ INSTALL CONTROL PANEL ASM IN THE OEM MOUNTING LOCATION USING NUT DRIVER. TAKE CARE NOT TO SCUFF CONTROL PANEL FACE DURING INSTALLATION. (SEE FIGURE 2 BELOW.)
- ☐ CONTROL PANEL FACE INTENDED TO POSITION JUST SHY OF FLUSH OF INSTRUMENT PANEL. **NOTE: REMOVE SHIMMING WASHERS AS REQUIRED TO ADJUST CONTROL PANEL FLUSHNESS AND ACCOMMODATE VARIATIONS IN FACTORY DASH TOLERANCE.**
- □ PLUG THE CONTROL PANEL HARNESS INTO ECU AS SHOWN IN FIGURE 3 BELOW. PLUG THE OPPOSITE END OF THE HARNESS INTO THE CONTROL PANEL PC BOARD AS SHOWN IN FIGURE 3 BELOW.

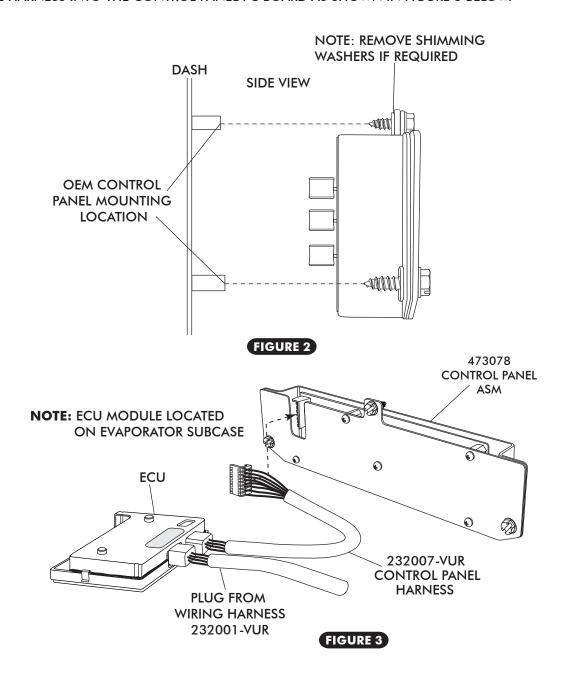



Wiring Diagram

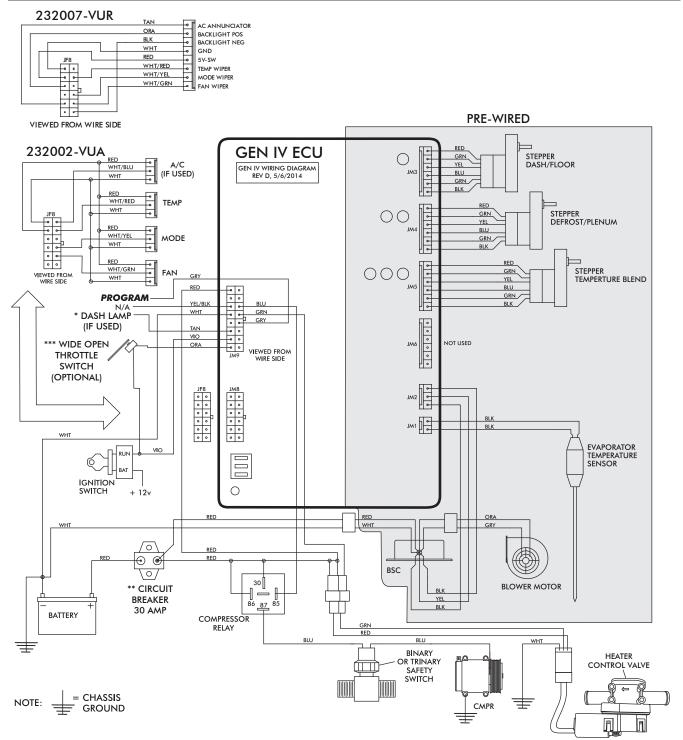


- Dash Lamp Is Used Only With Type 232007-VUR Harness.
- Warning: Always Mount Circuit Breaker As Close to the Battery As Possible. (NOTE: Wire Between Battery and Circuit Breaker Is Unprotected and Should Be Carefully Routed to Avoid a Short Circuit).
- Wide Open Throttle Switch Contacts Close Only at Full Throttle, Which Disables A/C Compressor.



OPERATION OF CONTROLS

ON GEN 4 SYSTEMS WITH THREE LEVER/KNOB CONTROLS, THE TEMPERATURE CONTROL TOGGLES BETWEEN ECONOMY/HEAT AND A/C MODES. TO ACTIVATE A/C, MOVE THE TEMPERATURE LEVER ALL THE WAY TO COLD AND THEN BACK IT OFF TO THE DESIRED VENT TEMPERATURE. FOR ECONOMY/HEAT MODE, MOVE THE TEMPERATURE LEVER ALL THE WAY TO HOT AND THEN ADJUST TO THE DESIRED VENT TEMPERATURE. THE BLOWER WILL MOMENTARILY CHANGE SPEED EACH TIME YOU TOGGLE BETWEEN MODES TO INDICATE THE CHANGE.

BLOWER

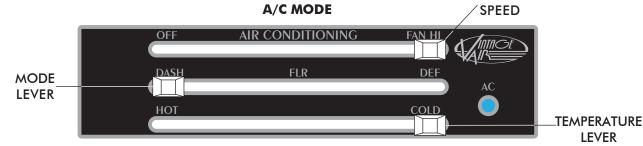

BLOWER SPEED
ADJUST TO DESIRED
SPEED

MODE LEVER

SLIDE THE LEVER ALL THE WAY LEFT FOR DASH MODE

TEMPERATURE LEVER

IN A/C MODE SLIDE THE TEMPERATURE LEVER ALL THE WAY RIGHT TO ENGAGE COMPRESSOR. (SLIDE LEVER LEFT OR RIGHT TO ADJUST DESIRED TEMPERATURE)

HEAT MODE



BLOWER SPEED ADJUST TO DESIRED SPEED


MODE LEVER

SLIDE THE LEVER TO THE CENTER POSITION FOR FLOOR MODE

TEMPERATURE LEVER

SLIDE THE TEMPERATURE LEVER ALL THE WAY LEFT TO THE HOT POSITION. (SLIDE LEVER LEFT OR RIGHT TO DESIRED TEMPERATURE)

DEFROST MODE

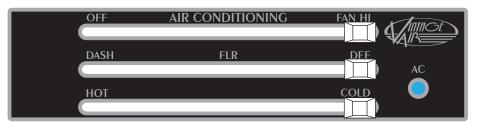

BLOWER SPEED

ADJUST TO DESIRED SPEED

MODE LEVER

SLIDE THE LEVER ALL THE WAY RIGHT FOR DEF MODE

TEMPERATURE LEVER

ADJUST LEVER TO
DESIRED TEMPERATURE.
(COMPRESSOR IS
AUTOMATICALLY
ENGAGED)





CONTROL KIT PACKING LIST

CONTROL KIT 473079

No	QTY	PART No.	DESCRIPTION	
1.	1	473078	68-69 CUTLASS CONTROL PLANEL ASM	
2.	1	232007-VUR	GEN IV UNIVERSAL CONTROL HARNESS	

CHECKED BY: ______
PACKED BY: _____
DATE: ____

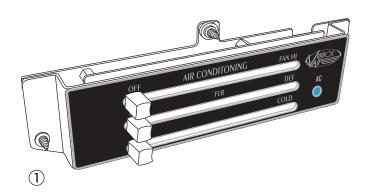

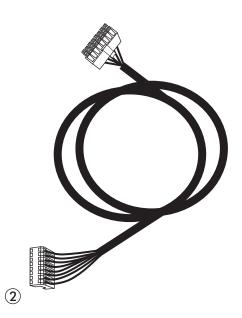

NOTE: IMAGES MAY NOT DEPICT ACTUAL PARTS AND QUANTITIES.
REFER TO PACKING LIST FOR ACTUAL PARTS AND QUANTITIES