

# INSTRUCTIONS

© 2019, Speedway Motors, Inc.



## Magnetic Breakerless Distributor Installation 910-8353

### Step 1

Prepare the distributor by removing the distributor cap.

### Step 2

Place the distributor in the engine with the rotor pointing in the same general direction as the original distributor.

If equipped with vacuum advance, place the distributor in the engine with the rotor and vacuum chamber pointing in the same general direction as the original distributor.

If the old distributor did not have a vacuum chamber, place the distributor in the engine with the rotor pointing in the same general direction as the original distributor did, and point the vacuum chamber in a direction that will allow movement for timing purposes.

**NOTE: The distributor must be fully seated into the engine. It may be necessary to turn the oil pump drive, or turn the engine crankshaft in the direction of rotation two full turns until the timing mark lines up (again) with the TDC mark on the timing tab to allow the distributor to seat fully.**

### Step 3

Rotate the distributor housing in the opposite direction of rotor rotation until the nearest tooth of the reluctor is pointing directly at the center of the metal pole on the magnetic pickup. This will generally put timing close enough for starting purposes. Put the distributor hold down clamp in place and tighten slightly, leaving it loose enough to turn the distributor. Make a mark on the distributor housing where the rotors points.

### Step 4

Install the distributor cap. Remove the spark plug on the original distributor cap the engine timing is set from and install it onto the distributor cap post above the mark on the distributor housing where the rotor had pointed. Continue installing each remaining spark plug wire, one at a time, from the original distributor cap to the distributor cap in the same sequence.

**Note: It may be necessary to purchase and install distributor boots and terminals for the spark plug wires to correctly fit the distributor cap.**

### WIRING PROCEDURE

Make sure that your vehicle is equipped with an ignition ballast (or loom resistance wire) in the wire between the ignition switch and the coil (+) terminal. One easy way to find the ignition ballast resistor is to check the service manual for your vehicle. Example: Vehicles with a Ford TFI or Delco HEI require adding an ignition ballast resistor in the wire from the ignition switch. If you find your vehicle is not equipped with an ignition ballast resistor, install a Mallory Ignition Ballast Resistor, Part # 700 in the series in the wire from the ignition switch. There are three wires coming from the distributor that must be connected using the distributor wire harness furnished (see figures 1 and 2).

**RED WIRE:** If you are using loom resistance wire, connect to the coil (+) terminal. If you are using a ballast resistor, connect to 12 volt side of ballast resistor.

**GREEN WIRE:** Connect to the coil (-) terminal.

**BROWN WIRE:** Connect to engine block ground. Clean away any grease, oil and paint from the mounting surface before the connection is made.

**NOTE: If a HYFIRE® Electronic Ignition Control or other aftermarket ignition control is being used, connect the distributor according to the instructions supplied with the ignition control.**

### ADDITIONAL CONNECTIONS

Vacuum advance applications: Connect original vacuum hose to the distributor vacuum chamber. Replace the hose if cracked, damaged or if it is not long enough. If the previous distributor was not equipped with vacuum advance, correct a vacuum hose to a ported vacuum outlet in the carburetor.

Tachometer operation: Connect wire or wires as recommended by the actual tachometer manufacturer.

### STARTING ENGINE

**Caution: Be sure all tools, wires and miscellaneous objects are clear of moving engine parts and extreme heat before starting the engine.**

### Step 1

Recheck all wires and connections to make sure they are correct. Check and clean or replace spark plugs. If replacing spark plugs, use types recommended by the engine manufacturer. Vacuum advance applications: Disconnect the vacuum hose to distributor vacuum chamber at the carburetor and temporarily plug this carburetor fitting.

### Step 2

Connect a timing light. Find the area with the best view of the timing marks.

### Step 3

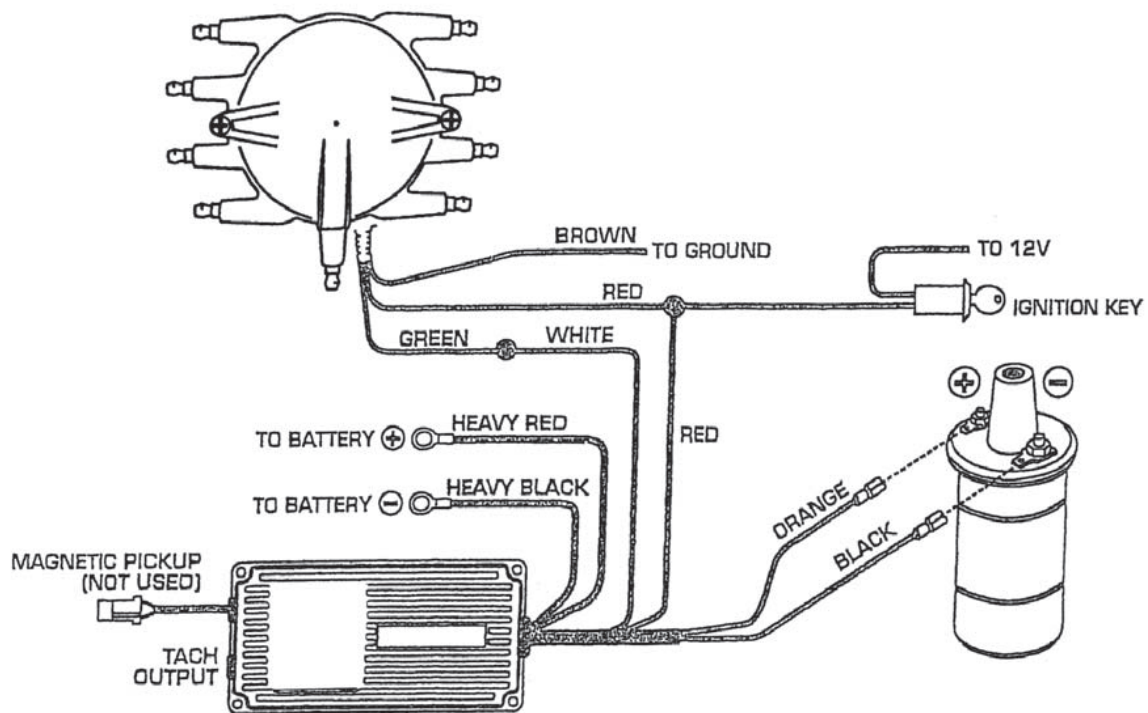
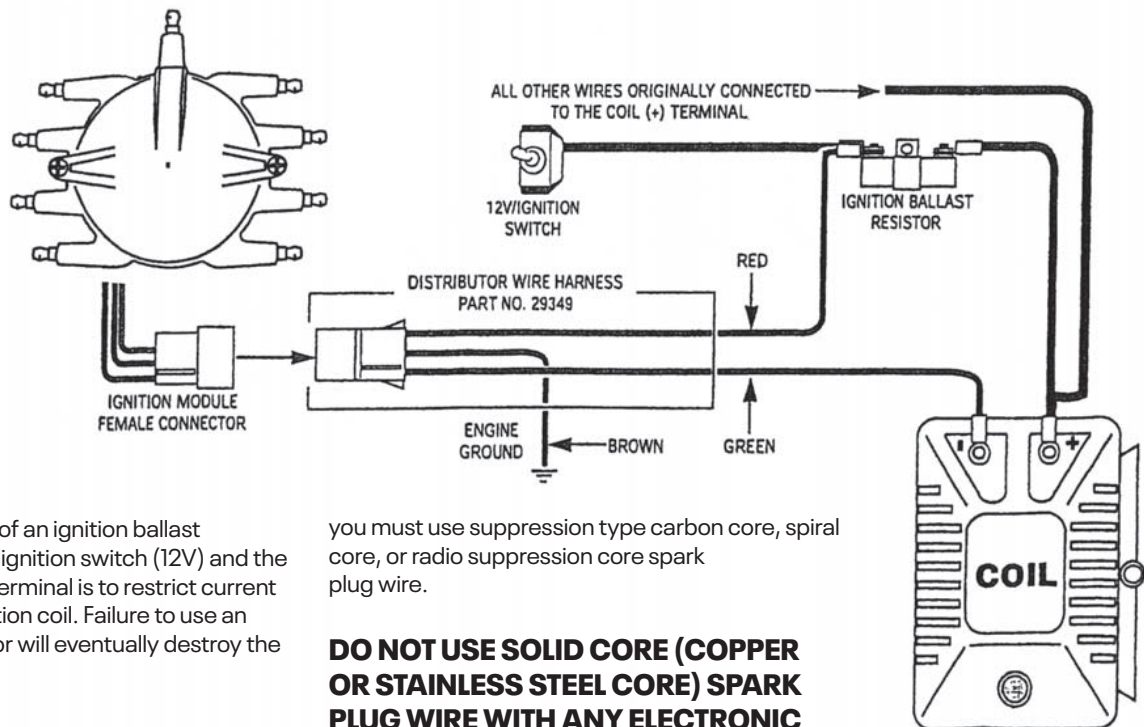
Start the engine. If it fails to start, rotate the distributor in small increments clockwise or counterclockwise until the engine starts. Do not exceed more than ten degrees of distributor housing rotation in either direction.

### Step 4

Set timing as recommended by engine manufacturer then tighten distributor hold down clamp. Make sure timing is still correct. If timing has moved, repeat this procedure.

### Step 5

Vacuum advance applications: Reconnect the vacuum hose between the distributor vacuum chamber and the carburetor.

**FIGURE 1****Wiring Diagram Using Aftermarket Ignition Control****FIGURE 2****Wiring Diagram Using Ignition Ballast Resistor**

**NOTE:** The purpose of an ignition ballast resistor between the ignition switch (12V) and the ignition coil positive terminal is to restrict current flow through the ignition coil. Failure to use an ignition ballast resistor will eventually destroy the ignition module.

**Exception:** If your vehicle is equipped with a HYFIRE® Electronic Control or similar aftermarket ignition control, use the wiring procedures stated in the instructions included with the ignition control. To prevent false triggering and possible premature ignition failure,

you must use suppression type carbon core, spiral core, or radio suppression core spark plug wire.

**DO NOT USE SOLID CORE (COPPER OR STAINLESS STEEL CORE) SPARK PLUG WIRE WITH ANY ELECTRONIC IGNITION SYSTEM.**

# IMPORTANT

**DISCLAIMER** In an effort to offer our customers low prices, quick service and great value, Speedway Motors reserves the right to change suppliers, specifications, colors, prices, materials without notice. Prices and policies that were current and in effect at the time of printing are also subject to change without notice. Quantities are limited on some items. Any unauthorized use of this catalog including words, photos or drawings is prohibited. Speedway is not responsible for any typographical errors, printing errors or misinterpretations

**WARRANTY DISCLAIMER** Purchasers understand and recognize that racing parts, specialized street rod equipment, and all other parts and services sold by Speedway Motors, Inc. are exposed to many and varied conditions due to the manner in which they are installed and used. Except for certain limited warranties, if any, set forth in Speedway Motors, Inc.'s current catalog with respect to the products and/or parts thereof identified on your invoice, each product, and each part thereof, is sold "as is", and "with all faults" and Speedway Motors, Inc. makes no warranties either expressed or implied, written or oral, with regard such products and services including, without limitation, any warranty of merchantability or fitness for a particular purpose. Without limiting the foregoing, there is no warranty expressed or implied as to whether the goods sold hereby will protect purchasers or ultimate end-users of such products and parts from injury or death. In no event shall Speedway Motors, Inc. be liable for any special, incidental or consequential damages, or any other damages whatsoever arising out of or connected with the use or misuse of the products and each part thereof. Purchasers acknowledge and agree that no person, entity or agent of Speedway Motors, Inc. has any authority to make any statement contrary to this disclaimer and that any warranty statements or representations allegedly made on behalf of Speedway Motors, Inc. by any such person, entity or agent are void. Purchasers are relying solely on their own skill and judgment to select, purchase and use suitable products and assume all responsibility and risk with regard thereto. Some local laws prohibit the use of utility jugs, funnels and barrel pumps for dispensing fuel. Please check your own state for more information, regulations or further direction in your use of the utility jugs, funnels and barrel pump described in Speedway's catalogs or on Speedway Motors websites. Some parts in this catalog are not legal for sale or use in California. Items sold in this catalog are for racing vehicles which may never be used on a highway. The use of manufacturer's names and symbols are for reference purposes only.

**DAMAGE CLAIMS** Please inspect all packages upon delivery and in the presence of the delivery driver when possible. The driver must note any visible damage and provide procedures for handling damage claims. To allow for a claims process, please retain original box, packing material and damaged merchandise. Contact Speedway Motors for instructions regarding damage claim within 5 days of receipt. Speedway Motors assumes no liability after this period.

**SHORTAGES** Please check the contents of your delivery to ensure that all parts ordered are received. Refer to your invoice to cross check all items received and inspect all packing materials for contents of small items. Retain original shipping box and packing materials. Orders may be split into multiple boxes which can be delivered on different days. Contact Speedway Motors for instructions regarding shortage claim within 5 days of receipt. Speedway Motors assumes no liability after this 5 day period.

**REFUSALS** All refused packages will be billed the freight to and from the destination and refused COD orders will be billed a 15% restocking charge plus freight to and from destination.

**WARRANTY CLAIMS** If the item is used or installed and a warranty claim request is submitted, warranty work is done by the manufacturer and may take up to 30 days for processing. Speedway Motors will be required to follow the manufacturer's warranty instructions to allow for a credit refund or exchange when specified.

**RETURNS** We want you to be satisfied with your purchase. If you are not satisfied, you may return your new, unused item within 60 days for refund or exchange.

All exchanged or returned merchandise must be in original factory condition with no modifications or alterations. Returned merchandise must include original packaging materials, warranty cards, manuals, instructions, etc. If the returned item requires repackaging, your refund / exchange will be subject to a repackaging charge. Return/Exchange transactions less than \$99 are excluded from the free shipping offer.

**HOW TO RETURN AN ITEM** Please re-pack the item in a sturdy box, include a copy of your invoice and completed return form. Returns must be shipped prepaid. CODs are not accepted. Shipping costs for exchanged merchandise will be charged to your credit card.

Items that are returned after 60 days are subject to a 15% restocking charges. Fiberglass items returned will be subject to a 15% restocking charge. We are unable to accept returns on electrical parts, video tapes, DVD's, books, special order or closeout merchandise.

**BRAKE INSTALLATION ALERT** The selection and installation of brake components should only be done by personnel experienced in the proper installation and operation of braking systems. The installer must use his/her own discretion to determine the suitability of all brake components and brake kits for every particular application. Speedway Motors, Inc. makes no warranties either expressed or implied including any warranty of merchantability or fitness for a particular purpose, other than those contained in its current catalog or website with respect to the goods identified on the face of the invoice. There is no warranty expressed or implied as to whether the goods sold hereby will protect the purchaser or ultimate user of such goods from injury or death.

**EXHAUST INSTALLATION ALERT** Exhaust systems and other component surface finishes are not permanent. Coatings, paint and other factory supplied cosmetic treatments are only intended to protect from surface corrosion in an unused state. No returns are allowed after the parts have been installed. Header flanges must be clean and clear of paint and surface contaminants prior to mating to exhaust gaskets. Exhaust fasteners must be re-torqued after the initial heat cycle and regularly thereafter to ensure a proper gasket seal is maintained. Should you decide to install this exhaust product at your home, be warned that pleasure car or light duty truck/van "bumper" jacks are intended for emergency use only. The use of frame contact jack stands in conjunction with a floor jack as a main support is highly recommended to minimize accidental dropping of a vehicle while the installation proceeds. We recommend the use of a shop hoist if possible. Please use caution! Speedway Motors, Inc. makes no warranties either expressed or implied including any warranty of merchantability or fitness for a particular purpose, other than those contain in its current catalog or website with respect to the goods identified on the face of the invoice. There is no warranty expressed or implied as to whether the goods sold hereby will protect the purchaser or ultimate user of such goods from injury or death.

**CHECK LOCAL LAW** Some parts are not legal for sale or use in California on any pollution controlled motor vehicles. These items are legal in California for racing vehicles only which may never be used upon a highway. Check local law.

Find the above info on our website:

**SpeedwayMotors.com/Info/FAQ**

© 2019, Speedway Motors, Inc.

**Speedway Motors, Inc.**

P.O. Box 81906 • Lincoln, NE 68501

800.979.0122 • [SpeedwayMotors.com](http://SpeedwayMotors.com)

