



# WIRING DIAGRAM

+12V power source can either be connected on the inside of the passenger compartment or engine compartment and should be connected to a wire that turns on and off with the ignition.

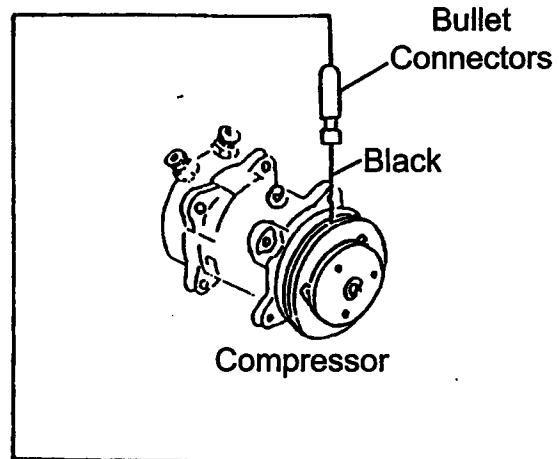

## PASSENGER COMPARTMENT

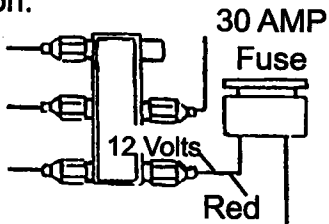