

## TEMPORARILY, PLUG THE MAIN BULKHEAD CONNECTOR FROM THIS KIT INTO THE MATING CONNECTOR ON THE DASH BULKHEAD CONNECTOR (LOCATED UNDER THE MASTER CYLINDER) Note: This will be unbolted to install the front light harness later.

**BULKHEAD CONNECTOR WIRES:** 

RED (12V BATTERY)

**PURPLE** (STARTER SOLENOID) DK BLUE (OIL PRESSURE SENDER) DK GREEN (WATER TEMP SENDER) PINK

(12V IGNITION)

WHITE (COIL-TACH)

TAN (BRAKE LIGHT SWITCH)

ALTERNATOR HEAVY RED (AMERICAN AUTOWIRE)

SMALL RED

REMAINING LOOSE WIRES:

PURPLE/WHITE (POWER) **PURPLE** (SIGNAL) (GROUND) YFI I OW

Route this wire to the Megafuse and cut to length. Use ring terminal, shrink tubing from 510476 kit. Connect as shown on page 1. Route to the starter solenoid and cut to length. Install rubber sleeve E and ring D. Connect to the 'S' terminal on solenoid.

Connect this wire to the oil pressure sending unit. Using terminal P or terminal C with connector A. Route this wire to the water temp switch, trim to length, install terminal C, and plug into connector K.

If using an HEI distributor, or after-market ignition system which requires a 12V feed:

Route the PINK wire to the coil and trim to length. Install terminal B and connector G, and plug into distributor cap BAT location. If using a points type ignition system which required reduced voltage:

Route the PINK wire to the ignition feed side of the ballast resistor. Connect the loose piece YELLOW wire to the R terminal on the starter and connect the other end to the coil side of the ballast resistor (not included). Connect a piece of left over

PINK wire to the coil side of the ballast resistor and route the to the distributor coil + side.

Route this wire to the coil and trim to length. If using an HEI distributor, terminal C and connector F are included for connection to the TACH location. If using a conventional coil, terminal P is included for connection to the negative side of coil.

Route this wire to the brake warning switch, trim to length, slide boot H onto wire, install terminal J, and pull boot H back up over terminal J.

Use the 6ga red wire, boot and ring terminals from the 510476 kit. Route the 6ga red wire from alternator to the Megafuse and cut to length. Connect as shown on page 1.


Send the ring terminal end of this wire through boot (as shown on sheet 1) and connect to the battery stud on alternator. Do not plug the connector into the alternator vet, the exciter wire will be added when the front light wires are install.

These wires will be used only if you are using electronic speedometer or a Turbo 400 transmission. Plug them into the main engine connector as shown on page 1 of this instruction sheet and route them as outlined below.

This wire is your 12 volt ignition feed for your 3 wire VSS, or your carb mounted turbo 400 kickdown switch. Connect accordingly. Route this wire to the vehicle speed sensor and connect to the signal lead.

Twist this wire with the purple signal lead wire above to assure proper shielding. Connect this wire to the vehicle speed sensor ground lead.

Once the main connector has all of it's wires plugged in, the connector cavities should be sealed with di-electric grease on the terminals. Also, to assure a moisture resistant seal, silicone can be applied to seal the outside of the connector.

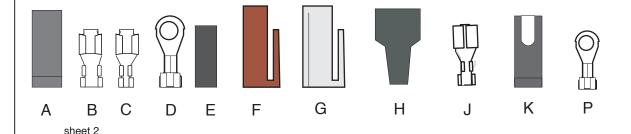

**ENGINE KIT** 

92969103 instruction rev 2.0 1/16/2018