

## **HOW TO FREE A STUCK PRESSURE VALVE**

- 1.** Remove the pressure line from the power steering pump.
- 2.** Remove the pressure fitting that the pressure line threads into.
- 3.** Push on the valve that is located behind the pressure fitting. It will be spring loaded, so you should feel it push back once it is moving.
- 4.** After the valve is moving freely reinstall the pressure fitting, then the pressure line.
- 5.** Follow bleeding instructions. Make sure ignition system is disabled when bleeding the system. If the vehicle is running the valve may get stuck again if air passes by it. If it does repeat this procedure.

If you have any questions, or need technical assistance please call  
Lares Corporation 1-800-334-5749.