


Joe HUNT Magnetos

Wiring Diagram for the Joe Hunt Hi-Performance Distributor

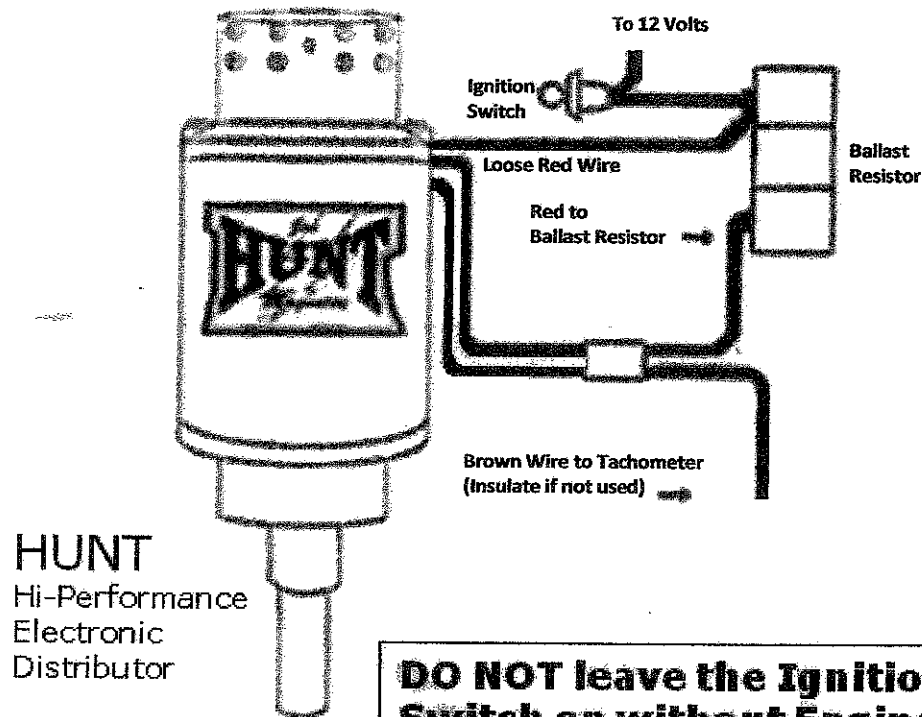

JOE HUNT MAGNETOS
11333 A Sunco Drive, Rancho Cordova, CA 95742
PHONE (916) 635-5387 FAX (916) 635-4058

INSTRUCTIONS FOR TIMING ENGINE USING A DEGREED CRANKSHAFT PULLEY

1. By any popular method find absolute T.D.C.
2. With the Hi-Performance Distributor out of the engine and the cap off, turn the rotor to #1 cylinder firing position.
3. Turn the engine in the opposite direction of rotation from T.D.C. at least 30 degrees past the desired advance. Now rotate engine in direction of rotation to desired setting before T.D.C.
4. Install the Hi-Performance Distributor in the engine. It may be necessary to rotate the Hi-Performance Distributor drive, oil pump shaft or intermediate gear to place the housing cap and wires in the correct physical relationship with the engine.
5. Time engine with timing light.
6. Lock Hi-Performance Distributor down with proper clamp.

NOTE: 20 Degrees at the Crankshaft.





Joe Hunt Magnetos
11333 A Sunco Drive
Rancho Cordova, CA 95742

(916) 635-5387 phone or
(800) HUNT-MAG
(916) 635-4058 fax

on the Web: www.huntmagnetos.com
E-mail: huntmagnetos@huntmagnetos.com

WIRING INSTRUCTIONS



CLOCKWISE ROTATION
HI-PERFORMANCE
DISTRIBUTOR AS VIEWED
FROM TOP.

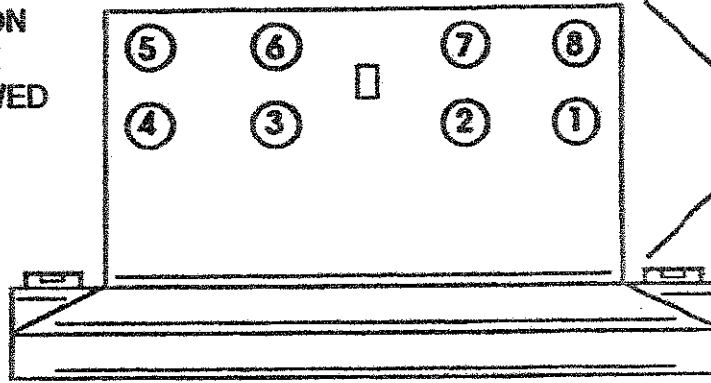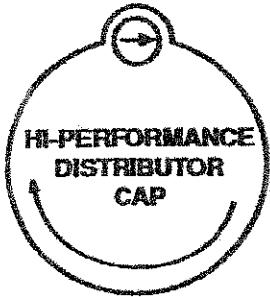

HI-PERFORMANCE
DISTRIBUTOR
FIRING ORDER

SIDE VIEW - 8 CYL.

COUNTER CLOCKWISE
ROTATION
HI-PERFORMANCE
DISTRIBUTOR AS VIEWED
FROM TOP.

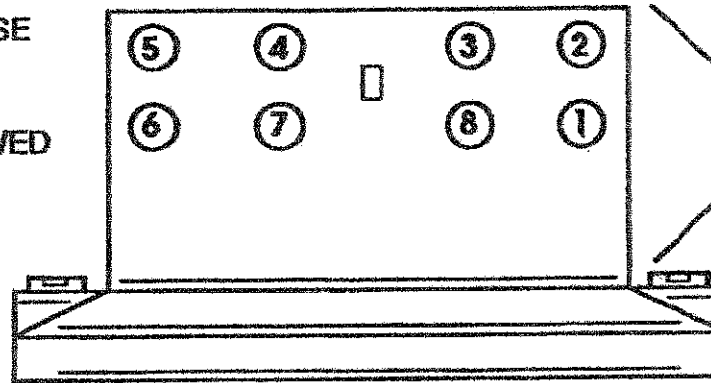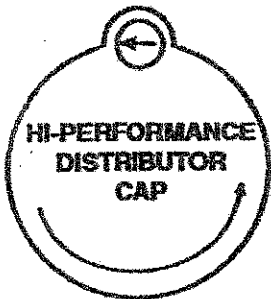

HI-PERFORMANCE
DISTRIBUTOR
FIRING ORDER

**NOTE: NUMBERS ON HI-PERFORMANCE
DISTRIBUTOR CAP INDICATE FIRING ORDER
OF HIGH PERFORMANCE DISTRIBUTOR ONLY.**

DIAGRAM

HI-PERFORMANCE DISTRIBUTOR FIRING ORDER (NUMBERS ON CAP)	1	2	3	4	5	6	7	8
WRITE YOUR ENGINE FIRING ORDER HERE								

WIRE ACCORDINGLY

NOTE: Follow same procedure for 4 CYL. Hi-Performance Distributor. Make sure wires are all the way to the end of holes in cap before tightening contact bolts in cap.

CAUTION

CAUTION

CAUTION

PLEASE READ and fully understand all information BEFORE attempting to install your Distributor.

- #1 The Ballast Resistor MUST be wired in line as per enclosed Wiring Diagram.**

- #2 Turn Ignition Switch OFF when Engine is not running. DO NOT leave key turned in the "On" position as this will cause Module damage.**

Failure to install unit correctly may damage Internal Distributor parts & VOID WARRANTY.

If you think you have a problem or warranty issue, please contact Joe Hunt Magnetos for technical assistance at (916)635-5387. DO NOT call Speedway Motors, Inc. regarding this issue.