

# INSTRUCTIONS

910-65042



## 2 1/16" Fuel Level Gauge Installation Instructions

### BEFORE YOU START

 
1. Install gauges only when engine is cool and ignition is off.
2. Disconnect negative (-) battery cable before installing gauges.
3. Refer to your vehicle's service manual for the location of sensor port, vacuum system, and / or charging system.

**WARNING:** Check and maintain your engine regularly, and be aware of any irregularities. Do not rely on the gauges as the only means of protection.

### GAUGE INSTALLATION



Install U-bracket over gauge mounting studs and secure with two nuts and flat washers provided.

DO NOT OVERTIGHTEN NUTS OR U-BRACKET MAY WARP.

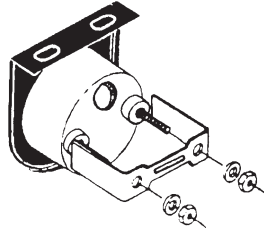

### GAUGE LIGHT CONNECTION

  1. Splice free end of light socket red lead wire into an existing lead from any vehicle instrument panel lamp.
2. Connect light socket black lead to a good chassis ground.

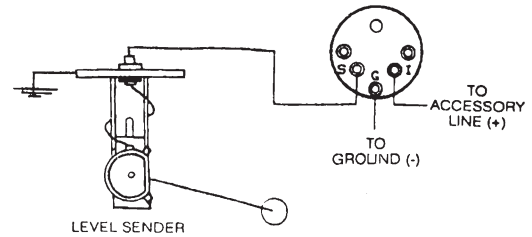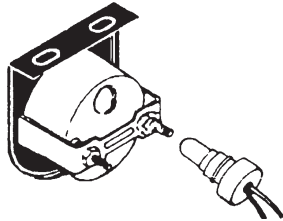

### GAUGE CONNECTION

1. Connect lead wires as shown.
2. Correct readings require a match of a proper fuel level sender
3. The required electric resistance value of the level sender is shown on the card of the gauge kits



Speedway Motors Inc.,  
P. O. Box 81906 Lincoln, NE 68501  
402-323-3200 [www.SpeedwayMotors.com](http://www.SpeedwayMotors.com)