



Pressure Relief and Flow Valve Installation:

Install spring first, then pressure relief valve, then last the flow valve. Torque flow valve to 46 ft./lbs.

This is the installation process for both aluminum and cast iron power steering pumps.