


Installation Instructions for AFCO Detented Weight Jack Plate P/N 20193D

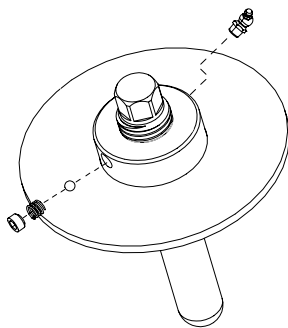

- 1) Weld plate into position on chassis. Make sure to orient the grease fitting and detent holes for easy access.
- 2) Install grease fitting into 1/4-28 threaded hole.
- 3) Install 20194-LW weight jack bolt (not included) into 20193D plate.
- 4) Place 7/32" ball into opposite hole as shown in picture.
- 5) Place spring into hole over top of the ball.
- 6) Apply thread locking compound to threads of set screw. Screw into hole until face is flush with surface. Adjust screw in or out until desirable "click" feel is achieved.




American Fabricating Co.
800-632-2320
www.AFCOracing.com

LIT-485 REV- 8/14/07

Installation Instructions for AFCO Detented Weight Jack Plate P/N 20193D



- 1) Weld plate into position on chassis. Make sure to orient the grease fitting and detent holes for easy access.
- 2) Install grease fitting into 1/4-28 threaded hole.
- 3) Install 20194-LW weight jack bolt (not included) into 20193D plate.
- 4) Place 7/32" ball into opposite hole as shown in picture.
- 5) Place spring into hole over top of the ball.
- 6) Apply thread locking compound to threads of set screw. Screw into hole until face is flush with surface. Adjust screw in or out until desirable "click" feel is achieved.

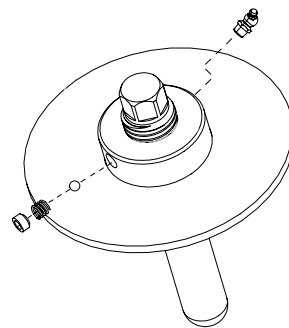


American Fabricating Co.
800-632-2320
www.AFCOracing.com

LIT-485 REV- 8/14/07

Installation Instructions for AFCO Detented Weight Jack Plate P/N 20193D



- 1) Weld plate into position on chassis. Make sure to orient the grease fitting and detent holes for easy access.
- 2) Install grease fitting into 1/4-28 threaded hole.
- 3) Install 20194-LW weight jack bolt (not included) into 20193D plate.
- 4) Place 7/32" ball into opposite hole as shown in picture.
- 5) Place spring into hole over top of the ball.
- 6) Apply thread locking compound to threads of set screw. Screw into hole until face is flush with surface. Adjust screw in or out until desirable "click" feel is achieved.

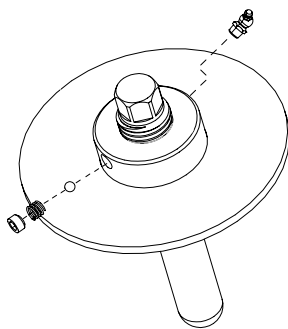


American Fabricating Co.
800-632-2320
www.AFCOracing.com

LIT-485 REV- 8/14/07

Installation Instructions for AFCO Detented Weight Jack Plate P/N 20193D



- 1) Weld plate into position on chassis. Make sure to orient the grease fitting and detent holes for easy access.
- 2) Install grease fitting into 1/4-28 threaded hole.
- 3) Install 20194-LW weight jack bolt (not included) into 20193D plate.
- 4) Place 7/32" ball into opposite hole as shown in picture.
- 5) Place spring into hole over top of the ball.
- 6) Apply thread locking compound to threads of set screw. Screw into hole until face is flush with surface. Adjust screw in or out until desirable "click" feel is achieved.

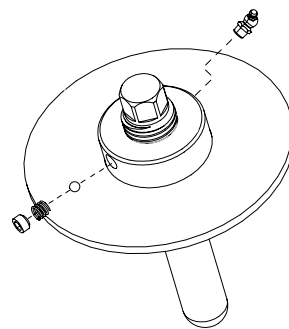


American Fabricating Co.
800-632-2320
www.AFCOracing.com

LIT-485 REV- 8/14/07

Installation Instructions for AFCO Detented Weight Jack Plate P/N 20193D



- 1) Weld plate into position on chassis. Make sure to orient the grease fitting and detent holes for easy access.
- 2) Install grease fitting into 1/4-28 threaded hole.
- 3) Install 20194-LW weight jack bolt (not included) into 20193D plate.
- 4) Place 7/32" ball into opposite hole as shown in picture.
- 5) Place spring into hole over top of the ball.
- 6) Apply thread locking compound to threads of set screw. Screw into hole until face is flush with surface. Adjust screw in or out until desirable "click" feel is achieved.

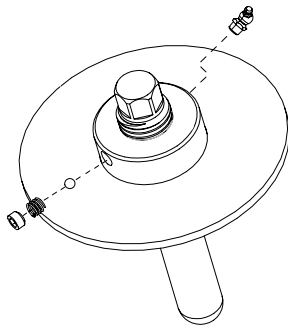


American Fabricating Co.
800-632-2320
www.AFCOracing.com

LIT-485 REV- 8/14/07

Installation Instructions for AFCO Detented Weight Jack Plate P/N 20193D



- 1) Weld plate into position on chassis. Make sure to orient the grease fitting and detent holes for easy access.
- 2) Install grease fitting into 1/4-28 threaded hole.
- 3) Install 20194-LW weight jack bolt (not included) into 20193D plate.
- 4) Place 7/32" ball into opposite hole as shown in picture.
- 5) Place spring into hole over top of the ball.
- 6) Apply thread locking compound to threads of set screw. Screw into hole until face is flush with surface. Adjust screw in or out until desirable "click" feel is achieved.

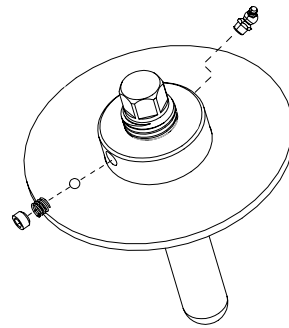

American Fabricating Co.
800-632-2320
www.AFCOracing.com

LIT-485 REV- 8/14/07