



200-530 INSTALLATION INSTRUCTIONS

96-00 Chevrolet/GMC C/K 7.4L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Thank you for selecting AIRAID.



Parts List

- (1) Power Plate
- (2) Gaskets
- (3) 6mm x 60mm Bolts
- (3) 6mm Flat Washers
- (2) Linkage Extension Plates
- (2) 5/16-18 x 3/4" Flat Head Screws

Tools List


- 10mm Socket
- 3/16 Hex Key
- Standard Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air cleaner assembly.
3. Using 10mm socket remove (3) nuts and studs from front side of throttle body. (**Ref. "C"**)
4. Remove air cleaner mounting stud and bolt from throttle linkage bracket and save.
5. Install (2) linkage extension plates using (2) 5/16 x 3/4" flat head screws. (**Ref. "D"**)
6. Install air cleaner mounting stud (**Refer to Step 4**) using 5/16-18" nut and lock washer.
7. Install power plate using (2) gaskets. (**Ref. "A"**)
 - A. Place one gasket between the throttle body and the power plate
 - B. Place second gasket between the power plate and intake manifold.
8. Replace nuts and studs (**Refer to Step 3**) with (3) 6mm x 60mm bolts, and 6mm flat washers.
10. Inspect & Test the throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjustment.
11. Reinstall air cleaner assembly using **Step 2** as an example.
12. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Ref. "B"- Throttle

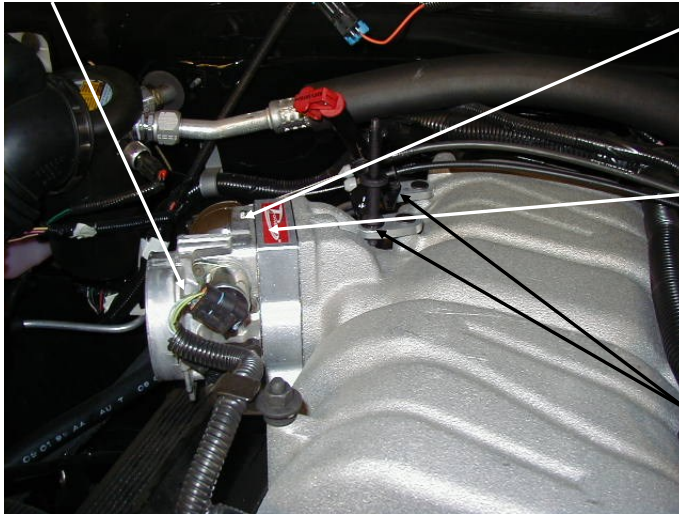

Ref. "C"- (3) 6mm x 60mm Bolts

Ref. "A"- (1) Power Plate

Ref. "D"- (2) Linkage Extension Plates
(2) 5/16-18 x 3/4" Flat Head Screws