



## Installation Instructions

**Part Number 310-618**

**Poweraid Spacer For**

**2007-12 Dodge Ram & Dakota**

**2007-10 Dodge Nitro**

**2007-09 Jeep Commander**

**2007-09 Jeep Grand Cherokee**

**2007-12 Jeep Liberty**

**2007-09 Mitsubishi Raider**

**3.7L V-6**

## Parts List

#1	Poweraid Spacer	x1
#2	Gasket	x1
#3	6mm x 50mm Hex Bolts	x4
#4	6mm Flat Washers	x4

## Tools Required For Installation


5/16" & 10mm Sockets

Ratchet & Extension

Flat Blade Screwdriver


Thank you for purchasing the Poweraid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Poweraid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

*Thank you for selecting AIRAID.*

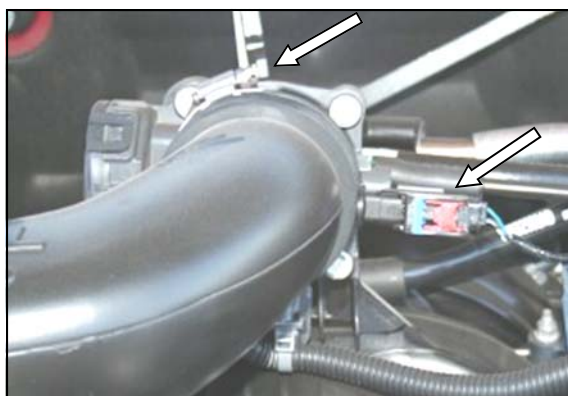


### **1. Disconnect the negative battery cable!**


**2007-10 Jeep Liberty/Dodge Nitro:** Using a 5/16" socket, loosen the hose clamp on the throttle body end of the factory intake tube. Disconnect the factory temperature sensor wiring harness by sliding the red tab back, and then pressing the black tab on the connector while sliding it off. Slide the factory intake tube off of the throttle body.

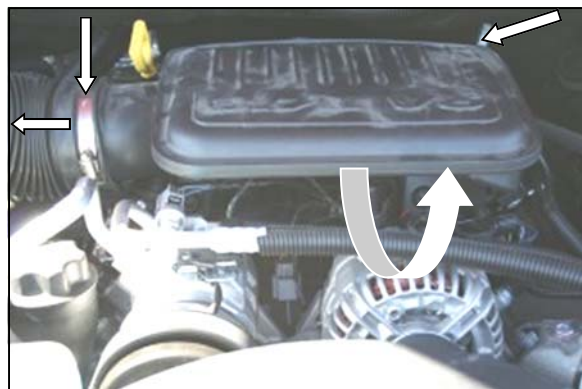

**2. All other listed vehicles:** Using a 5/16" socket, or flat blade screwdriver, loosen the hose clamp which secures the factory intake tube to the resonator box. Disconnect the factory temperature sensor wiring harness from the sensor in the resonator box. Slide the factory intake tube off of the resonator box. Remove the resonator box by pulling straight forward to release it from the throttle body and the grommet mounts. Save the resonator box for reuse.

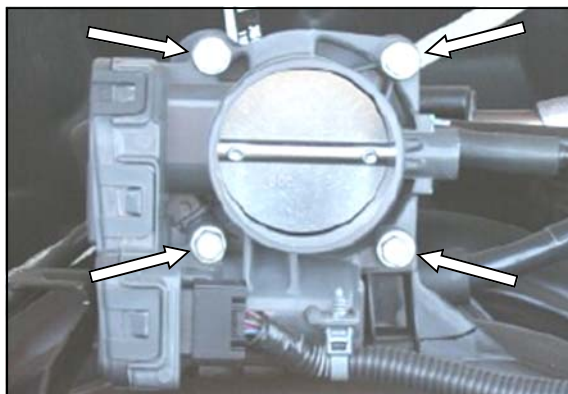

3. Using a 10mm socket, remove the four bolts that secure the throttle body to the intake manifold. Next, rotate the factory throttle body out of the way to allow access to the intake manifold. Make sure the factory blue gasket is seated in the groove on the intake manifold.

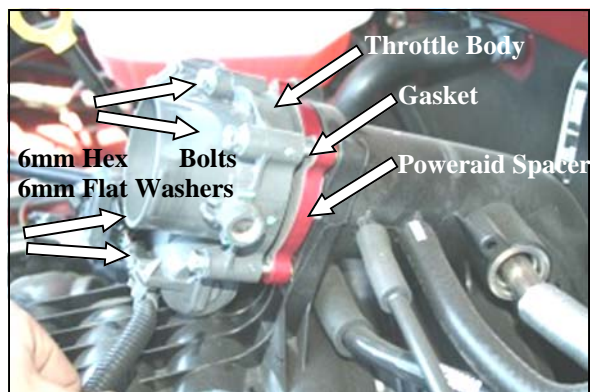

4. Install the Poweraid Spacer (#1) with the bore extending into the intake manifold. Install the Gasket (#2) between the Poweraid Spacer and the throttle body. Install four 6mm x 50mm hex bolts (#3) and 6mm flat washers (#4) through the throttle body, Poweraid Spacer, Gasket, and into the intake manifold. Using a 10mm socket, tighten all four throttle body bolts evenly, to the manufacturer's specifications. **Do Not Over Tighten The Bolts!** Reference picture below for spacer orientation.

5. Re-install the factory intake tube or resonator onto the vehicle. Re-connect the factory temperature sensor wiring harness. Tighten all hose clamps securely. **Re-connect the negative battery cable!**

*The sound of power...The "whistle" means its working!*



Example of proper spacer installation. Spacer must protrude into intake manifold and away from throttle body.



Instructions Revision  
04.21.16

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

Airaid. 1815 West Crest Lane. Phoenix AZ 85027 (800) 498-6951 [AiraidInfo@airaid.com](mailto:AiraidInfo@airaid.com) [www.airaid.com](http://www.airaid.com)