



1953-54 CHEVY CAR GAUGE PANEL INSTALLATION INSTRUCTIONS

Model 7042


Included mounting hardware:

Seven 10-32 x 1 1/4" Socket Set
Screws
Six 1/4" Z-Shaped Brackets
Seven 10-32 Nuts

Recommended tools:

3/8" socket (deep)
small ratchet w/ a short extension or
a small nut driver

1. The stock dash will need to be cut to allow the aluminum gauge panel to fit properly.
2. Insert the seven 10-32 studs into your stock bezel.
3. Install the gauges into the gauge panel.
4. Secure the aluminum gauge panel to your stock bezel to the stud located between the speedometer & 2 1/16" gauges (use the stud & a 10-32 nut only to secure these).
5. Secure the bezel to the dash using the 1/4" Z-brackets & 10-32 nuts. Start with the two on outside locations (facing the step away from the gauge panel). The bezel & panel should feel pretty snug at this point. Secure the 1/4" Z-brackets to the remaining 10-32 studs, using the 10-32 nuts for extra security.
6. Install the LED lights.
7. Install sending units and run wires to the dash. (please see instruction provided by the gauge manufacturer).

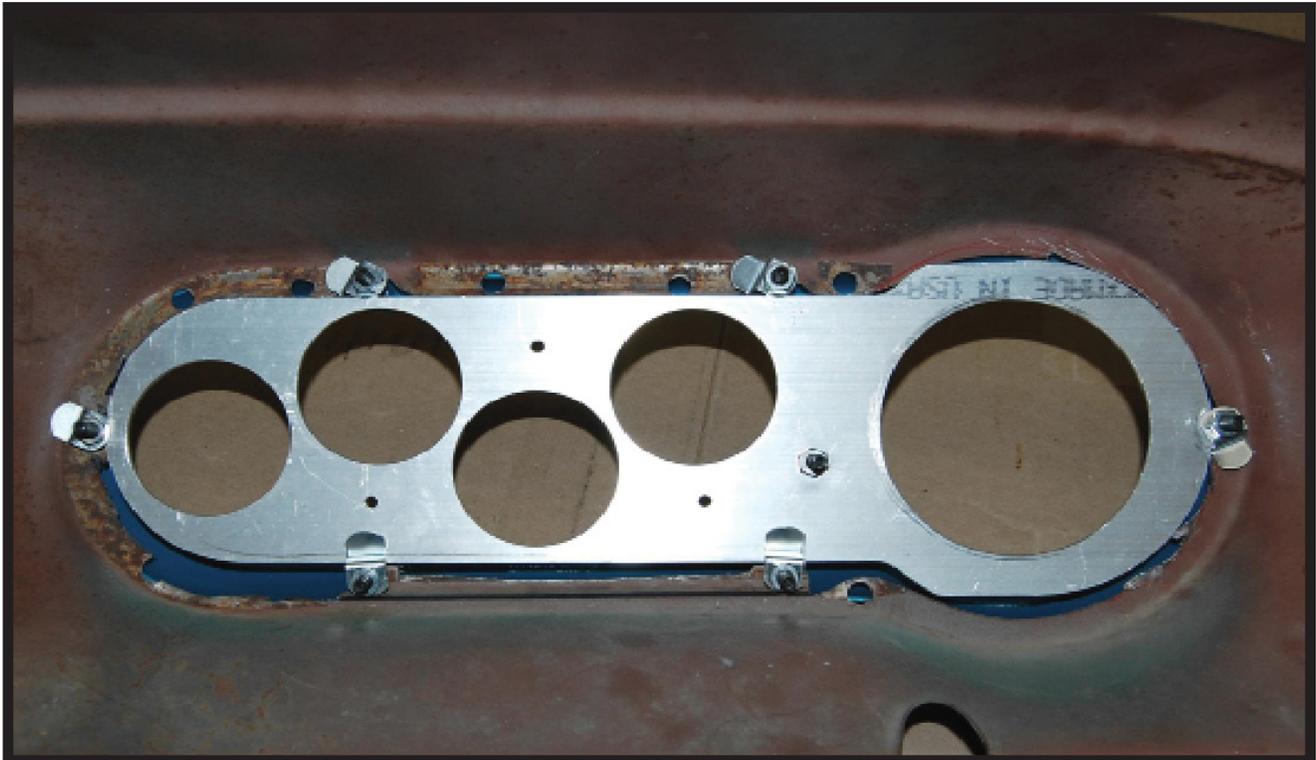

866-248-6356

www.autometer.com

2650-1864-77 12/7/15