



- PLEASE study these instructions carefully before installing your new camshaft. If you have any questions or problems, do not hesitate to call our Technical Hotline at: 1-800-416-8628.
- CAMSHAFT: Edelbrock Torker-Plus camshafts are ground specifically for use with the corresponding Torker II manifold. The Torker II manifold #5001, and Torker-Plus camshaft #5002, are designed to work as a team to give you better driveability and performance. They are dyno-matched and street-proven. For best results, use the Edelbrock manifold/camshaft package with the carburetor and headers we recommend. The Torker-Plus camshafts are designed for use with modified or high performance cylinder heads and valve train components only. Screw-in studs and H.P. adjustable rocker arms must be used.  
NOTE: Maximum performance is achieved only when the Edelbrock Torker II Power Package components are used with the following equipment:
  - Torker II manifold/camshaft/timing set/valve springs
  - Performer Series carburetor #1407
  - fuel delivery system of sufficient capacity
  - 1-3/4" headers
  - aftermarket/re-curved distributors
- IMPORTANT: This instruction sheet provides general installation guidelines which can affect your warranty. Read it carefully. It is not our intent to cover each detail of installation here; a step-by-step procedure manual would be far too lengthy. We want to caution you that installing a camshaft is a complicated procedure that requires a good general knowledge of automotive engines. If you are not confident that you can complete the camshaft installation successfully, we suggest you consider having it installed by an experienced mechanic.

CAUTION: Improper installation will result in LOW MILEAGE, POOR PERFORMANCE, COSTLY REINSTALLATION, and ENGINE DAMAGE.

**TO AVOID THESE PROBLEMS YOU MUST DO THE FOLLOWING:**

Carefully study and understand all instructions.

Examine the camshaft for possible shipping damage (if damaged contact your dealer immediately).

---

**PREPARATION CHECKLIST**

- **TOOLS AND EQUIPMENT**

Use the following checklist for items needed:

box and open-end wrenches  
socket set  
distributor wrench  
pliers (channel locks & hose clamp)  
screw drivers (regular and phillips)  
torque wrench  
hammer  
gasket scraper or putty knife  
timing light  
vacuum gauge  
rags  
water bucket  
harmonic balancer puller

- **HARDWARE & PARTS TO BUY**

Edelbrock Performer-Link True Rolling Timing Chain and Gear Set #7800 or Accu-Drive Gear Drive #7890  
Edelbrock Sure Seat Valve Springs, #5703  
Manifold bolt kit #8504  
Manifold gaskets #7201  
Edelbrock Gasgacinch, #9300  
engine gaskets- water pump, front cover, front cover seal, etc.  
pipe plugs, if needed  
RTV Silicon Gasket Sealer  
chalk  
paper and pencil  
radiator coolant  
teflon tape

---

**INSTRUCTIONS FOR ENGINE PARTS REMOVAL**

- **BEFORE CAMSHAFT INSTALLATION**

NOTE: Vehicles equipped with air conditioning must have the system evacuated by a certified technician prior to removing any A/C components. Failure to do so may violate local and/or federal laws.

1. Disconnect battery.
2. For ease of installation, keep all parts in some sort of order.  
WARNING: Do not remove radiator cap or radiator hose if engine is hot.

3. Drain radiator coolant, move fan shroud back and remove fan and spacer from water pump. On air conditioned vehicles, remove bolt, lower idler pulley and compressor-to- water pump mount. Disconnect hoses and brackets. Most vehicles will require radiator removal prior to cam removal. Remove water pump.
4. Disconnect all linkage from carburetor such as throttle, throttle springs, transmission, cruise control and automatic choke.
5. Tag and remove vacuum lines.
6. Remove valve covers.
7. Remove distributor cap and wires, rotate engine until rotor points towards number 1 terminal in cap and pointer on front cover is on Top Dead Center (TDC) and remove distributor. Note the approximate position of the vacuum advance canister in relation to the manifold to assist in getting the distributor properly located during re-installation.
8. Remove carburetor and intake manifold. Remove fuel pump.
9. Remove rocker arms and pushrods.
10. Remove hydraulic valve lifters.
11. Remove crankshaft pulley and, using a suitable puller, crankshaft dampener.
12. Loosen oil pan and remove front cover.  
NOTE: The front cover oil seal should be replaced before the front cover is re-installed.
13. Rotate engine until timing marks are aligned as shown in Figure 2.
14. Remove cam sprocket bolts. Slide sprocket and timing chain forward to remove.
15. Remove camshaft. Using appropriate gear puller, remove crank sprocket.

- **VALVE SPRINGS**

**CAUTION: WARNINGS ABOUT YOUR WARRANTY**

In order for this Torker-Plus cam and lifter kit to be covered under ANY WARRANTY you MUST use the correct Edelbrock Sure Seat Valve Springs. Failure to install new Edelbrock valve springs with your new Torker-Plus cam could cause the cam lobes to wear excessively and could cause additional engine damage.

1. This camshaft is designed to function with Edelbrock Sure Seat valve springs #5703. Do not use dual valve springs with this camshaft. Special H.P. retainers may be necessary with your installation for proper spring height. Do not use rotator type valve springs or retainers for this application.

- **LIFTERS**

1. New lifters must be used with new camshaft. Use only the high rev lifters supplied with this kit.
2. Check to be sure that all lifters fit freely in the lifter bores.

- **INSTALLATION INSTRUCTIONS**

1. Coat cam lobes and bottoms of each lifter with MoS2 lube (supplied) to prevent cam lobe and lifter wear from occurring during initial start-up.
2. Install new camshaft with new sprockets, timing chain and lifters.

**CAUTION:** Use Edelbrock Performer-Plus True Rolling Timing Chain and Gear Set #7800 or Accu-Drive gear drive set #7890. Do not use late model timing chain & gear sets that are designed in a retarded position and are not recommended for this camshaft installation. Edelbrock Timing Sets feature three keyways for specific timing selection. Use locking compound material on the bolt threads holding timing gear to cam. Torque to factory recommendations specified in motor repair manual (20 ft./lbs.).

Install camshaft with timing marks lined up as recommended by factory specifications. See Figure 2.

When using Performer-Plus Timing Chain and Gear Sets (7800 series) with Edelbrock cam and lifter kits, straight up timing alignment is achieved. If any other timing gear set is used, it is necessary to check cam position for correct timing alignment. This requires indexing the camshaft with a degree wheel to verify timing alignment. O.E.M. or non-Edelbrock timing gear sets are not recommended for use with Edelbrock camshafts.

- **INSTALLING PUSHRODS AND ROCKER ARMS**

High performance pushrods and rocker arms and studs are recommended for this installation.

After the cam is installed and timed correctly (see Figure 2), it will be necessary to check each pushrod for correct lifter preload.

- **VALVE ADJUSTMENT**

1. Turn the engine over until cylinder #1 is in firing position. Verify that the #1 piston is at TDC and that both lifters are in the down position. You may now install the adjusting nut on both the intake and exhaust rocker arms for cylinder #1 and tighten them to zero lash, then tighten the nuts a further quarter turn to achieve the proper pre-load.
2. Rotate the crankshaft 90° so that the next cylinder in the firing order (#8) is at TDC and repeat the adjustment process.
3. The above procedure assures correct hydraulic lifter preload. Repeat this procedure for each of the other six cylinders in the firing order: (1-8-4-3-6-5-7-2)
4. Re-install front cover, fuel pump, water pump, and oil pan using new gaskets.
5. Install intake manifold using new intake gasket set and torque manifold bolts to 25 ft./lbs.
6. Install crankshaft dampener and torque to factory specifications.

- **INSTALLING DISTRIBUTOR AND TIMING ENGINE**

NOTE: Before installing your distributor, check the gear drive on the distributor and oil pump for any signs of wear. If worn, be sure to replace with new or you may wear out your camshaft prematurely. This is especially true when rebuilding your engine and a high performance oil system is used, which generates a heavier load on the camshaft gear system. Edelbrock camshafts are designed to use OEM-type gears only.

1. Turn the engine over in the direction of rotation until the No. 1 intake valve closes and continue until the pointer on the front cover is approximately 5 degrees BTDC.
2. Re-install the distributor with the rotor pointing towards No. 1 terminal in the cap, and with the vacuum advance canister in its original position.
3. Lightly tighten the hold-down clamp so that the distributor can still be turned to determine final setting using a timing light with the engine running.
4. Replace valve covers, carburetor linkage and remaining vacuum and electrical connections.
5. Re-install air conditioner, if so equipped.
6. Refill radiator with coolant and re-connect battery.
7. Double check all connections, fuel lines, etc. before starting engine.

- **CAMSHAFT/LIFTER RUN-IN**

CAUTION: Change the engine oil and filter before start-up and again after initial break-in. Do not allow the engine to run under 2000 rpm for the first half-hour. Vary engine speed between 2000 and 2500 rpm. Slow idle speeds may result in severe cam and lifter wear.

1. Start the engine and bring to break-in rpm.

**IMPORTANT INSTRUCTIONS AFFECTING YOUR WARRANTY**

- **CAM LOBE WEAR-** Cam lobe wear is almost non-existent unless mismatched parts are used or installation of the cam and lifters is done improperly. Most cam damage is caused by the timing gear coming loose due to improper torque on bolt. Bolts holding gear to camshaft should be torqued carefully and a locking compound applied to threads of bolts.
- **CAM GEARS AND CAMSHAFT END PLAY-** If cam gear becomes loose, the cam will slide back in the block, causing the lifters to hit the lobes next to them and also the cam bearing journals. If the engine is run after this happens, the bottom of the lifters and the sides of the lobes will become clipped.

When installing a camshaft, it is always important to check for proper operating clearances, especially when high performance components are used. Things to look for that can cause failure and damaged parts are as follows:

1. Improper valve-to-piston clearance (this should be no less than 0.080").
2. Rocker arm stud slot clearance (both ends; valve closed and open).
3. Proper spring settings (see dimensions with spring instruction sheet; correct dimensions mean maximum performance and longer engine life).

- **SPECIAL INSTRUCTIONS**

With the Edelbrock manifold and camshaft package plus a header installation, a carburetor jet change may be required for best performance. Due to the varied applications of year and model of vehicles, no one combination could suffice for all installations. The following procedure is only a guideline and in many cases, the manufacturing specifications for recommended carburetors or timing may be best.

- **IGNITION TIMING**

Ignition timing for this package may vary with each application. A good starting figure would be between 10 degrees to 14 degrees initial timing at idle with vacuum advance disconnected. Total advance should not exceed 32 degrees to 34 degrees with initial and centrifugal weights combined and should be at full advance at 3000-3500 rpm. After timing is adjusted, re-connect the vacuum advance line. NOTE: The best combination for any particular vehicle or application must be determined by trial and error using the above information as a guideline.

- **HEADERS**


For best performance, headers are recommended. For this application, they should be 1-3/4" diameter, approximately 31" long and terminating into a 3" collector. The remainder of the exhaust system should consist of dual exhaust and tail pipes, at least 2" diameter with low back-pressure mufflers.

- **WARNING**

In order for this Torker-Plus cam and lifter kit to be covered under ANY WARRANTY you MUST use the correct Edelbrock Sure Seat Valve Springs. The end flap or label from your Sure Seat Valve Spring box must be sent in with your camshaft warranty card.

Failure to install new Edelbrock Sure Seat Valve Springs with your new Torker-Plus cam and lifter kit could cause the cam lobes to wear excessively and could cause additional engine damage. IF YOU HAVE ANY QUESTIONS ABOUT THIS APPLICATION, PLEASE CONTACT OUR TECHNICAL DEPARTMENT IMMEDIATELY.


- **CAUTION:** Use Edelbrock Performer-Link Timing Chain and Gear Set #7800 or Accu-Drive gear drive #7890. Do not use late model timing chain and gear sets that are designed for emission-controlled engines. These timing sets are machined in a retarded position and are not recommended for this camshaft installation. Edelbrock Timing Sets feature three keyways for specific timing selection.

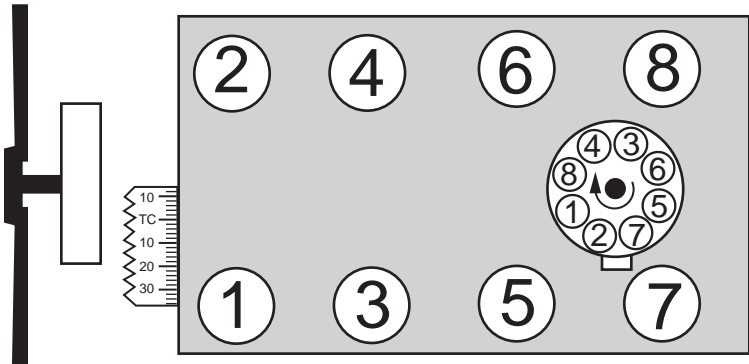

**Figure 1-** Chevrolet 265-400 c.i.d. V8

Firing Order 1-8-4-3-6-5-7-2

Turn distributor counter-clockwise to advance timing.

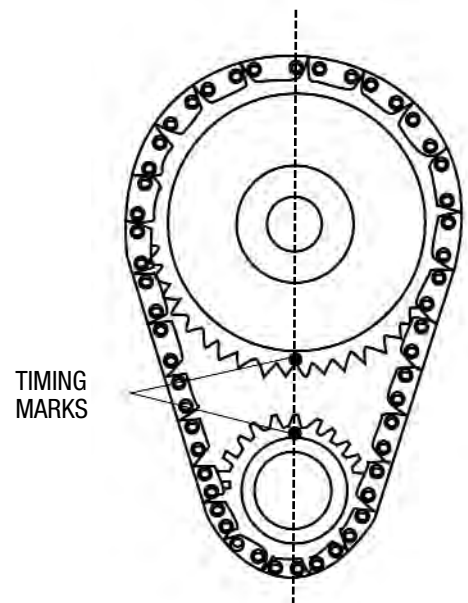

**Figure 2-** Timing Chain Sprocket Alignment

- CAMSHAFT: Torker-Plus Hydraulic
- CATALOG #5002
- ENGINE: Chevrolet 265-400 c.i.d. V8
- RPM RANGE: 1500-6500
- CAUTION: Do not use dual valve springs.  
Use only recommended Edelbrock Sure Seat Valve Springs #5703.  
Use stock ratio rocker arms only.



Duration at .006" Lift:	Intake 292°	Exhaust 300°
Duration at .050" Lift:	Intake 232°	Exhaust 234°

Lift at cam:	Intake .325"	Exhaust .325"
Lift at valve:	Intake .488"	Exhaust .488"

Timing at .050 Lift:	Open	Close
Intake	10° BTDC	42° ABDC
Exhaust	47° BBDC	7° ATDC
Intake Centerline: 106°	Lobe Separation: 108°	

- CAUTION: Use Edelbrock Performer-Link Timing Chain and Gear Set #7800 or Accu-Drive gear drive #7890. Do not use late model timing chain and gear sets that are designed for emission-controlled engines. These timing sets are machined in a retarded position and are not recommended for this camshaft installation. Edelbrock Timing Sets feature three keyways for specified timing selection. Use "0" position for most applications.

©Edelbrock Corp.  
Catalog #5002

Brochure #63-5002C  
Rev. 12/08 - AJ/mc

- CAMSHAFT: Torker-Plus Hydraulic
- CATALOG #5002
- ENGINE: Chevrolet 265-400 c.i.d. V8
- RPM RANGE: 1500-6500
- CAUTION: Do not use dual valve springs.  
Use only recommended Edelbrock Sure Seat Valve Springs #5703.  
Use stock ratio rocker arms only.



Duration at .006" Lift:	Intake 292°	Exhaust 300°
Duration at .050" Lift:	Intake 232°	Exhaust 234°

Lift at cam:	Intake .325"	Exhaust .325"
Lift at valve:	Intake .488"	Exhaust .488"

Timing at .050 Lift:	Open	Close
Intake	10° BTDC	42° ABDC
Exhaust	47° BBDC	7° ATDC
Intake Centerline: 106°	Lobe Separation: 108°	

- CAUTION: Use Edelbrock Performer-Link Timing Chain and Gear Set #7800 or Accu-Drive gear drive #7890. Do not use late model timing chain and gear sets that are designed for emission-controlled engines. These timing sets are machined in a retarded position and are not recommended for this camshaft installation. Edelbrock Timing Sets feature three keyways for specified timing selection. Use "0" position for most applications.

©Edelbrock Corp.  
Catalog #5002

Brochure #63-5002C  
Rev. 12/08 - AJ/mc

- CAMSHAFT: Torker-Plus Hydraulic
- CATALOG #5002
- ENGINE: Chevrolet 265-400 c.i.d. V8
- RPM RANGE: 1500-6500
- CAUTION: Do not use dual valve springs.  
Use only recommended Edelbrock Sure Seat Valve Springs #5703.  
Use stock ratio rocker arms only.



Duration at .006" Lift:	Intake 292°	Exhaust 300°
Duration at .050" Lift:	Intake 232°	Exhaust 234°

Lift at cam:	Intake .325"	Exhaust .325"
Lift at valve:	Intake .488"	Exhaust .488"

Timing at .050 Lift:	Open	Close
Intake	10° BTDC	42° ABDC
Exhaust	47° BBDC	7° ATDC
Intake Centerline: 106°	Lobe Separation: 108°	

- CAUTION: Use Edelbrock Performer-Link Timing Chain and Gear Set #7800 or Accu-Drive gear drive #7890. Do not use late model timing chain and gear sets that are designed for emission-controlled engines. These timing sets are machined in a retarded position and are not recommended for this camshaft installation. Edelbrock Timing Sets feature three keyways for specified timing selection. Use "0" position for most applications.

©Edelbrock Corp.  
Catalog #5002

Brochure #63-5002C  
Rev. 12/08 - AJ/mc

- CAMSHAFT: Torker-Plus Hydraulic
- CATALOG #5002
- ENGINE: Chevrolet 265-400 c.i.d. V8
- RPM RANGE: 1500-6500
- CAUTION: Do not use dual valve springs.  
Use only recommended Edelbrock Sure Seat Valve Springs #5703.  
Use stock ratio rocker arms only.



Duration at .006" Lift:	Intake 292°	Exhaust 300°
Duration at .050" Lift:	Intake 232°	Exhaust 234°

Lift at cam:	Intake .325"	Exhaust .325"
Lift at valve:	Intake .488"	Exhaust .488"

Timing at .050 Lift:	Open	Close
Intake	10° BTDC	42° ABDC
Exhaust	47° BBDC	7° ATDC
Intake Centerline: 106°	Lobe Separation: 108°	

- CAUTION: Use Edelbrock Performer-Link Timing Chain and Gear Set #7800 or Accu-Drive gear drive #7890. Do not use late model timing chain and gear sets that are designed for emission-controlled engines. These timing sets are machined in a retarded position and are not recommended for this camshaft installation. Edelbrock Timing Sets feature three keyways for specified timing selection. Use "0" position for most applications.

©Edelbrock Corp.  
Catalog #5002

Brochure #63-5002C  
Rev. 12/08 - AJ/mc