



LCU CONNECTOR SOCKETS

Part #91189

INSTALLATION AND ASSEMBLY INSTRUCTIONS


Please study these instructions carefully before assembling your QwikData2 LCU connectors. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628**, 7 am to 5 pm, Monday-Friday, Pacific Standard Time or e-mail us at **QD2@edelbrock.com**.

SUGGESTED CRIMP TOOL PART # PA1440 MANUFACTURED BY PALADIN TOOLS

ASSEMBLY INSTRUCTIONS:

PUSH LARGE TAB IN SO TWO SMALL TABS MOVE TO UNLOCKED POSITION.
CRIMP WIRE TO PIN AND INSERT INTO BACK OF PLUGS. PUSH DOWN TWO
TABS TO LOCK PINS IN CONNECTOR.

LCU CONNECTOR

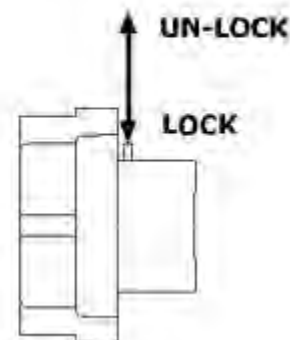

Edelbrock Corporation • 2700 California St. • Torrance • CA 90503

Tech Line: 800-416-8628

Office: 310-781-2222

Part #91189
Rev. 04/10 - MH/aj/mc

©2010 Edelbrock Corporation
Brochure #63-91189



LCU CONNECTOR SOCKETS

Part #91189

INSTALLATION AND ASSEMBLY INSTRUCTIONS


Please study these instructions carefully before assembling your QwikData2 LCU connectors. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628**, 7 am to 5 pm, Monday-Friday, Pacific Standard Time or e-mail us at **QD2@edelbrock.com**.

SUGGESTED CRIMP TOOL PART # PA1440 MANUFACTURED BY PALADIN TOOLS

ASSEMBLY INSTRUCTIONS:

PUSH LARGE TAB IN SO TWO SMALL TABS MOVE TO UNLOCKED POSITION.
CRIMP WIRE TO PIN AND INSERT INTO BACK OF PLUGS. PUSH DOWN TWO
TABS TO LOCK PINS IN CONNECTOR.

LCU CONNECTOR

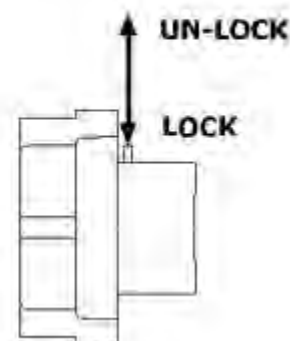

Edelbrock Corporation • 2700 California St. • Torrance • CA 90503

Tech Line: 800-416-8628

Office: 310-781-2222

Part #91189
Rev. 04/10 - MH/aj/mc

©2010 Edelbrock Corporation
Brochure #63-91189