

# Installation Instructions

## 1964-1/2 to 1968 MUSTANG SWAY BAR

*Please read these instructions completely  
BEFORE starting your installation!*

Your *HEIDTS* Hot Rod Shop MUSTANG SWAY BAR contains the following items:

- |                  |                              |
|------------------|------------------------------|
| 1) Sway Bar      | 4) Hex Nuts & Lock Washers   |
| 2) Rubber Mounts | 1) End Link Kit              |
| 2) U-Brackets    | 2) Link Spacers              |
| 2) U-Bolts       | 2) 3/8-16 x 5-1/2" Hex Bolts |
| 2) Mount Spacers |                              |

To install your Sway Bar for your Mustang, drill two 7/16" dia. Holes in the underside of each rail as shown in Figure 1. Install the U-bolts to mount the sway bar up into the frame by inserting the U-bolt up through one of the 7/16" holes, across and down through the other one. Slip the bushings and mounting brackets onto the sway bar and attach the sway bar to the rails using the spacers, nuts and lock washers supplied. Attach the links to the ends of the sway bar and to the lower control arms using the 3/8-16 x 5-1/2" Hex Bolts and Link Spacers as shown in Figure 2. Use the SB-012 Bracket Kit from *HEIDTS* for Tubular Arms, use the SB-010 Bracket Kit for Economy Arms.

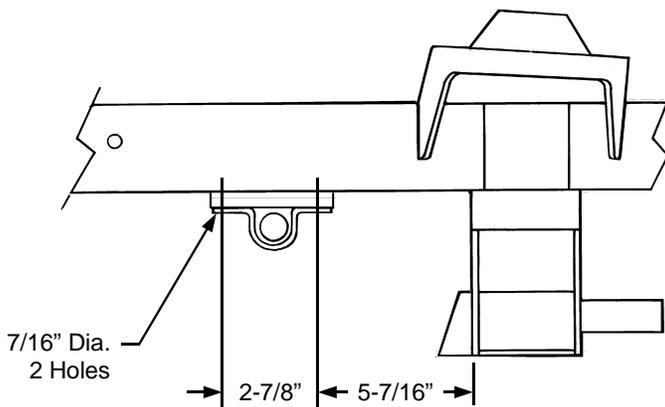


Figure 1

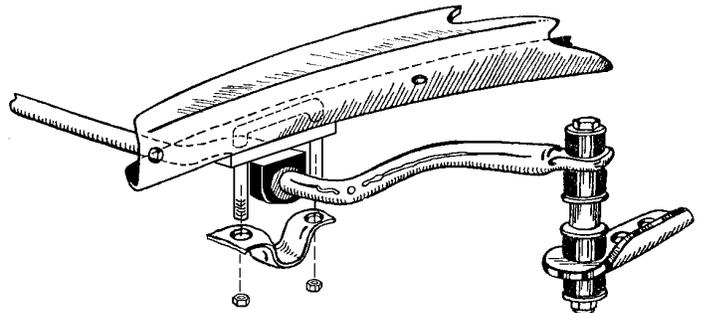


Figure 2

