



QUALITY... PLAIN & SIMPLE®

Throttle Pedal Pad Installation Instructions

Building American Quality... With A Lifetime Warranty!®

10924 Murdock Dr. • Knoxville, TN 37932

TOLL FREE 1-877-469-7440 • (865) 966-2269 • FAX (865) 671-1999 • tech@lokar.com • www.lokar.com

STOP! Please read all installation instructions before beginning installation. Call Lokar for any questions or uncertainties during your installation.

WARNING: Disconnect the battery before beginning installation. Make sure the vehicle is in Park and at least one tire is scotched to prevent the vehicle from moving.

Step 1: Remove the factory throttle pedal pad from the throttle pedal arm. In some cases this can be done with the throttle pedal mounted in the vehicle. Take the factory pivot pin out of the plastic pedal pad. Remove the pad, pin and spring.



Photo 1

Step 2: Remove one E-clip from the Lokar pedal pin. Install the Lokar pedal pad to the factory throttle pedal arm. In most cases the spring and pin needs to install on the right side of the pedal arm, looking at the face of the pedal. The spring should have the hook facing down. Install the pedal pin through the pedal back and install the E-clip into the groove on the end of the pin. **Photo 1**

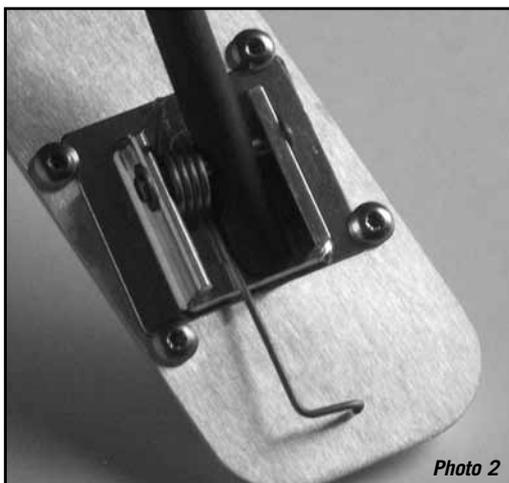


Photo 2

Step 3: Rotate the hook end of the spring up to the top of the pedal pad and snap it over the throttle pedal arm. Pivot the pedal pad to make sure that it springs back without any binding.

Photo 2