




an ISO 9001:2008 Registered Company

1955-57 Chevy Pickup

Condenser Kit
026057

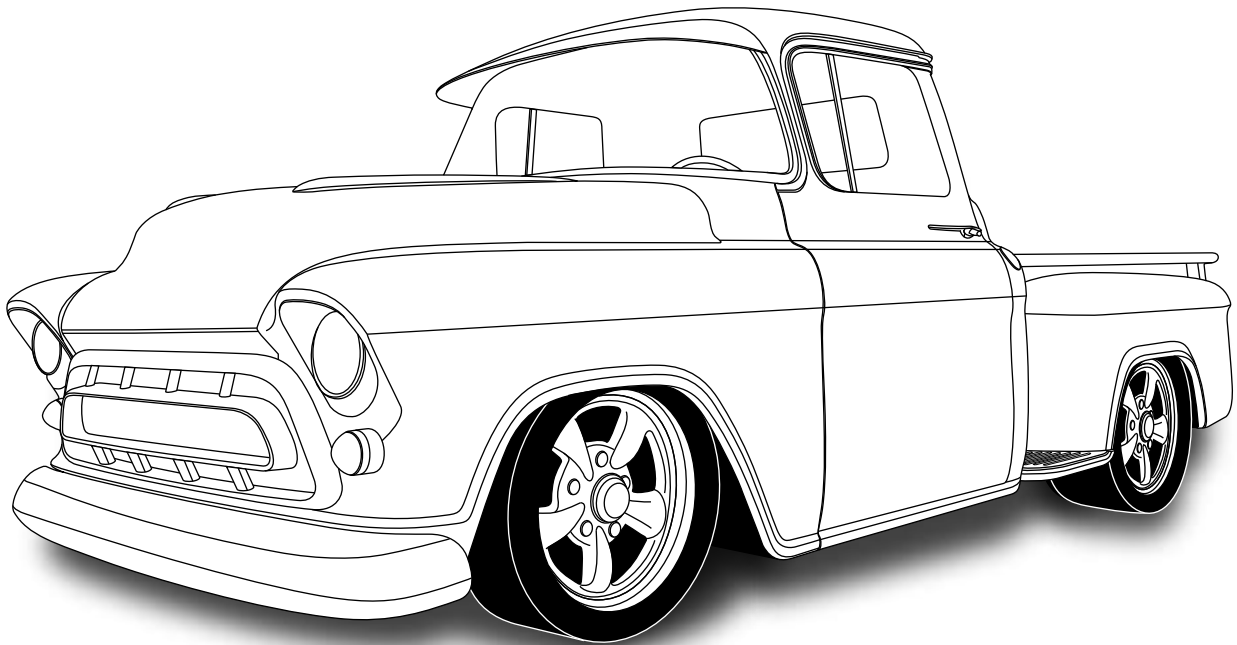

18865 Goll St. San Antonio, TX 78266 ph: 210-654-7171 fax: 210-654-3113



Table of Contents


1. Cover
2. Table of Contents
3. Packing List/Parts Disclaimer
4. Engine Compartment & Diagonal Brace Modification
5. Condenser Mounting Bracket Installation & Condenser Installation
6. Packing List



Packing List: 1955-57 Chevy Pickup Condenser Kit (026057)

No.	Qty.	Part No.	Description
1.	1	03767-VUC	14" x 24" Parallel Flow Condenser
2.	8	18249-VUB	10-24 x 3/8" Pan Head Screw
3.	8	18260-VUB	10-24 Nut w/ Star Washer
4.	2	643087	Bracket 55-57 Chevy Pickup Condenser

**** Before beginning installation, open all packages and check contents of shipment.
Please report any shortages directly to Vintage Air within 15 days. After 15 days,
Vintage Air will not be responsible for missing or damaged items.**

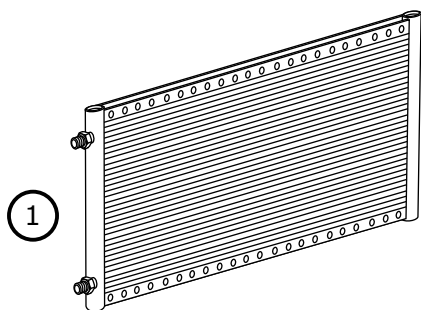


2



3




4

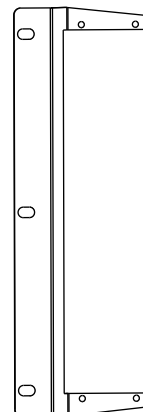




Engine Compartment

1. Remove core support cover.
2. Remove OEM fan & fan shroud.
3. Drain & remove radiator.

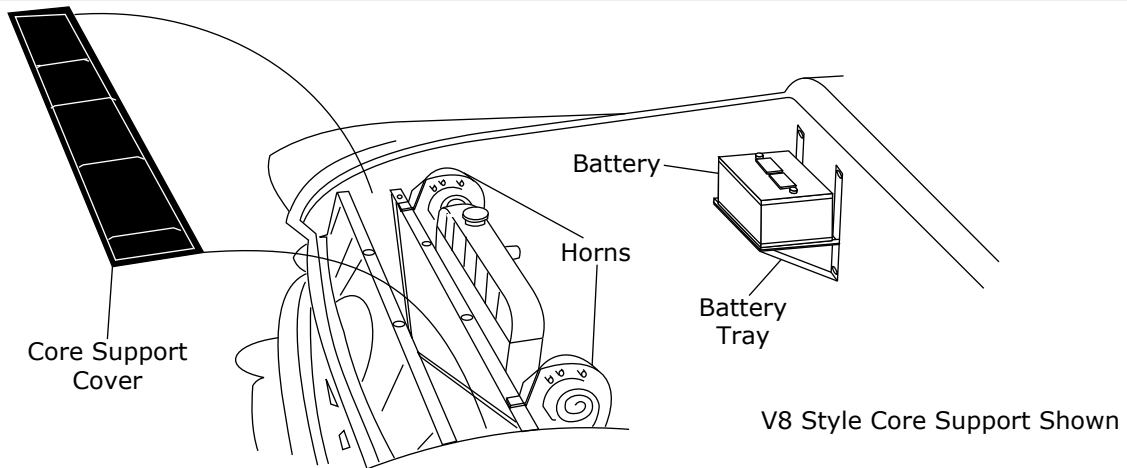

Diagonal Brace Modification


1. Remove (4) rivets holding diagonal brace to core support. Discard diagonal brace.

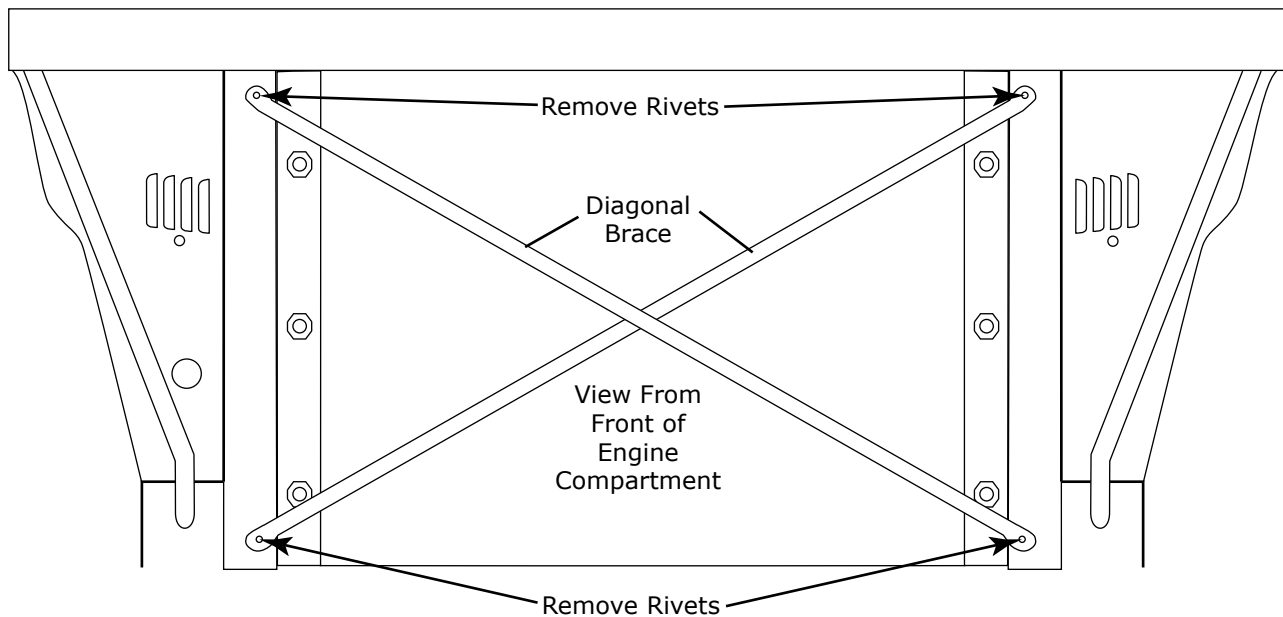




Condenser Mounting Bracket Installation

1. Install condenser mounting brackets onto back of condenser using 10-24 x 3/8" pan head screws and 10-24 nuts with star washers. **NOTE: The bracket mounts through the 1st & 3rd holes of the condenser.**

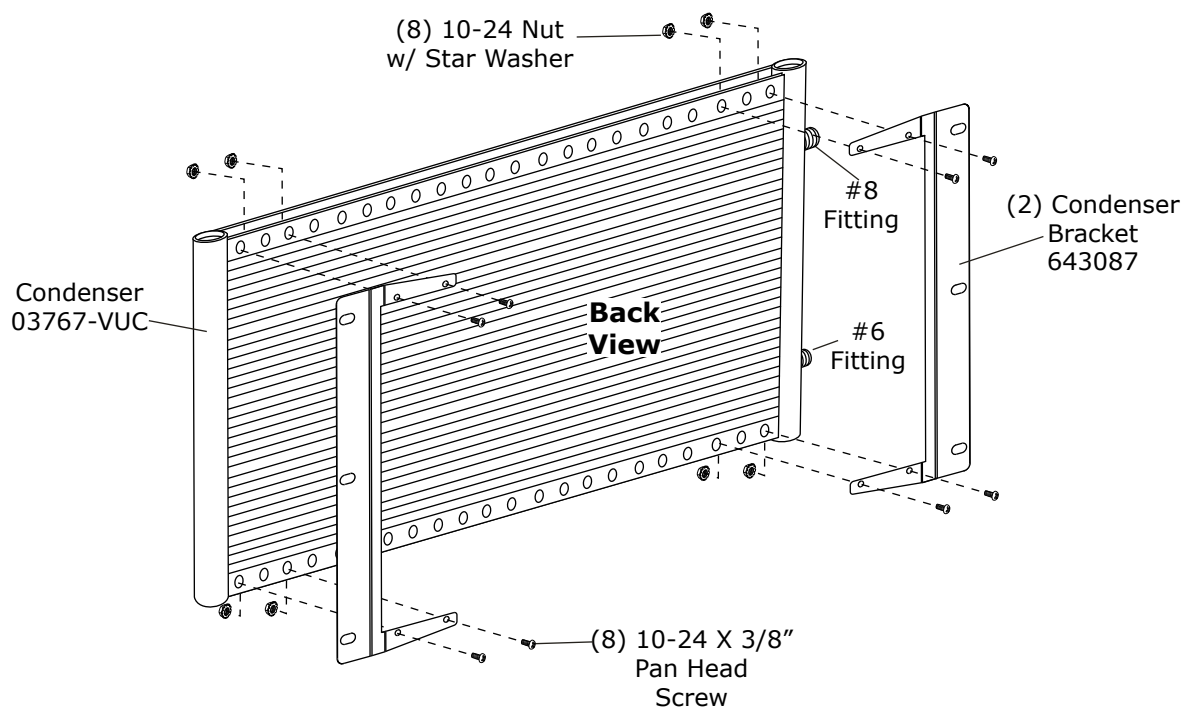

Condenser Installation

1. Install condenser assembly on engine side of core support, using OEM bolts and OEM holes, as shown below.

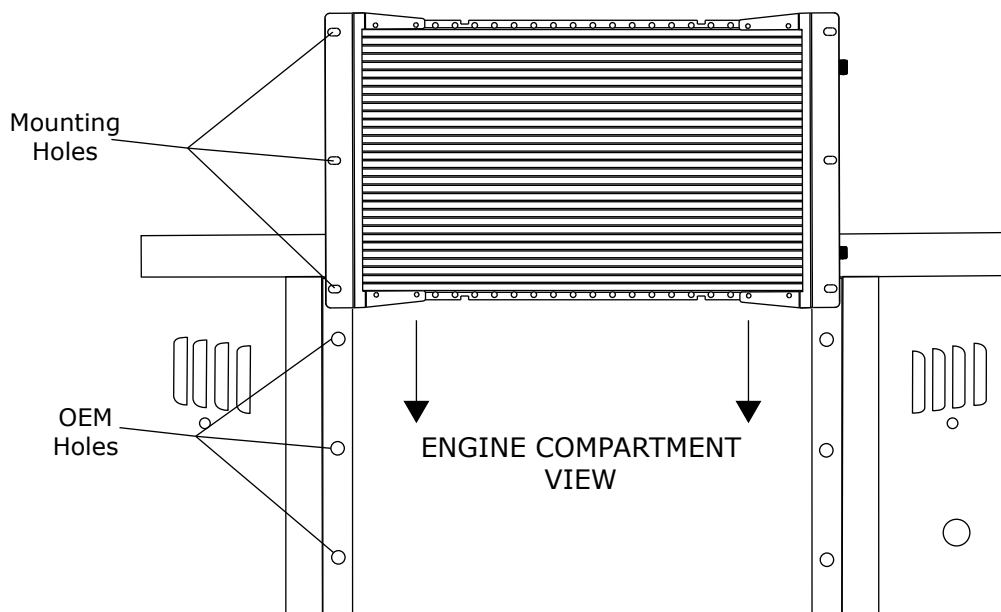




Packing List: 1955-57 Chevy Pickup Condenser Kit (026057)

No.	Qty.	Part No.	Description	
1.	1	03767-VUC	14" x 24" Parallel Flow Condenser	_____
2.	8	18249-VUB	10-24 x 3/8" Pan Head Screw	_____
3.	8	18260-VUB	10-24 Nut w/ Star Washer	_____
4.	2	643087	Bracket 55-57 Chevy Pickup Condenser	_____

Checked By: _____
Packed By: _____
Date: _____

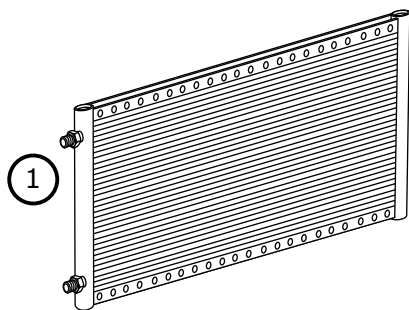

2



3



4

