




an ISO 9001:2008 Registered Company

1955-57 CHEVY

**OPTIONAL DASH LOUVER INSTRUCTION W/ TEMPLATES
FOR 492055 BILLET HOUSINGS
& 492056 CHROME LOUVER ASSEMBLY**

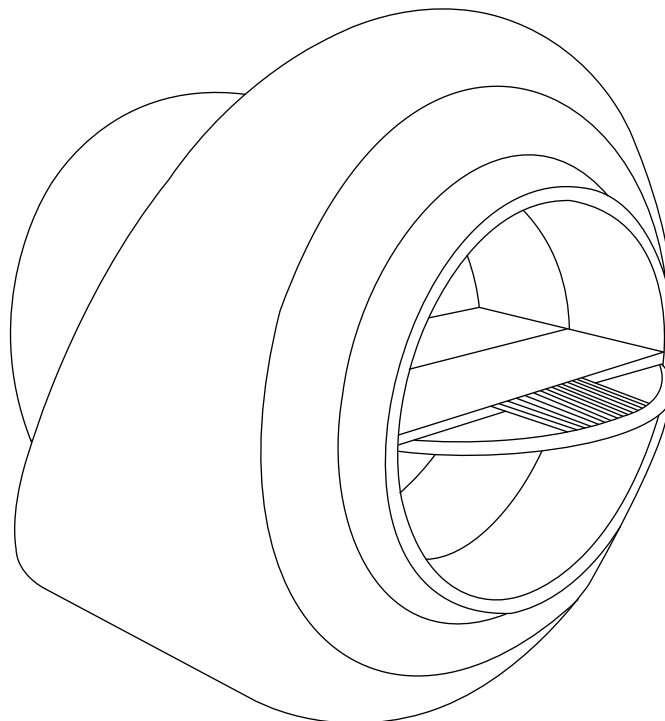

492056 SHOWN



Table of Contents


PAGES

1. COVER
2. TABLE OF CONTENTS
3. PROLINE ALUMINUM LOUVER INSTALLATION
4. 55-56 CHEVY DRIVER SIDE TEMPLATE
5. 55-56 CHEVY PASSENGER SIDE TEMPLATE
6. 57 CHEVY DRIVER SIDE TEMPLATE
7. 57 CHEVY PASSENGER SIDE TEMPLATE
8. PACKING LIST




55-56 CHEVY PROLINE ALUMINUM LOUVER INSTALLATION

- ☐ **NOTE: IF INSTALLING LOUVERS ON A DASH THAT IS ALREADY PAINTED, IT IS RECOMMENDED THAT MASKING TAPE BE USED ON THE SURFACE OF THE DASH TO PROTECT THE PAINT DURING INSTALLATION.**
- ☐ USE TEMPLATE PROVIDED ON PAGES 4 & 5.
- ☐ ALIGN AND TAPE TEMPLATE TO DASH USING OEM HOLES AND SEAM OF DASH AS SHOWN BELOW.
- ☐ MARK OR CENTER PUNCH HOLES ON DASH AS SHOWN ON TEMPLATE.
- ☐ DRILL 5/32" AND 2 3/4" HOLES. TOLERANCES ARE TIGHT. MAKE SURE HOLES ARE PRECISE.
- ☐ INSTALL LOUVER BEZEL IN DASH USING UPPER MOUNTING HOLE. VERIFY THAT LOUVER BEZEL IS LEVEL AND SQUARE TO DASH. USE LOWER MOUNTING HOLE AS GUIDE TO MARK AND DRILL 5/32" HOLE.
- ☐ TRIM OFF EXCESS MATERIAL AS SHOWN ON TEMPLATE.
- ☐ INSTALL LOUVER IN DASH.

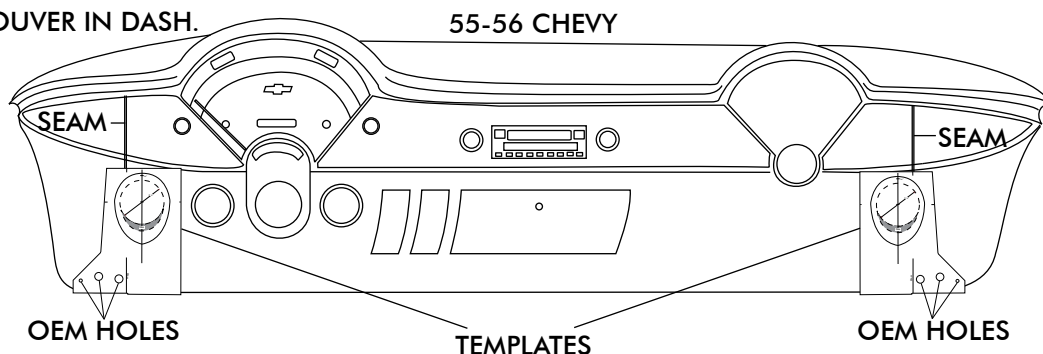

57 CHEVY PROLINE ALUMINUM LOUVER INSTALLATION


- ☐ **NOTE: IF INSTALLING LOUVERS ON A DASH THAT IS ALREADY PAINTED, IT IS RECOMMENDED THAT MASKING TAPE BE USED ON THE SURFACE OF THE DASH TO PROTECT THE PAINT DURING INSTALLATION.**
- ☐ USE TEMPLATE PROVIDED ON PAGES 6 & 7.
- ☐ ALIGN AND TAPE TEMPLATE TO DASH USING OEM HOLES OF DASH AS SHOWN BELOW.
- ☐ MARK OR CENTER PUNCH HOLES ON DASH AS SHOWN ON TEMPLATE.
- ☐ DRILL 5/32" AND 2 3/4" HOLES. TOLERANCES ARE TIGHT. MAKE SURE HOLES ARE PRECISE.
- ☐ INSTALL LOUVER BEZEL IN DASH USING UPPER MOUNTING HOLE. VERIFY THAT LOUVER BEZEL IS LEVEL AND SQUARE TO DASH. USE LOWER MOUNTING HOLE AS GUIDE TO MARK AND DRILL 5/32" HOLE.
- ☐ TRIM OFF EXCESS MATERIAL AS SHOWN ON TEMPLATE.
- ☐ INSTALL LOUVER IN DASH.

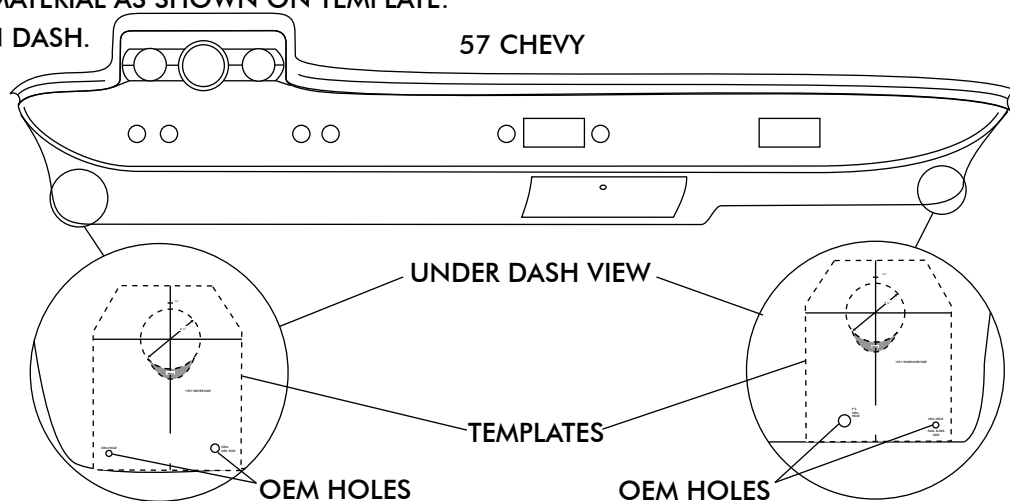




55-56 CHEVY DRIVER SIDE LOUVER TEMPLATE

CUT ALONG
DOTTED LINE

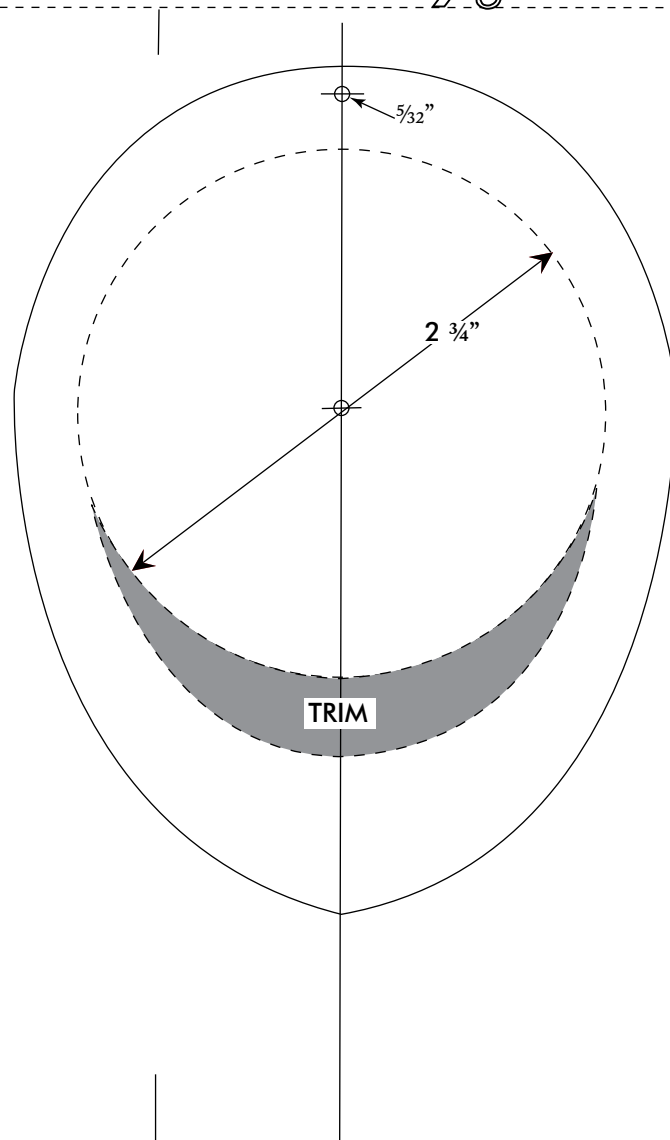

55-56 CHEVY DRIVER SIDE

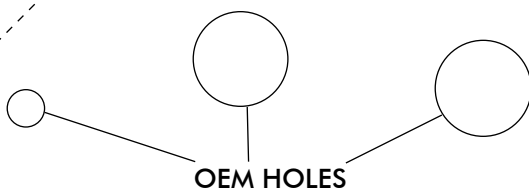


SEAM



55-56 CHEVY PASSENGER SIDE LOUVER TEMPLATE

CUT ALONG
DOTTED LINE

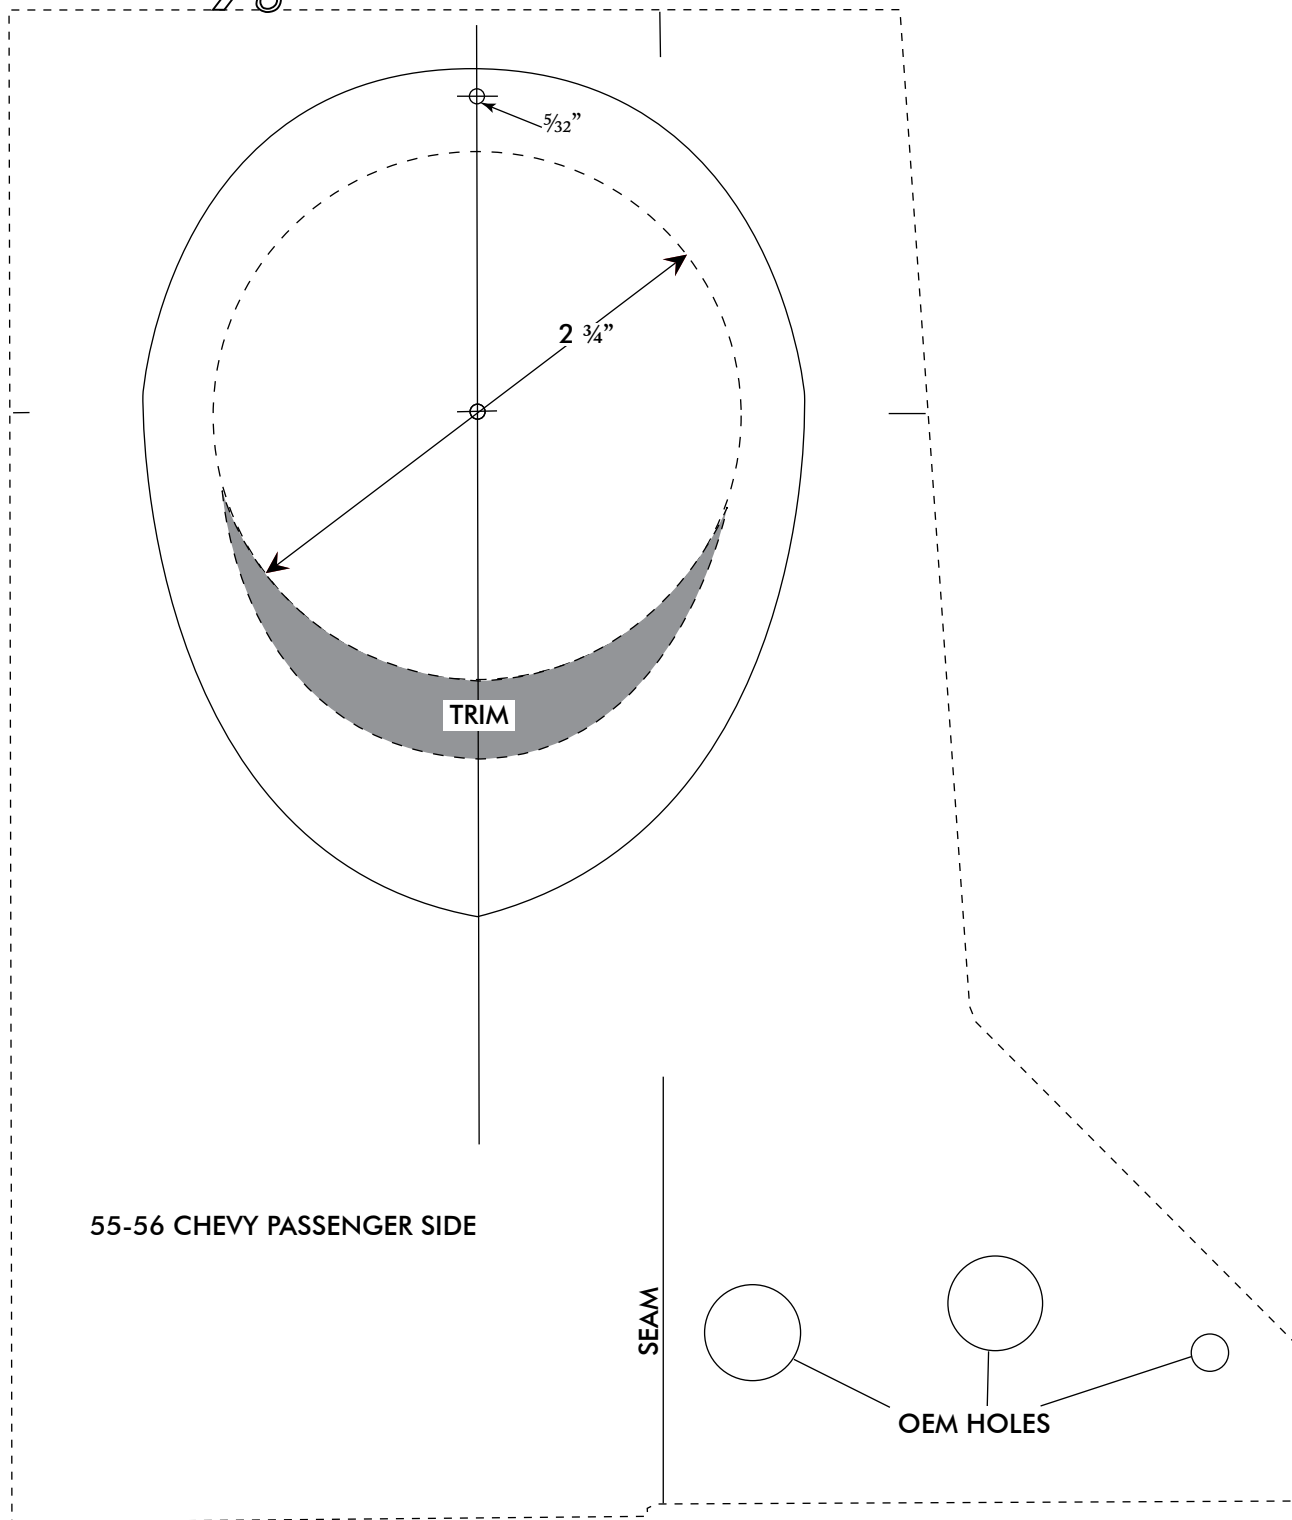


55-56 CHEVY PASSENGER SIDE

SEAM

OEM HOLES




1957 CHEVY DRIVER SIDE LOUVER TEMPLATE

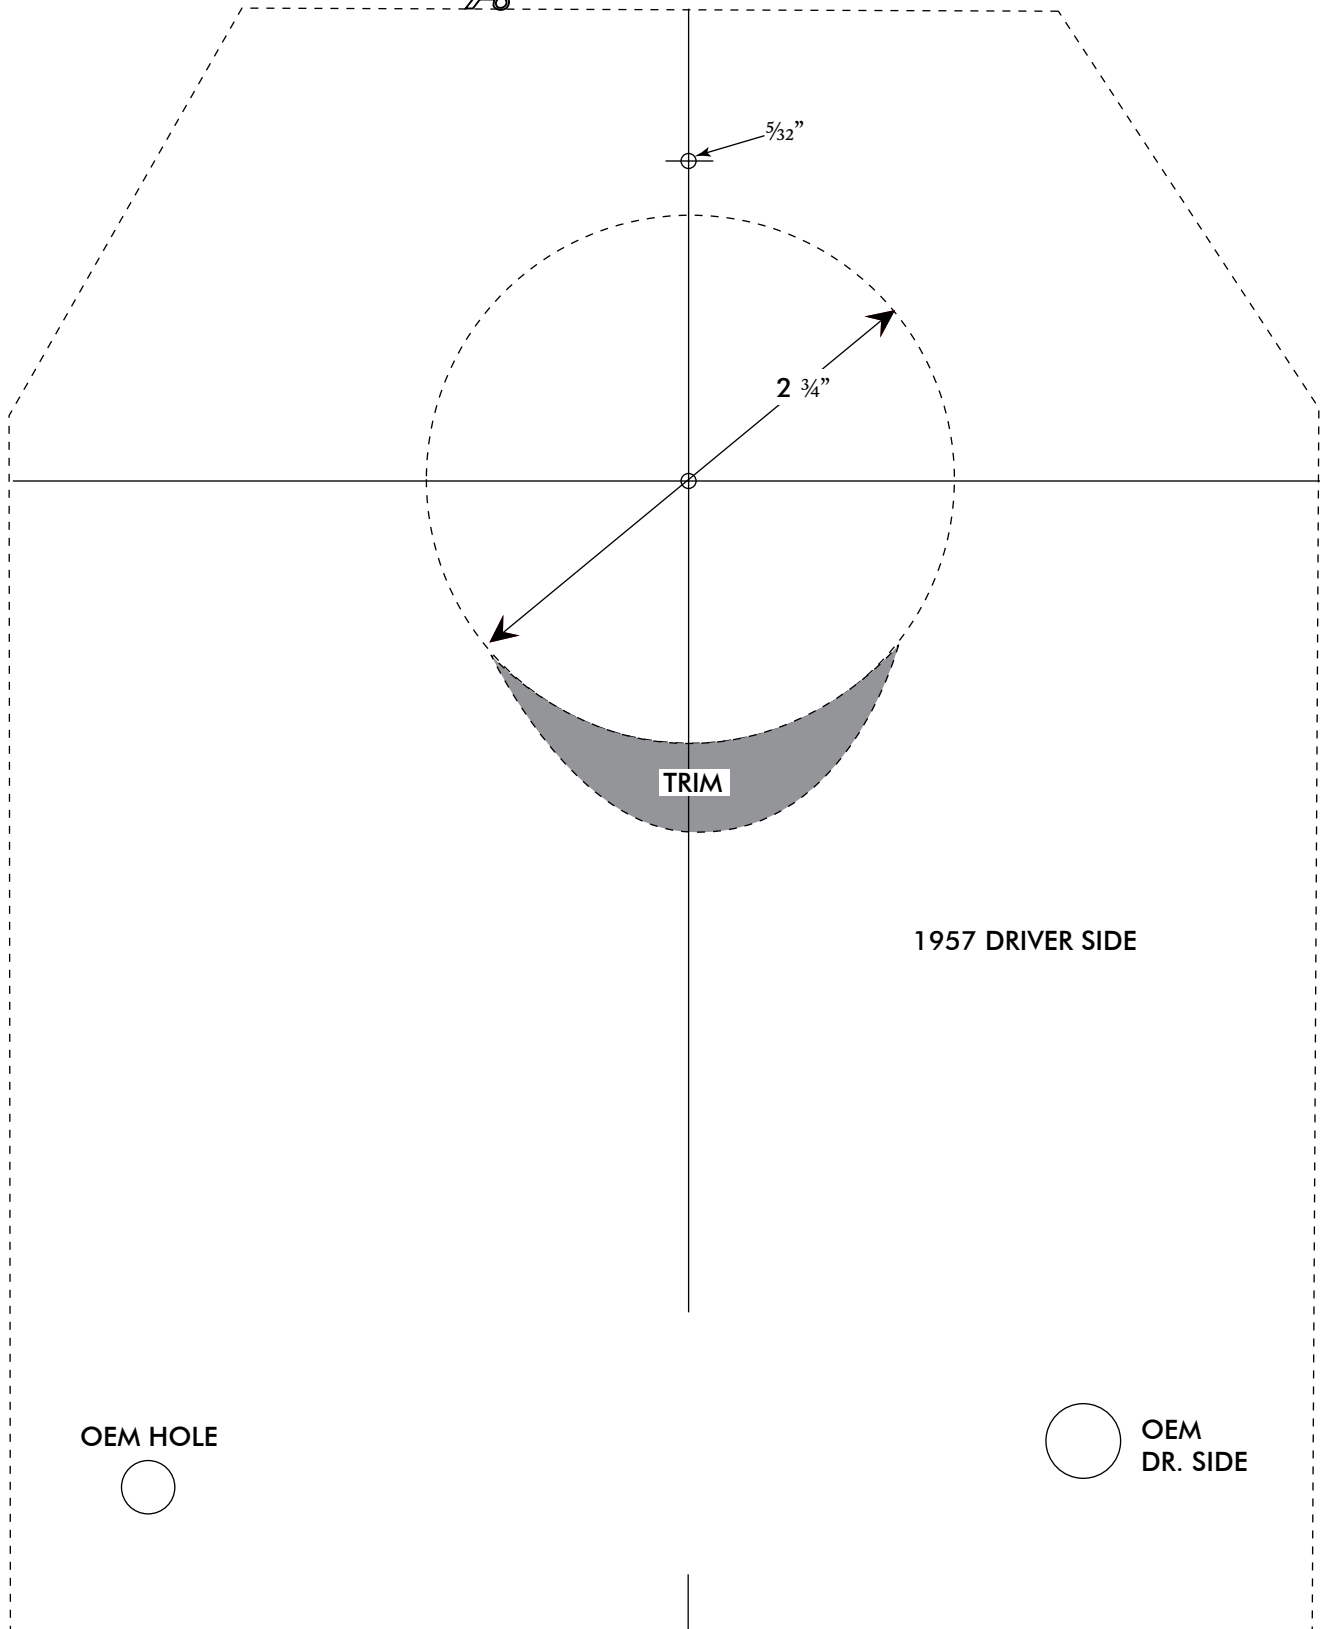



1957 CHEVY PASSENGER SIDE LOUVER TEMPLATE

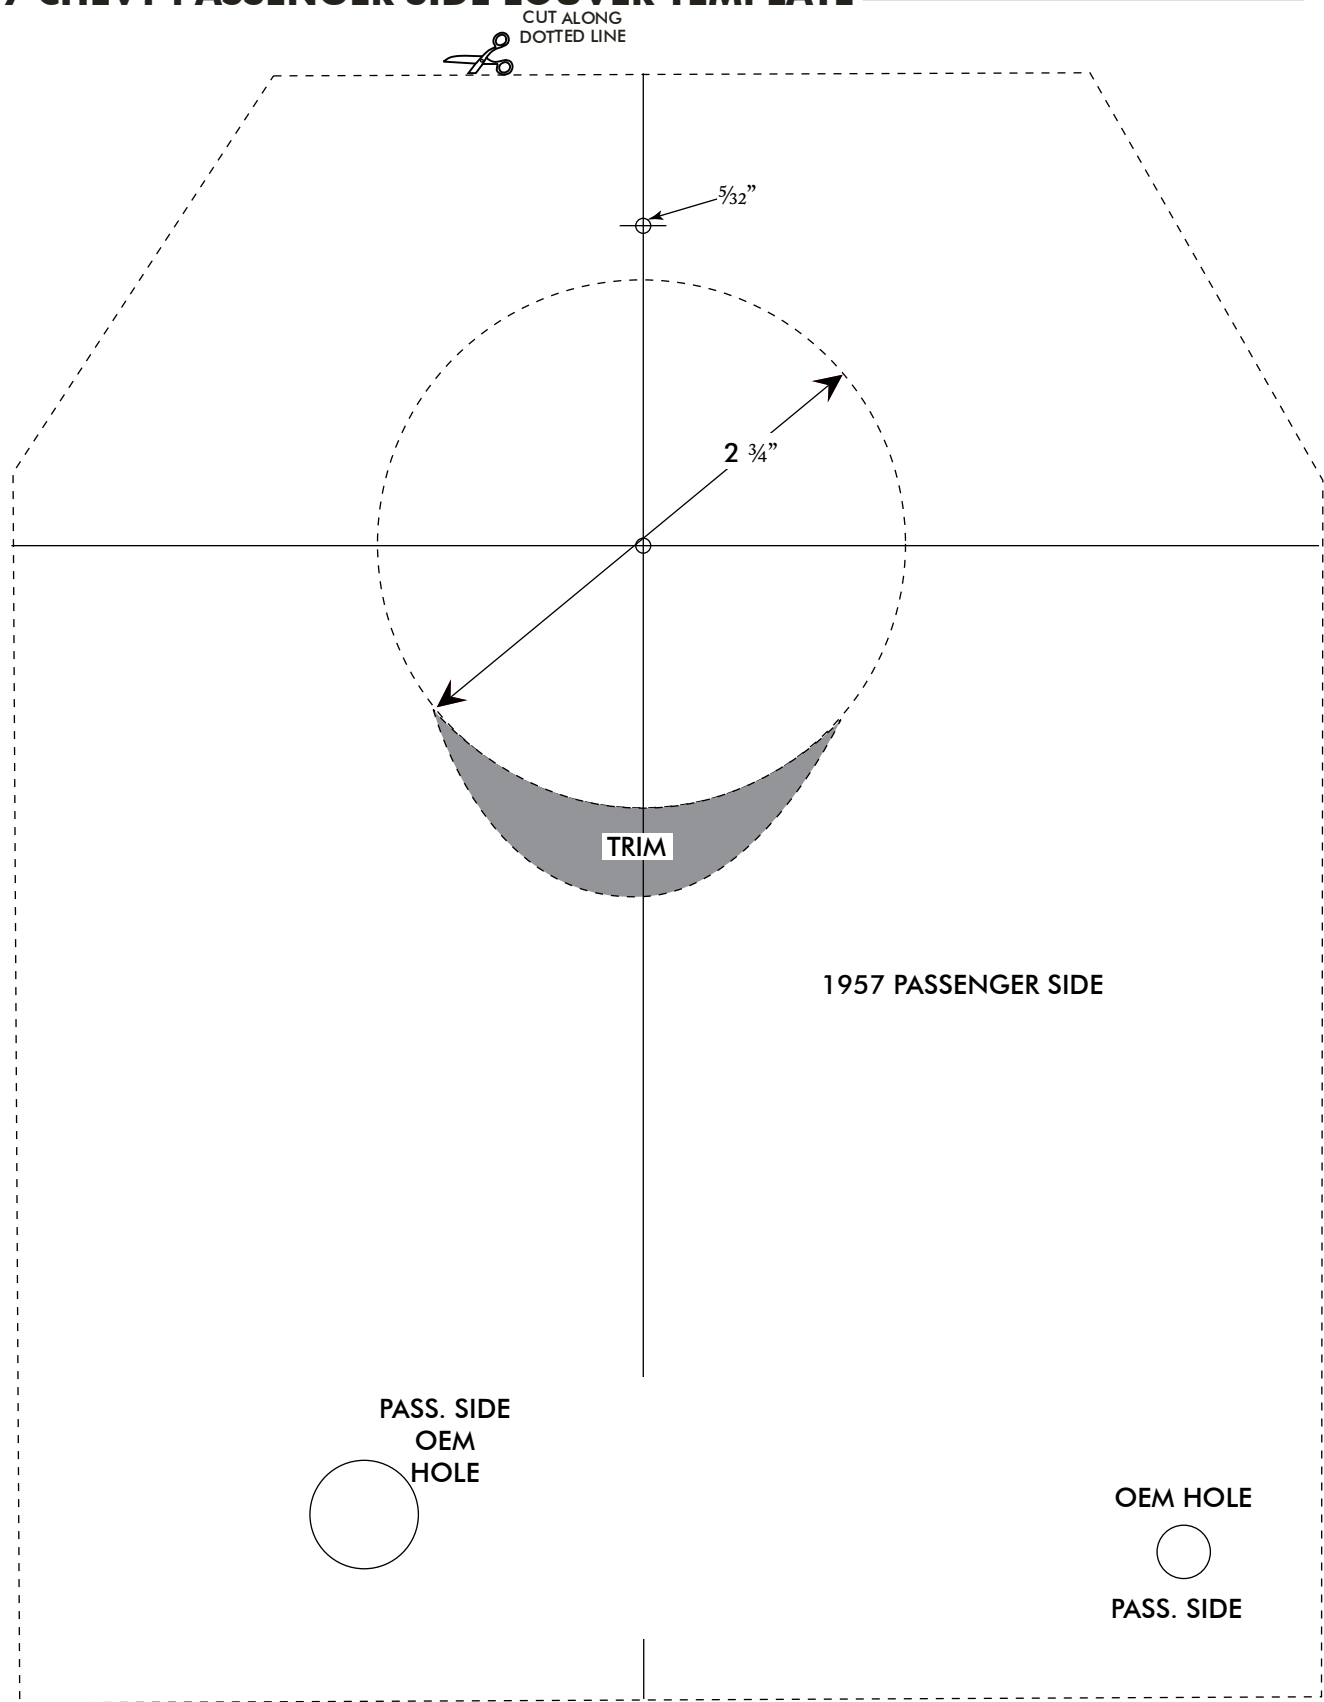




PAIR LOUVER 55-57 CHEVY MACHINED ASSEMBLY

**LOUVER KIT
492055**

No.	QTY.	PART No.	DESCRIPTION
1.	1	492053	PAIR LOUVER 55-57 CHEVY MACHINED w/HARDWARE

CHECKED BY: _____
PACKED BY: _____
DATE: _____

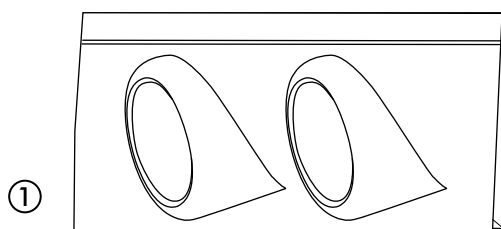

902053 REV B 1/16/13, INST 55-57 CHEV MACH/CHROME LVR KIT PG 8 OF 8




PAIR LOUVER 55-57 CHEVY CHROME ASSEMBLY


**LOUVER KIT
492056**

No.	QTY.	PART No.	DESCRIPTION
1.	1	492054	PAIR LOUVER 55-57 CHEVY CHROME BEZEL w/HARDWARE
2.	2	49153-VUL	CHROME BALL LOUVER

CHECKED BY: _____
PACKED BY: _____
DATE: _____

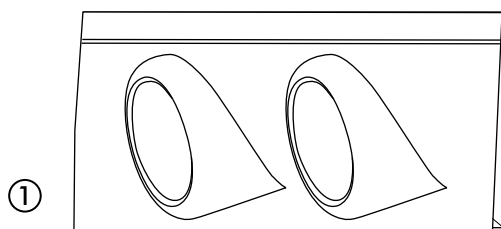

②



902053 REV B 1/16/13, INST 55-57 CHEV MACH/CHROME LVR KIT PG 8 OF 8