



INSTALLATION INSTRUCTIONS

Boom Mat Floor & Tunnel Shield II

KIT CONTENTS:

#050507 - 21" x 24" (3.5 sq.ft.) Floor & Tunnel Shield II
#050508 - 21" x 48" (7 sq. ft.) Floor & Tunnel Shield II
#050509 - 42" x 48" (14 sq. ft.) Floor & Tunnel Shield II

NOTES:

It is not required to clean the area where the Floor & Tunnel II is being installed. However, the cleaner the area the stronger the bond will be. DEI Cool Tape (010408) can be used around edges for a finished look.

TOOLS:

Scissors or snips, Cardboard/Poster board to use as a template

SURFACE PREP:


If application area has been exposed to excessive contaminants be sure to thoroughly clean before install. Make sure you allow sufficient time to dry before installation of Floor & Tunnel Shield II.



INSTRUCTIONS:

1. Although Floor & Tunnel Shield II will stick to anything, we recommend removing dirt, grease, oil, wax, etc. to improve adhesion.

2. Making a template will aid proper and professional installations.

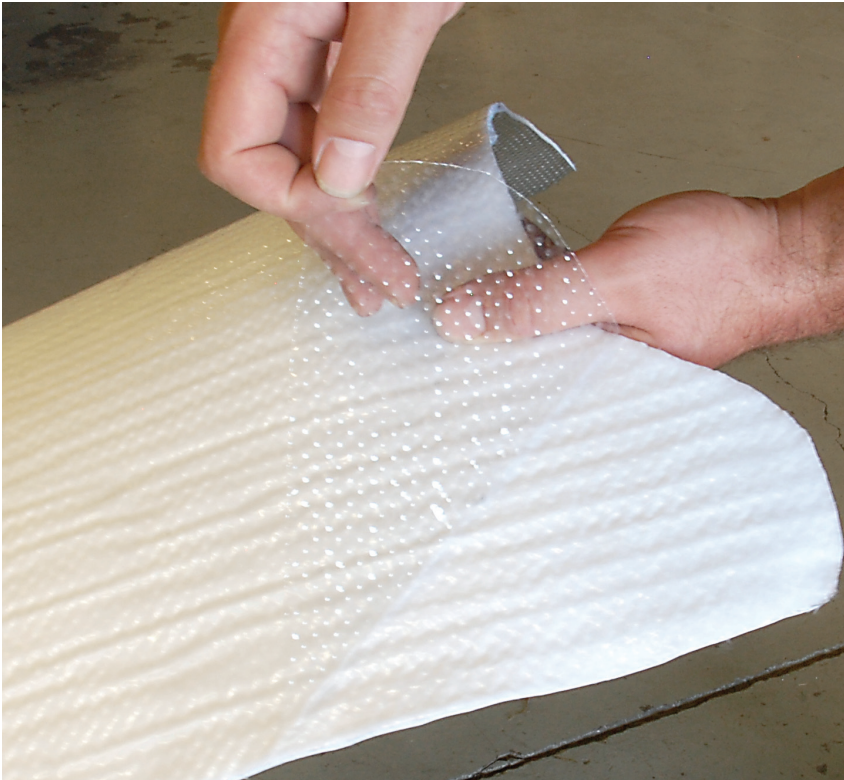

3. Trim Floor & Tunnel Shield II to desired size using a snips or scissors.

4. Remove the backing to expose the adhesive and carefully apply to clean and dry desired area.



5. After Floor & Tunnel Shield II is set in proper location, apply pressure to ensure a strong bond with the installation surface.