



200-582 INSTALLATION INSTRUCTIONS 86-90 Chevrolet/GMC S-10 2.8L V6

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Thank you for selecting AIRAID.



Parts List

- (1) Power Plate
- (2) Gaskets
- (3) 5/16-18" x 3 1/4" Bolts
- (3) 5/16" Washers


Tools List

- 1/2" Socket
- Ratchet
- Flat Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove throttle body air intake assembly.
3. Remove (3) bolts from throttle body. (**Ref. "C"**)
4. Remove gasket and clean surfaces.
5. Install power plate (**Ref. "A"**) with (2) gaskets (**Ref. "B"**).
 - A. One gasket located between throttle body and power plate.
 - B. One gasket located between power plate and manifold.
6. Install (3) bolts and washers (**Ref. "C"**) using **Step 3** as an example.
7. Inspect& Test throttle linkage for full Open & Closed travel Before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjustment.
8. Reinstall throttle body air intake assembly using **Step 2** as an example.
9. Reconnect negative battery cable. Enjoy!

The sound of power...The "whistle" means its working!

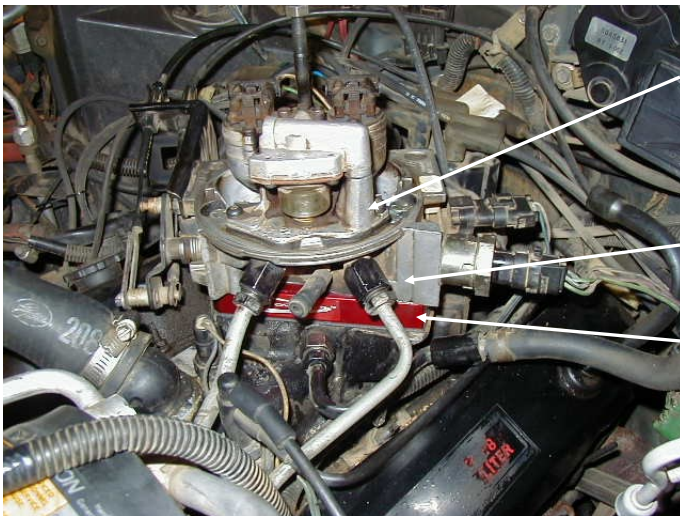

Ref. "C"- (3) 5/16-18" x 3 1/4" Bolts
(3) 5/16" Washers

Ref. "B"- (2) Gaskets

Ref. "A"- (1) Power Plate

Rev. 12.07.15

Airaid. 1815 West Crest Lane. Phoenix AZ 85027 (800) 498-6951 AiraidInfo@airaid.com www.airaid.com