



## Modular Intake Tube


### Installation Instructions For Part Number

250-992C


2001-2004 Chevrolet Corvette  
5.7L V8 All Models

### Component Identification

1 Intake Tube	1
2 Silicone Coupler	1
3 Hump Hose	1
4 Bracket	2
5 #56 Hose Clamp	2
6 #64 Hose Clamp	2
7 8-32 Socket Head Screw	4
8 Rubber Washer	4

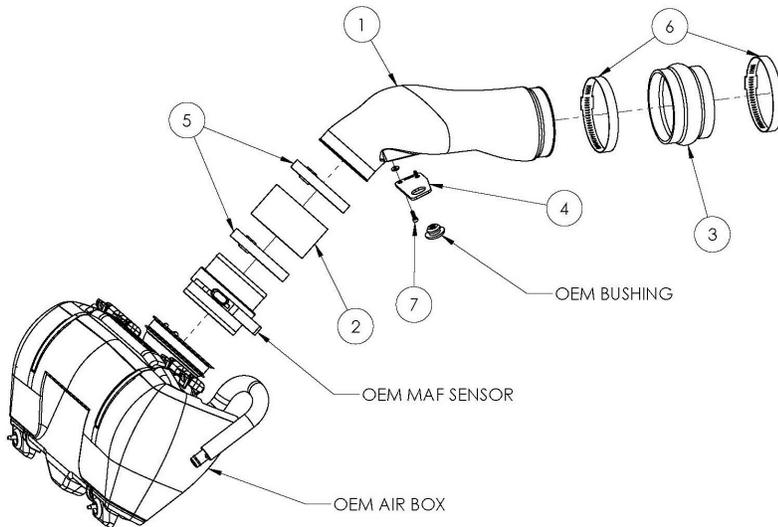


Full color instructions can be viewed on our web site at [Airaid.com](http://Airaid.com). Use the **Product Search** function to find your part number, and click **View Details**.

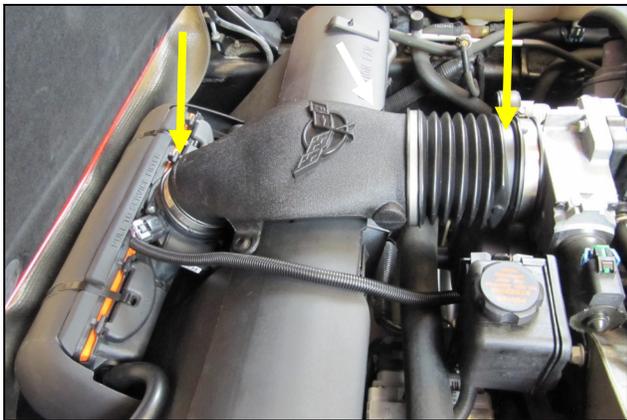


#### 1. **Disconnect the negative battery cable!**

Loosen the intake tube clamps on the throttle body and the Mass Air Flow meter. Unseat the intake tube mounting grommets from the posts on the radiator shroud and remove the factory intake tube.

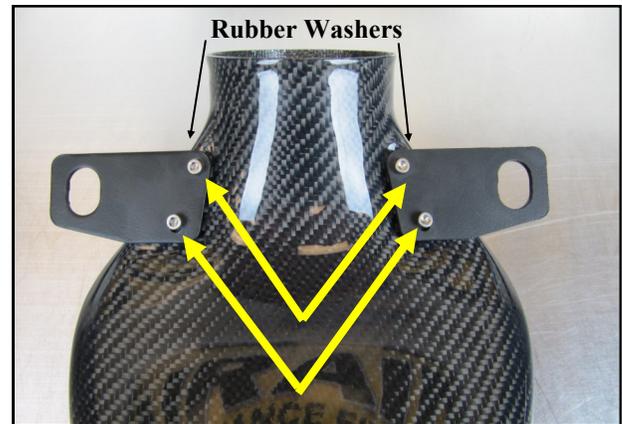


2. Set the Rubber Washers (#8) onto the Intake Tube and align with the threaded holes of the inserts.

Install the Tube Brackets onto the Intake Tube as shown using the 8-32 Socket Head Screws (# 7).

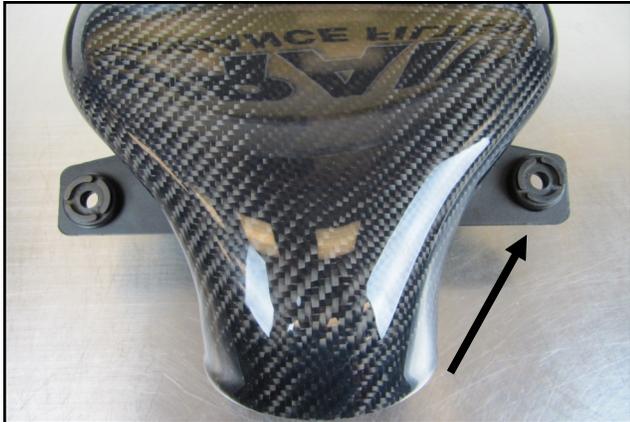

3. Transfer the factory intake tube mounting grommets into the Tube Brackets as shown.

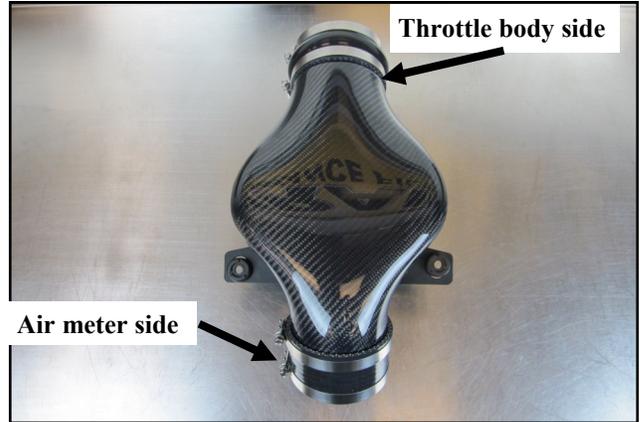

4. Slide the Hump Hose and #64 clamps onto the throttle body side of the Intake Tube and the Coupler and #56 Clamps onto the air meter side. Leave all clamps loose at this time.



5. Install the Airaid Tube assembly onto the throttle body and lower it downward towards the Mass Air Flow meter.

Slide the coupler all the way down onto the MAF and secure the Intake grommets onto the posts on the radiator shroud.



6. Check the alignment of all the intake components and adjust if necessary. Begin tightening the clamps from the front of the intake and move back towards the throttle body. Reconnect the battery.



Instructions Revision  
11-22-13