



Jr.



Installation Instructions


For Airaid Jr. Part Numbers:

450-732 850-344 Airaid Oiled Media Filter
 451-732 851-344SynthaMax Dry Media Filter
 And M.I.T. Part Number
 450-932 Airaid Modular Intake Tube only

2015-17 Ford Mustang GT
 5.0L V8

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See AIRAID.COM for CARB status on each part for a specific vehicle.

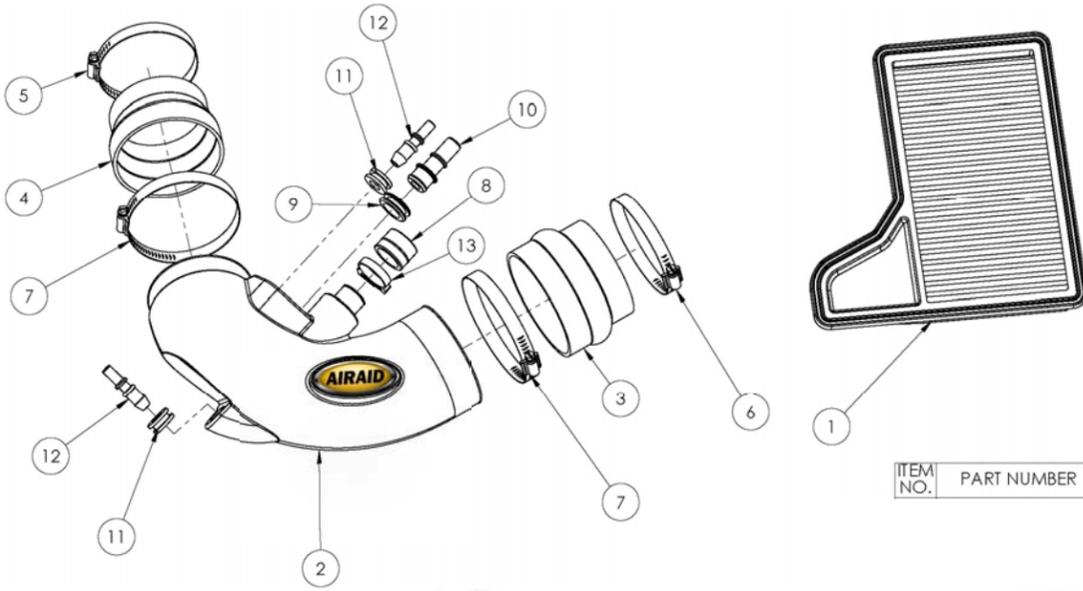

ITEM NO. PART NUMBER



Component Identification

1	Airaid Premium Filter	1
2	Modular Intake Tube	1
3	Hump Hose	1
4	Reducing Coupler	1
5	#56 Hose Clamp	1
6	#60 Hose Clamp	1
7	#64 Hose Clamp	2
8	Resonator Cap	1
9	13/16" ID Grommet	1
10	5/8 Aluminum Fitting	1
11	1/2" ID Grommet	2
12	1/2" Aluminum Fitting	2
13	1-1/4" Speed Clamp	1
14	Firewall Plug (not Shown)	1
15	Airaid Decal	1
16	Blind Grommet (not Shown)	1


Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.



1. Remove the battery box cover in the cowl and disconnect the negative battery terminal.




2. Remove the strut tower brace is so equipped. Lift up on the engine cover to unseat it from it's mounting grommets and set it aside.

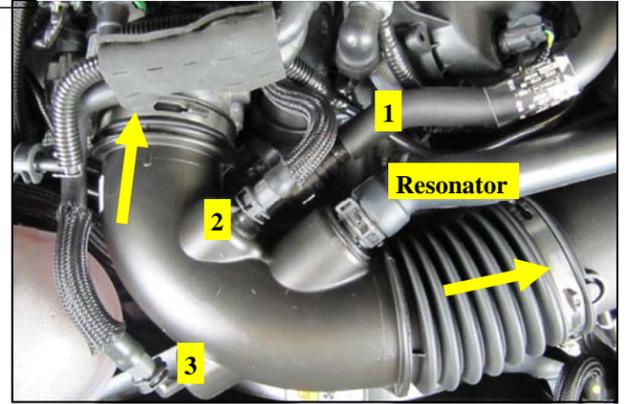


3. Disconnect the 3 breather lines and resonator tube from the intake tube. Loosen the hose clamps and remove the factory intake tube. Depending on your configuration, you may have two or three lines. Loosen the hose clamps and remove the factory intake tube.




4. If you are installing an Airaid Jr. kit, replace the filter at this time.

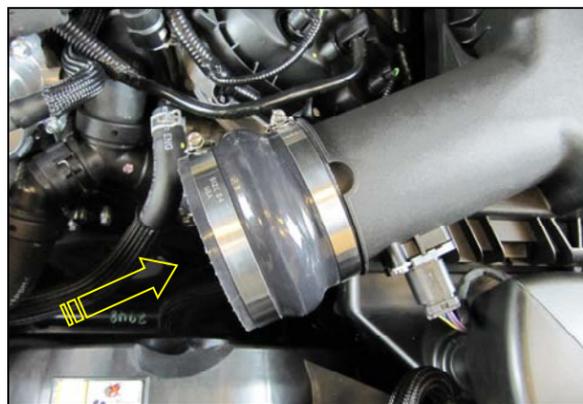

5. Slide the Hump Hose and Clamps onto the airbox outlet as shown. Do not tighten the clamps at this time.

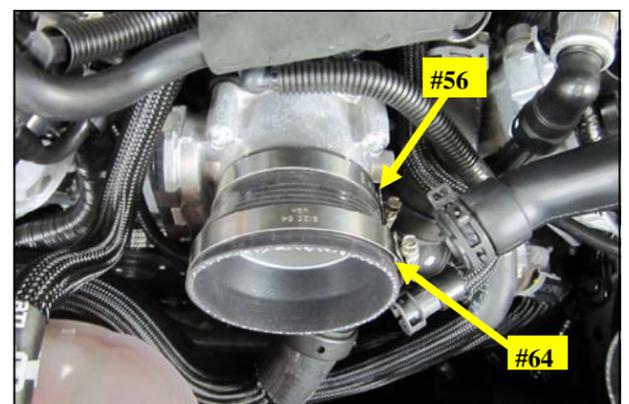

6. Slide the Reducer and Clamps onto the throttle body as shown.

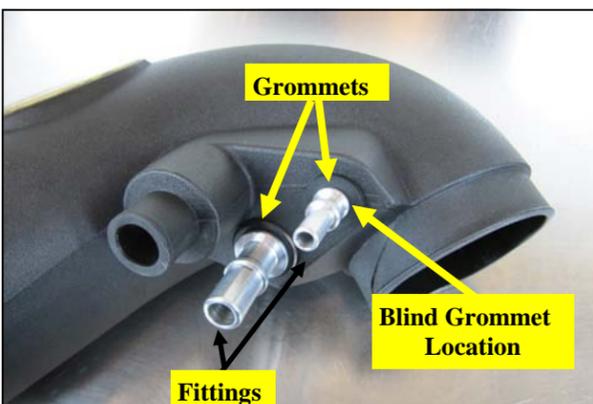


7. Insert the Grommets and Aluminum Fittings into the Airaid Intake tube as shown. On vehicles not equipped with the small breather, plug the hole with the Blind Grommet.



8. Insert the remaining Grommet and Fitting into the Intake tube as shown.



9. Insert the Intake Tube into the Hump Hose and Reducer then tighten all 4 Intake Clamps. Apply the Airaid Bubble Decal onto the Intake Tube as shown.

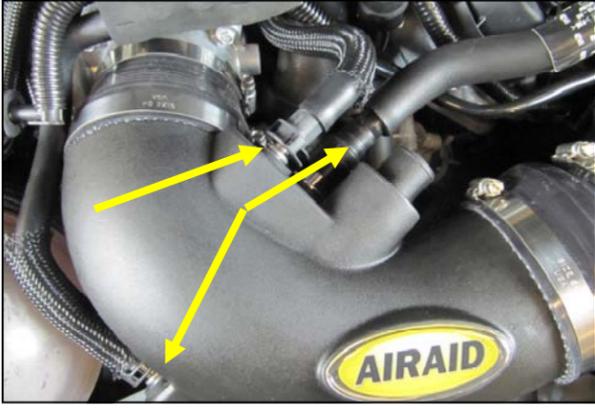

10. Reconnect the breather hoses to the Fittings in the Airaid Intake Tube.



11. Connect the resonator to the Intake Tube as shown



12. **Double check your work.** Make sure all clamps, hoses, bolts, and screws are tight. Double check the hood clearance. Reconnect the negative battery cable and reinstall the cover.



Resonator Delete Option: The resonator can be safely deleted if so desired by capping off the Intake Tube with the supplied Cap and Speed clamp. After removing the resonator assembly from the firewall, insert the included Firewall plug to prevent debris from entering the cabin.

For your Oiled media filter we suggest using the AIRAID Filter Tune-Up Kit!



Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned periodically.

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See AIRAID.COM for CARB status on each part for a specific vehicle.