

**Adjustable Tubular Front Sway Bar – 35mm
Item #1012**

Box Contents:

- (1) Installation Instruction Sheet
- (1) #1012 Front Sway Bar
- (1) #0034 Clamshell Kit
 - (2) Clamshells
 - (2) Polyurethane Bushings
 - (4) Washers
 - (1) Packet 9.11108 Pre-Lube
- (2) 1 3/8" Collar Clamps
- (2) #1013A Aluminum Shims

Applications:

- * 2005 – Present Ford Mustang V6, GT , GT500
(Fits all models EXCEPT Convertible)

1. Before installation, verify box contents are correct and read through instructions completely.
2. On a solid, level surface, jack up the front of the vehicle to a good working height, making sure both wheels are off of the ground, and secure with (2) jack stands under the frame, one on each side.
3. Loosen & remove the lower air deflector to gain access to the front sway bar. (SEE IMAGE #1)
4. Loosen & remove (2) end links from the OE sway bar using 15mm and 8mm box end wrenches. (SEE IMAGE #2 & #3)
5. Loosen and remove the front sway bar clamshells.
6. Remove the OE sway bar from the vehicle.
7. Align the collar clamps of the UMI sway bar with the clamps on the OE sway bar. (SEE IMAGE #4)
 - a. **NOTE:** Screw heads of the collar clamp should be facing the rear of the vehicle.
8. Lightly snug the collar clamp bolts in the case a slight adjustment is required later to align clamshells.
9. Install an aluminum shim on each of the clamshell mounting surfaces. (SEE IMAGE #5 & #6)
10. Position the UMI front sway bar on the vehicle with the curve of the bar facing downward.
11. Re-install the clamshells using the existing factory nuts & torque to 50 ft lbs.
12. Re-install the sway bar end links at the desired location on the UMI sway bar, using factory hardware. Torque to 70 ft lbs.
 - a. Front Position – More Rigid Bar
 - b. Center Position – Stock Setting
 - c. Rear Position - Less Rigid Bar

Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com



IMAGE #1

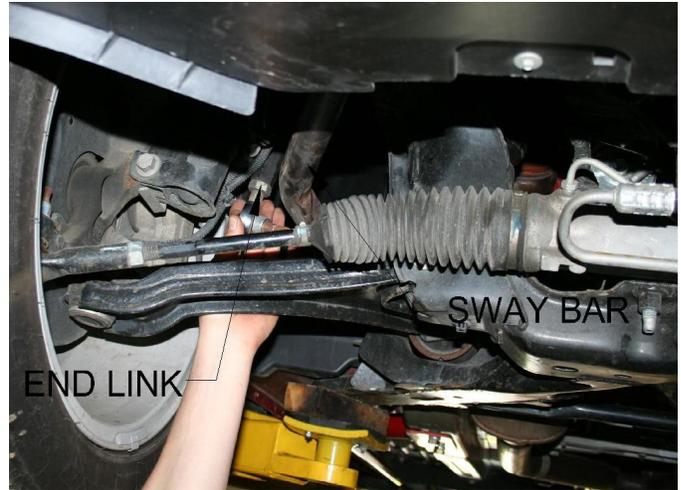


IMAGE #2



IMAGE #3

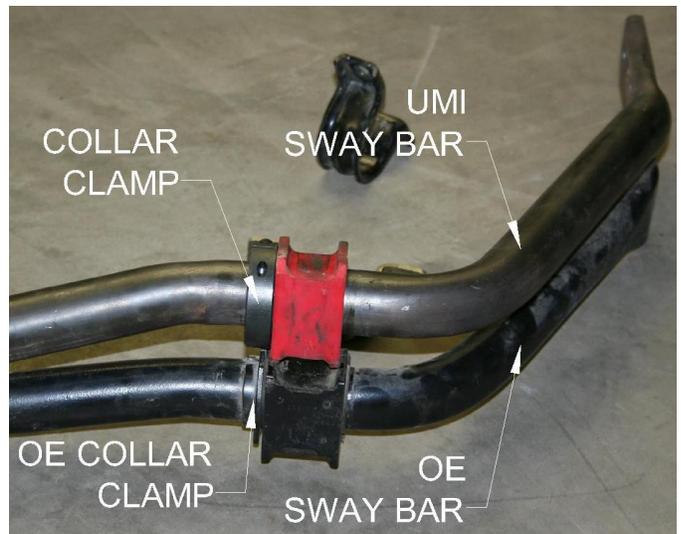


IMAGE #4

Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com



IMAGE #5



IMAGE #6

Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318

Installation Instructions

support@umiperformance.com
www.umiperformance.com

Item # 1012

UMI Performance Inc.
Made in Pennsylvania, USA

Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com