

1970 – 1981 GM F-Body
 Shackle Kit
 P/N# 2626



Qty	Part #	Description
4	2625A	Shackle Plates
8	2626A	Poly Bushings
4	2626B	Steel Sleeves
4	1000013	1/2-13 Nyloc Nut
4	1000015	1/2 Flat Washer
4	1000121	1/2-13 x 5" Bolt

Before installation, verify contents are correct and read through instructions completely.

Always ensure proper support when working under a vehicle. Use approved jack stands when using a floor jack as well as proper technique for securing your car while on a drive-on lift. Always use proper safety clothing and eye protection when working on vehicle

Final ride height will be determined after the car is driven, as all leaf springs “settle” a small amount after first installation. Height will remain the same after this initial settle. Typical settle is 1/4” to 3/8” lower and initial

Tools required:

Floor Jack, Jack Stands, Common Hand Tools (ratchet, sockets, wrenches)



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318

Installation Instructions

support@umiperformance.com
www.umiperformance.com

Installation

1. Raise car to a comfortable working height using the method of your choice. Follow applicable safety procedures.
2. Support the car by the chassis around the front leaf spring mount. The rear axle will need to be free to move to replace the springs, Let the axle droop to remove any spring tension.
3. Remove Wheels
4. Disconnect the lower Shock mount from the Lower spring plate. Upper mounts can remain in place
5. Remove the U bolt / T bolt nuts holding the spring plate.
6. Raise the axle using a jack or lift tripod to free the axle from the spring. Prying may be necessary if the isolators are original
7. Remove the Bolt from the shackle at the rear of the leaf spring. Save this bolt if re-using factory shackles.
8. Locate and remove the (3) bolts holding the front spring mount to the chassis. Support the spring when removing the last bolt as is will be free once removed.
9. Remove the front mount bolt and set aside if reusing. You will reuse the front mount
10. It is recommended to replace the rear shackle bushing on the frame and leaf with new bushings such as UMI poly bushings (P/N 2625) or UMI delrin bushings (P/N 2626). Refer to the instructions included with those kits for installation.
11. Springs from UMI are shipped bolted together. Remove the 2 bolts and discard; they will not be used in the installation.
12. Install the front mounting bucket onto the new UMI 2620 leaf spring. The front mount installed onto the preinstalled bushing. It is recommended to apply a small amount of grease on the face of the rubber bushings. Torque to 50 ft lbs.
13. Install the Rear bushing of choice, UMI poly, UMI delrin, or Factory replacement.
14. Install the spring in the reverse order of removal. Start by installing the (3) bolt that retain the front mount bucket.
15. Swing the leaf spring under the rear axle and install the rear shackle and bolt. Torque the rear bolt to 50 ft lbs.
16. Insert the Spring isolators between the axle and leaf spring, and set the axle onto the top of the leaf spring. It is important for the alignment pin to sit into the hole on the isolator. You should be able to feel the axle "set" into the correct place. UMI part# 2627 includes new poly isolators and u bolts for ease of installation.
17. Reinstall U bolts, place the lower isolator pad onto the spring, then install the lower spring plate.
18. Tighten the 4 spring plate nuts in a criss cross pattern. It is important to tighten these equal amounts. Final torque to 45 ft lbs.
19. Reinstall the shock on the lower spring plate
20. Repeat on opposite side.
21. Installation is complete.



Location of (3) front mount bolts



Front mount installed on spring




Rear Bushings – Delrin Shown



Rear Shackles – Delrin Shown
(out of car to show detail)



Lower Spring Plate – Ubolt / Tbolt
Locations

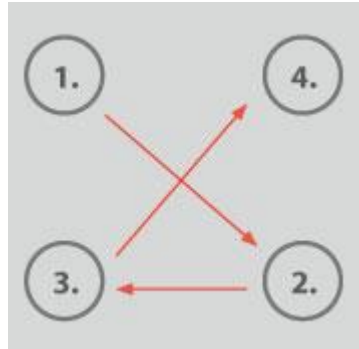

Lower Spring Plate –
Torque Pattern



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318

Installation Instructions

support@umiperformance.com
www.umiperformance.com

DISCLAIMER OF WARRANTY

THE PURCHASER ACCEPTS ALL RESPONSIBILITY FOR THE FINAL USE OF THE PRODUCTS PURCHASED AND SHALL HOLD UMI PERFORMANCE INCORPORATED AND ITS REPRESENTATIVES HARMLESS IN ANY LEGAL PROCEEDING ARISING FROM THE USE OF SUCH PRODUCTS.

UMI PERFORMANCE INCORPORATED DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATION REGARDING THE USE, OR THE RESULT OF THE USE OF ANY PERFORMANCE PRODUCT MANUFACTURED OR DISTRIBUTED BY UMI PERFORMANCE INCORPORATED. PURCHASER ASSUMES THE ENTIRE RISK AS THE RESULT AND PERFORMANCE OBTAINED FROM THE INSTALLATION AND USE OF SAID PERFORMANCE PRODUCTS. UMI PERFORMANCE INCORPORATED ASSUMES NO RESPONSIBILITY FOR AND HEREBY DISCLAIMS ALL WARRANTIES, ORAL OR WRITTEN, EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

ALL PARTS ARE WARRANTED TO BE FREE OF DEFECT AT THE TIME OF PURCHASE. WARRANTY IS ONLY EXTENDED TO REPLACEMENT OF PARTS FROM UMI PERFORMANCE INCORPORATED AND DOES NOT COVER LABOR, TOWING OR ANY OTHER DIRECT OR INDIRECT COST. UMI PERFORMANCE INCORPORATED IS NOT RESPONSIBLE FOR ANY CONSEQUENTIAL DAMAGE, EXPENSE OR INJURY ARISING FROM THE USE, MISUSE OR IMPROPER INSTALLATION OF ANY PRODUCT MANUFACTURED AND/OR SOLD BY UMI PERFORMANCE INCORPORATED.

Item #2626

70-81 GM F-Body
Shackle Kit

UMI Performance Inc.
Made in Philipsburg, PA - USA

Thanks for choosing UMI Performance, Inc.