

1970-1981 GM F-body High Travel Coil-over brackets
Weld-In
Item # 2661



IMPORTANT NOTES

The UMI 2661 is intended for installation by the experienced fabricator. It requires cutting of your vehicle frame and then welding into the upper spring mount area. Do not attempt if you are not familiar with heavy fabrication.

The UMI 2661 is intended for use with a bearing mount 7" stroke racing shock and 2-1/2" racing coilover spring. We recommend measuring center to center after installation and then choosing the correct ride height shock based on your exact application.

UMI is not responsible discrepancies when used for applications other than the above, including but not limited to bump stop interference, ball joint binding, incorrect angles, etc.

Please follow all applicable safety practices when working on a raised vehicle such as proper use of jack stands and safety glasses, and care when handling compressed coil springs.

Installation Instructions:

1. Support car safely on jack stands or lift. Always be careful when working on or around a lifted vehicle.
2. Remove existing upper and lower a-arms, springs and shocks.

Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com

3. Cut the outer portion of the upper a-arm / shock mount at lines shown in picture. It is recommended to cut short of the mark and grind to fit



4. once the cut are made and ground flush, it should look similar to below.




Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com

5. Lay the supplied template flat in the area to layout the portion to be cut for coilover clearance. It is recommended to cut short and grind to fit. Use the supplied ring to test fit. When satisfied with fitment, tack weld the ring in place, it is not recommended to fully weld at this point.




6. Bolt the 2661 upper mount into the factory a arm mount using the upper a arm bolts. The longer side of the mount, which has two holes, goes toward the front of the car. Mark the location of the notch to be cut into the top lip of the factory a arm mount.
7. Cut notch and test fit 2661. The mount should fit tight against the vertical face of the factory a arm mount. The front and back of the 2661 may need slight grinding to fit tightly on your particular car. From the factory the width of the a arm mount varied slightly.
8. Once the upper mount fits the factory a arm mount tightly, bolt the mount into place. Install the lower a arm and coilover to double check clearance before final welding.

9. Disassemble suspension. Remove 2661 upper mount to gain easier access to weld the reinforcement ring. Bolt in upper mount then weld in place. It is recommended to weld the top and bottom of the mount.

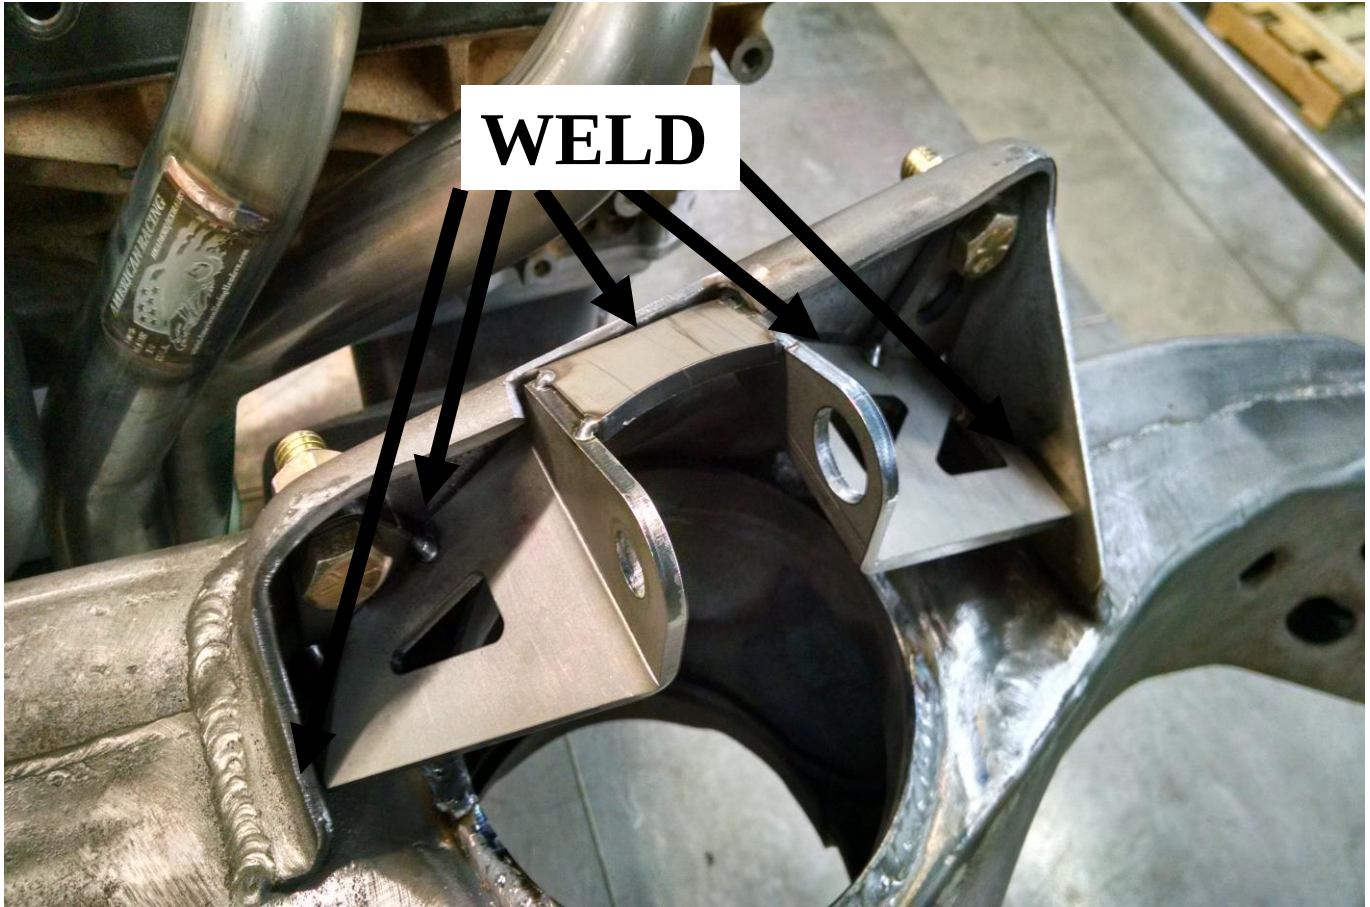

Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com

10. Weld the factory seams of the upper a arm mount as shown below. This helps reinforce the factory mount.

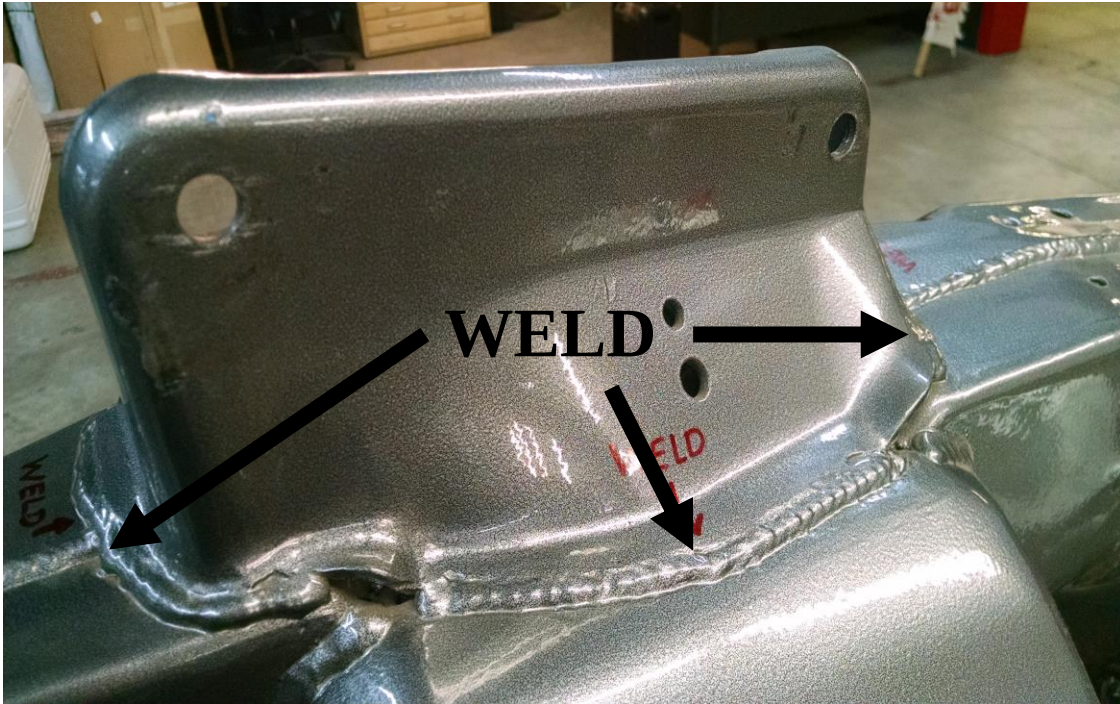

12. Upper Coilover mounting. Install upper coilover over as shown with the supplied spacers.

3 different length spacers are included, 3/8", 1/2", and 3/4"

For 1" wide shock bearings, use the 3/4" and 1/2" spacers

For 1.25" wide shock bearing, use the 3/4" and 3/8" spacers

2 of the spacers will not be used



Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com

Example of finished Product



13. Install spring onto shock.
14. Reinstall coilover into vehicle.
15. Tighten shock mounting bolt to 60 ft-lb and lower shock bolt to spec of manufacturer.
16. Test drive.

Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318
Installation Instructions
support@umiperformance.com
www.umiperformance.com

DISCLAIMER OF WARRANTY

THE PURCHASER ACCEPTS ALL RESPONSIBILITY FOR THE FINAL USE OF THE PRODUCTS PURCHASED AND SHALL HOLD UMI PERFORMANCE INCORPORATED AND ITS REPRESENTATIVES HARMLESS IN ANY LEGAL PROCEEDING ARISING FROM THE USE OF SUCH PRODUCTS.

UMI PERFORMANCE INCORPORATED DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATION REGARDING THE USE, OR THE RESULT OF THE USE OF ANY PERFORMANCE PRODUCT MANUFACTURED OR DISTRIBUTED BY UMI PERFORMANCE INCORPORATED. PURCHASER ASSUMES THE ENTIRE RISK AS THE RESULT AND PERFORMANCE OBTAINED FROM THE INSTALLATION AND USE OF SAID PERFORMANCE PRODUCTS. UMI PERFORMANCE INCORPORATED ASSUMES NO RESPONSIBILITY FOR AND HEREBY DISCLAIMS ALL WARRANTIES, ORAL OR WRITTEN, EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

ALL PARTS ARE WARRANTED TO BE FREE OF DEFECT AT THE TIME OF PURCHASE. WARRANTY IS ONLY EXTENDED TO REPLACEMENT OF PARTS FROM UMI PERFORMANCE INCORPORATED AND DOES NOT COVER LABOR, TOWING OR ANY OTHER DIRECT OR INDIRECT COST. UMI PERFORMANCE INCORPORATED IS NOT RESPONSIBLE FOR ANY CONSEQUENTIAL DAMAGE, EXPENSE OR INJURY ARISING FROM THE USE, MISUSE OR IMPROPER INSTALLATION OF ANY PRODUCT MANUFACTURED AND/OR SOLD BY UMI PERFORMANCE INCORPORATED.

Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318
Installation Instructions
support@umiperformance.com
www.umiperformance.com

Item # 2661
70-81 GM F-body
Extended Travel Coil-over brackets

UMI Performance Inc.
Manufactured in Philipsburg, PA-USA

Thank you for Putting Your Trust in A UMI Performance Product!
www.umiperformance.com

