

78-88 GM G-Body Solid Rear Sway Bar
Item # 3034



Note: Never work under an unsupported car. Please follow all applicable safety procedures when installing this product.

Kit Includes: (4) M10 bolts, (8) M10 washers, (4) M10 locknuts

Tools required: wrench /socket set, three ton floor jack and (2) jack stands.

Although installation of the 4034 is straightforward, we recommend having a second person to assist with the installation.

- 1 Jack up the rear of the vehicle under the differential housing or by using a lift. Properly support the raised car with jack stands or the applicable lift procedures.
- 2 Remove old sway bar if attached. Penetrating oil may be required.
- 3 Once the old sway bar is out, replace with the UMI P/N 3034 and insert the bolts from the outside toward the inside. The bow should face downward to clear the differential housing.
- 4 Install the flat washers and nuts by working in stages. Finger tight to start then final torquing. Torque to 45 fl lbs if using a torque wrench, moderately tight if using normal hand tools.
- 5 It's best to final tighten with the rear suspension in its operating location.
- 6 Lower the car following all applicable safety rules.
- 7 Test drive.



Thank you for putting your trust in a UMI Performance product!


Appearance Note:

This bar is a hot formed unit and is expected to exhibit some degree of surface texture. We at UMI feel the performance of the part is paramount and choose to use this process to dramatically increase the bars strength and performance. Please see attached photos which describe the process and better explain the texture of the sway bar. The heat treated UMI Performance sway bar has twice the tensile and yield strength as a competitors cold bent bar. We will not offer a cold bent bar for this application because of premature failure.



Notes:

- 1.) PRINT TO BE USED FOR DIMENSIONING HOLE LOCATION TO UTILIZE SWAY BAR ON FACTORY LOWER CONTROL ARM.
- 2.) FACTORY CONTROL ARMS REQUIRE ANTI-CRUSH SPACERS (NOT PROVIDED).
- 3.) STACK OF FLAT WASHERS CAN BE USED AS ANTI-CRUSH SPACER.

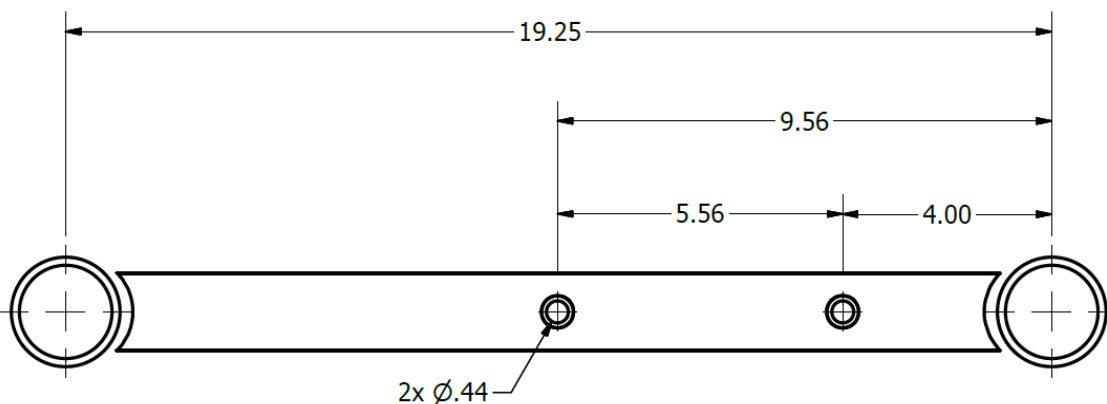

Thank you for putting your trust in a UMI Performance product!



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318

Installation Instructions

support@umiperformance.com
www.umiperformance.com

DISCLAIMER OF WARRANTY

THE PURCHASER ACCEPTS ALL RESPONSIBILITY FOR THE FINAL USE OF THE PRODUCTS PURCHASED AND SHALL HOLD UMI PERFORMANCE INCORPORATED AND ITS REPRESENTATIVES HARMLESS IN ANY LEGAL PROCEEDING ARISING FROM THE USE OF SUCH PRODUCTS.

UMI PERFORMANCE INCORPORATED DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATION REGARDING THE USE, OR THE RESULT OF THE USE OF ANY PERFORMANCE PRODUCT MANUFACTURED OR DISTRIBUTED BY UMI PERFORMANCE INCORPORATED. PURCHASER ASSUMES THE ENTIRE RISK AS THE RESULT AND PERFORMANCE OBTAINED FROM THE INSTALLATION AND USE OF SAID PERFORMANCE PRODUCTS. UMI PERFORMANCE INCORPORATED ASSUMES NO RESPONSIBILITY FOR AND HEREBY DISCLAIMS ALL WARRANTIES, ORAL OR WRITTEN, EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

ALL PARTS ARE WARRANTED TO BE FREE OF DEFECT AT THE TIME OF PURCHASE. WARRANTY IS ONLY EXTENDED TO REPLACEMENT OF PARTS FROM UMI PERFORMANCE INCORPORATED AND DOES NOT COVER LABOR, TOWING OR ANY OTHER DIRECT OR INDIRECT COST. UMI PERFORMANCE INCORPORATED IS NOT RESPONSIBLE FOR ANY CONSEQUENTIAL DAMAGE, EXPENSE OR INJURY ARISING FROM THE USE, MISUSE OR IMPROPER INSTALLATION OF ANY PRODUCT MANUFACTURED AND/OR SOLD BY UMI PERFORMANCE INCORPORATED.

Item # 3034

78-88 GM G-Body Solid Rear Sway Bar

UMI Performance Inc.
Made in Philipsburg, PA USA

Thank you for putting your trust in a UMI Performance product!

Page 3 of 3