



NEW VINTAGE USA  
2415 BURDETTE  
FERNDALE, MI 48220  
248.2594964 PHONE  
248.656.8291 FAX  
info@newvintageusa.com  
www.newvintageusa.com


## 1967-72 FULL SIZE GM TRUCK PACKAGE BRACKET INSTALLATION SHEET

### CONTENTS:

6 GAUGE KIT SPEEDO, TACH, FUEL (0-90) TEMP, PRES, VOLTS  
PRESSURE SENDER  
TEMP SENDER  
BUSHING KIT  
REMOTE BUTTON  
SPEEDO HARNESS  
BRACKET CONTENTS:  
MAIN BRACKET ASSEMBLY  
8x #6x5/8" SELF TAPPING SCREWS  
8X BRACKET HOLD-DOWNS

All warning lamps/turn signals are 12V

Use #6x 5/8" self tapping screws for  
clamp brackets

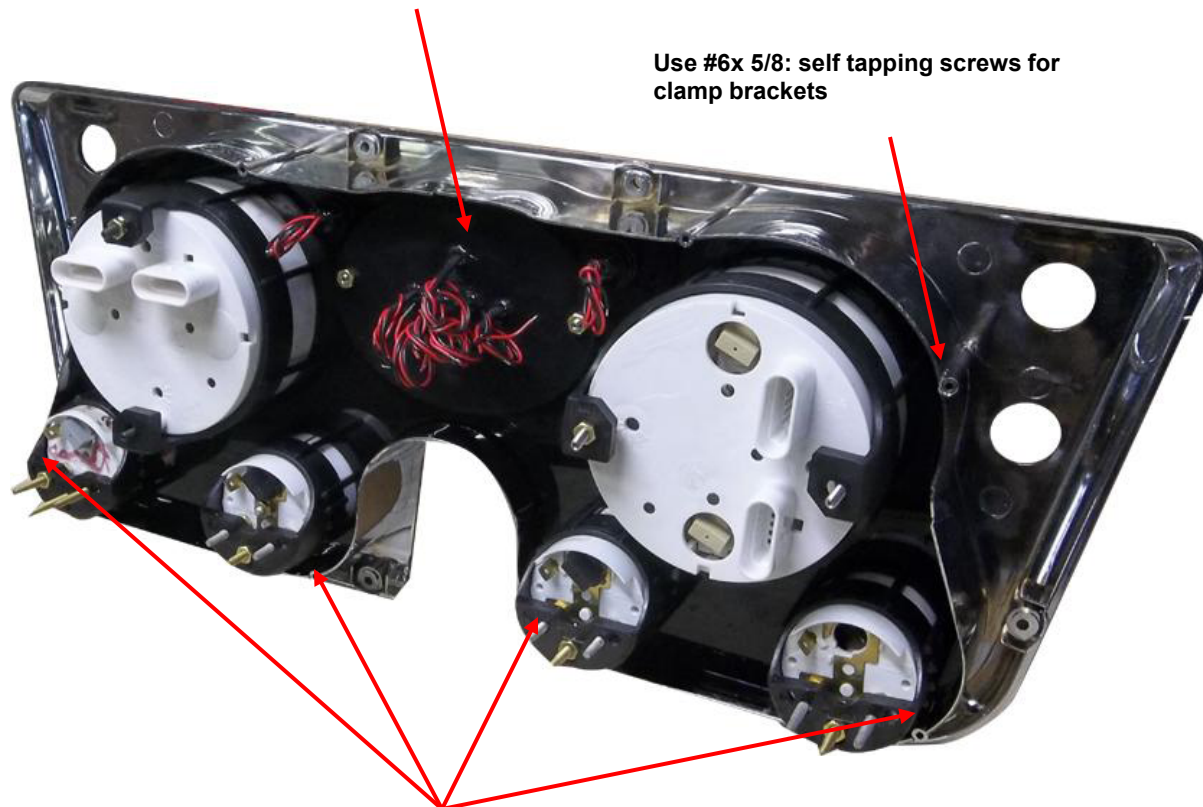

Bracket clamps on lower portion will  
need to be trimmed to fit, clip with wire  
snips or side cutters

### INSTALLATION:

Remove original panel and gauges  
Install new gauges in panel in any position  
Install on back of original panel as shown  
using fasteners included in kit

Turn signals/warning lamps are 12V LEDs,  
wire as needed. Red is 12V+ black is  
ground. Each LED is labelled by engraving  
on the back of the assembly

Place gauges assembly in panel, adjust  
gauge positions/rotation as needed.  
Install hold down clamps using #6x5/8" self  
tapping screws.

Hold down clams for lower portion will need  
to be shortened for proper fit, clip and install  
as needed

Fuel gauge in kit is a 0-90 factory match,  
GM used this sender from 1965-1991

Wire gauges according to instruction booklet

**INSTALL GAUGES THROUGH FRONT HOLES AND SECURE THROUGH BRACKET WITH BACK CLAMPS**