




NEW VINTAGE USA
2415 BURDETTE
FERNDALE, MI 48220
248.259.4964 PHONE
248.656.8291 FAX
info@newvintageusa.com
www.newvintageusa.com

88-94 GM FULL SIZE BRACKET INSTALLATION BRACKET INSTALLATION

NVO direct fit kits for s-10/Blazer allow the installation of 6 gauges into the stock housing using the OE mounting locations.

1. Remove stock cluster assembly and disconnect wiring plug
2. Splice in wires as needed, wire gauge cluster communicating ground, power as with any cluster. If you have wiring questions feel free to call or check out our tech resource pages. Use gauge instructions for wiring connections
3. Re-install cluster, switches and lower panel.
4. That's it!

Attach stock housing to new cluster using 4 #6-32 screws

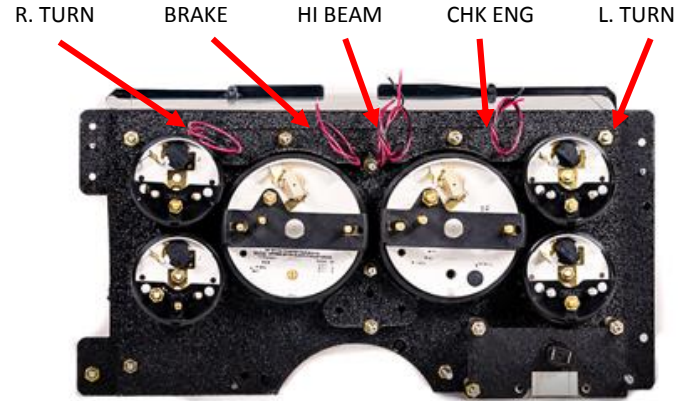

Indicators are LEDs, pre-wired for 12V operation. Red is power black is ground

OR PRNDL Installs as shown, re-use screws from original to secure.
Tie bulb into gauge wiring and your PRNDL will light up at night as well.

