


### 99002-04

#### FORD STYLE SPEEDOMETER SENDER ADAPTER INSTALLATION INSTRUCTIONS

Installation:

1. Remove speedometer cable if required
2. Screw adapter onto GM style sender, careful not to bind drive tang.
3. Install in the reverse of cable removal.
4. Wire sender as shown or according to your speedometer instructions

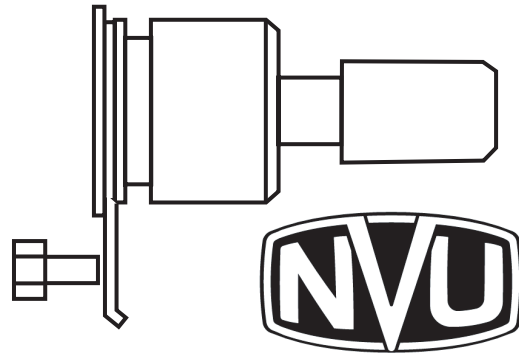


NEW VINTAGE USA  
2415 BURDETTE  
FERNDALE, MI 48220  
[www.newvintageusa.com](http://www.newvintageusa.com)

### 99002-04

#### FORD STYLE SPEEDOMETER SENDER ADAPTER INSTALLATION INSTRUCTIONS

Installation:

1. Remove speedometer cable if required
2. Screw adapter onto GM style sender, careful not to bind drive tang.
3. Install in the reverse of cable removal.
4. Wire sender as shown or according to your speedometer instructions

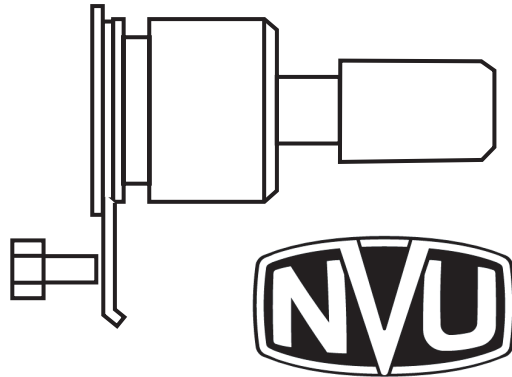


NEW VINTAGE USA  
2415 BURDETTE  
FERNDALE, MI 48220  
[www.newvintageusa.com](http://www.newvintageusa.com)

### 99002-04

#### FORD STYLE SPEEDOMETER SENDER ADAPTER INSTALLATION INSTRUCTIONS

Installation:

1. Remove speedometer cable if required
2. Screw adapter onto GM style sender, careful not to bind drive tang.
3. Install in the reverse of cable removal.
4. Wire sender as shown or according to your speedometer instructions

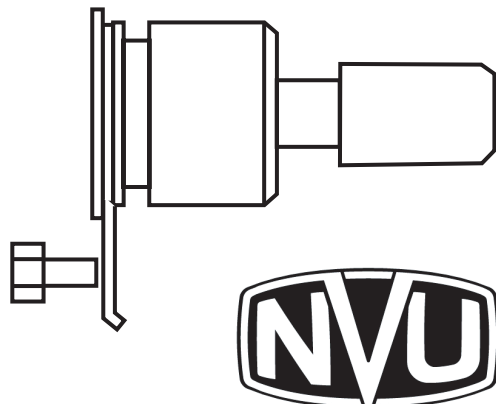

NEW VINTAGE USA  
2415 BURDETTE  
FERNDALE, MI 48220  
[www.newvintageusa.com](http://www.newvintageusa.com)