


**INTAKE MANIFOLD GASKET**  
**For Honda B16 and B18C1 Engines**  
**Catalog #15041 & #15042**  
**INSTALLATION INSTRUCTIONS**

1. Clean all gasket mating surfaces. Stuff paper towels into the open intake ports before cleaning to prevent any debris from entering the engine.
2. Torque all intake manifold bolts to 17 ft./lbs., following the sequence below (**See Fig. 1**).

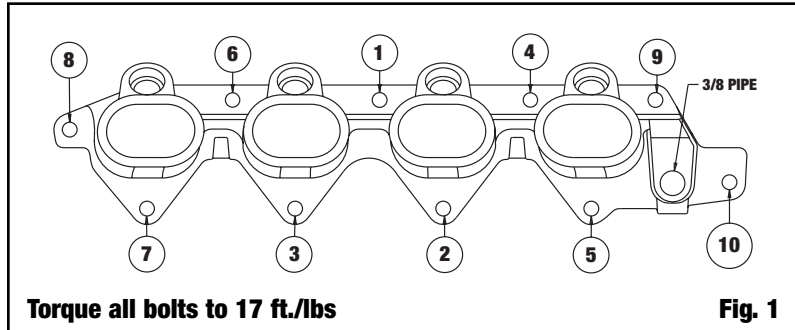


**Edelbrock Corporation • 2700 California St. • Torrance, CA 90503**  
**Tech Line: 1-800-416-8628 • E-Mail: Edelbrock@Edelbrock.com**

Catalog #15041 & #15042  
Rev. 4/05 - RS/mc

©2005 Edelbrock Corporation  
Brochure #63-0382

**INTAKE MANIFOLD GASKET**  
**For Honda B16 and B18C1 Engines**  
**Catalog #15041 & #15042**  
**INSTALLATION INSTRUCTIONS**

1. Clean all gasket mating surfaces. Stuff paper towels into the open intake ports before cleaning to prevent any debris from entering the engine.
2. Torque all intake manifold bolts to 17 ft./lbs., following the sequence below (**See Fig. 1**).

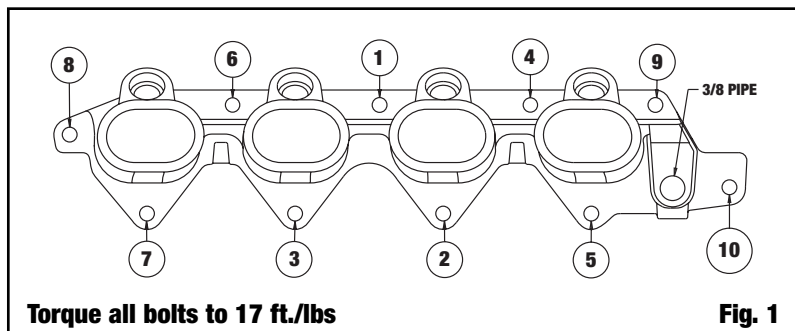

**Edelbrock Corporation • 2700 California St. • Torrance, CA 90503**  
**Tech Line: 1-800-416-8628 • E-Mail: Edelbrock@Edelbrock.com**

Catalog #15041 & #15042  
Rev. 4/05 - RS/mc

©2005 Edelbrock Corporation  
Brochure #63-0382