




INTAKE MANIFOLD GASKET
For Honda B16 and B18C1 Engines
Catalog #15041 & #15042
INSTALLATION INSTRUCTIONS

1. Clean all gasket mating surfaces. Stuff paper towels into the open intake ports before cleaning to prevent any debris from entering the engine.
2. Torque all intake manifold bolts to 17 ft./lbs., following the sequence below (**See Fig. 1**).

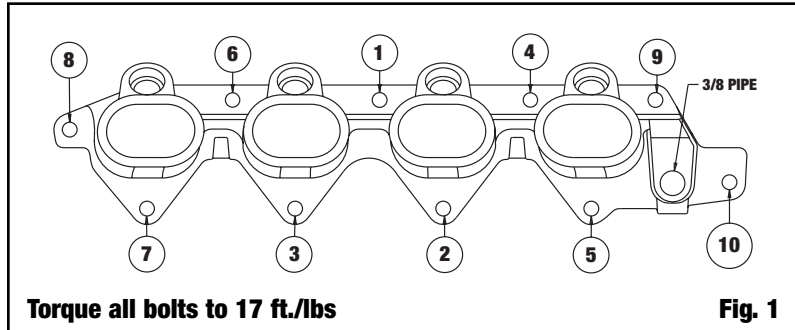

Edelbrock Corporation • 2700 California St. • Torrance, CA 90503
Tech Line: 1-800-416-8628 • E-Mail: Edelbrock@Edelbrock.com


Catalog #15041 & #15042
Rev. 4/05 - RS/mc

©2005 Edelbrock Corporation
Brochure #63-0382



INTAKE MANIFOLD GASKET
For Honda B16 and B18C1 Engines
Catalog #15041 & #15042
INSTALLATION INSTRUCTIONS

1. Clean all gasket mating surfaces. Stuff paper towels into the open intake ports before cleaning to prevent any debris from entering the engine.
2. Torque all intake manifold bolts to 17 ft./lbs., following the sequence below (**See Fig. 1**).

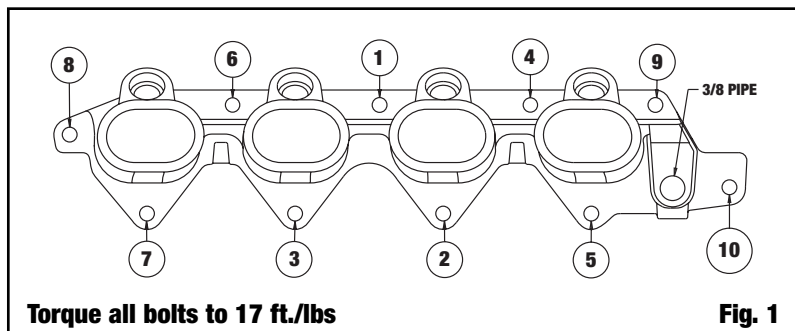

Edelbrock Corporation • 2700 California St. • Torrance, CA 90503
Tech Line: 1-800-416-8628 • E-Mail: Edelbrock@Edelbrock.com

Catalog #15041 & #15042
Rev. 4/05 - RS/mc

©2005 Edelbrock Corporation
Brochure #63-0382