

INSTALLATION AND ASSEMBLY INSTRUCTIONS



Please study these instructions carefully before assembling your harness connectors. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628**, 7 am to 5 pm, Monday-Friday, Pacific Standard Time or e-mail us at **QD2@Edelbrock.com**.

SUGGESTED CRIMP TOOL PART # PA1440 MANUFACTURED BY PALADIN TOOLS

LCU CONNECTOR ASSEMBLY INSTRUCTIONS:


PUSH LARGE TAB IN SO TWO SMALL TABS MOVE TO UNLOCKED POSITION.
 CRIMP WIRE TO PIN AND INSERT INTO BACK OF PLUGS. PUSH DOWN TWO
 TABS TO LOCK PINS IN CONNECTOR.

LCU CONNECTOR

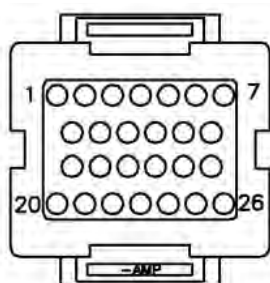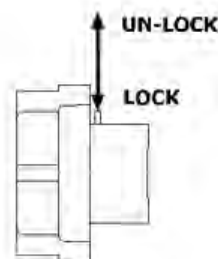


LCU CONNECTOR
26 PIN
VIEW FROM WIRE SIDE

LCU CONNECTOR
34 PIN
VIEW FROM WIRE SIDE

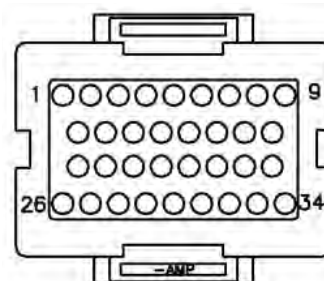

* FOR HARNESS PIN DESIGNATIONS DOWNLOAD QWIKDATA2
 HARNESS INSTALLATION GUIDE FROM EDELBROCK QWIKDATA2
 WEBSITE.




SUGGESTED CRIMP TOOL FOR SWITCHCRAFT CONNECTORS PART # PA1440 MANUFACTURED BY PALADIN TOOLS. SUGGESTED CONTACT INSERT AND REMOVAL TOOL : RADIO SHACK PART # 276-1426 D-SUB INSERTION AND EXTRACTION TOOL.

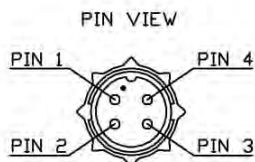

SENSOR
CONNECTOR
#37-1533

CONNECTOR DETAILS	
1	GROUND
2	SIGNAL +
3	5 VOLTS
4	12 VOLTS

HARNESS
CONNECTOR
#37-1531

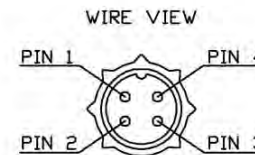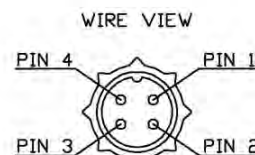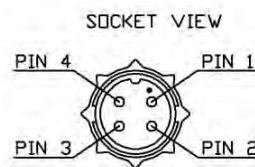

SWITCHCRAFT CONNECTOR ASSEMBLY INSTRUCTIONS:

CRIMP CONDUCTOR TO CONTACT, PLACE CRIMPED CONTACT AND CONDUCTOR ONTO HAND TOOL AND INSERT INTO CONNECTOR HOUSING UNTIL BOTTOMED. TO REMOVE CONTACTS INSERT TOOL INTO CONNECTOR HOUSING FROM CONDUCTOR SIDE UNTIL TOOL BOTTOMS IN HOUSING, PLACE CONDUCTOR IN SLOT OF TOOL, ROTATE TOOL CLOCKWISE AND REMOVE FROM HOUSING.

Edelbrock Corporation • 2700 California St. • Torrance, CA 90503
Tech-Line: 1-800-416-8628 • E-Mail: QD2@Edelbrock.com