



THROTTLE CABLE & KICKDOWN BRACKET KIT P/N 1953



Figure 1

INSTALLATION INSTRUCTIONS:

1. Bolt the 2 brackets together, if both the throttle & trans kick-down brackets are required, using the supplied 1/4"-28 bolts, washers, and nuts.
2. Install the supplied trans kick-down stud for the specific transmission type as shown in Figure 4 (TH350) or Figure 5 (700R4).
3. Put the throttle cable bracket in position on the carburetor flange using the nut from the mounting stud.
4. Follow the manufacturer's instructions for adjusting the cable(s).

WARNING! If you are unfamiliar with overdrive transmission TV cable adjustments, consult a qualified transmission expert. Failure to properly adjust the TV cable on overdrive transmissions can lead to poor shifting and / or transmission failure. Holley assumes no responsibility for transmission damage or failure caused by improperly adjusted TV cables.

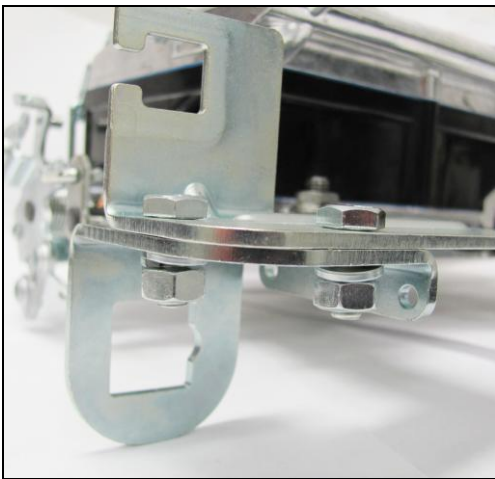


Figure 2

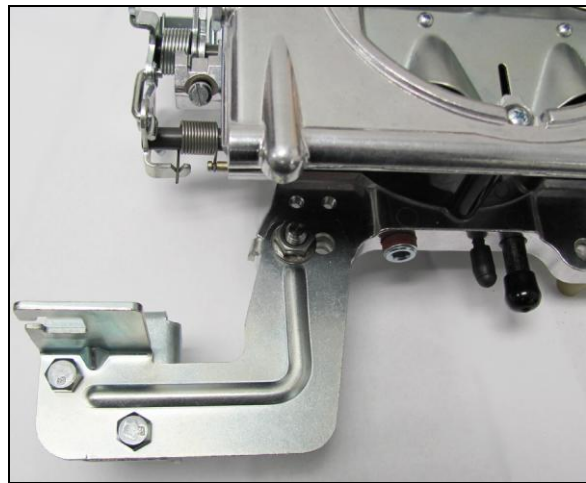


Figure 3



Figure 4 - TH350



Figure 5 - 700R4

LIT713

Date: 4-23-12