


American Autowire Systems*American Autowire makes it easy***FACTORY**
automotive
wiring **FIT**150 Heller Pl #17 W
Bellmawr, NJ 08031

856-933-0801

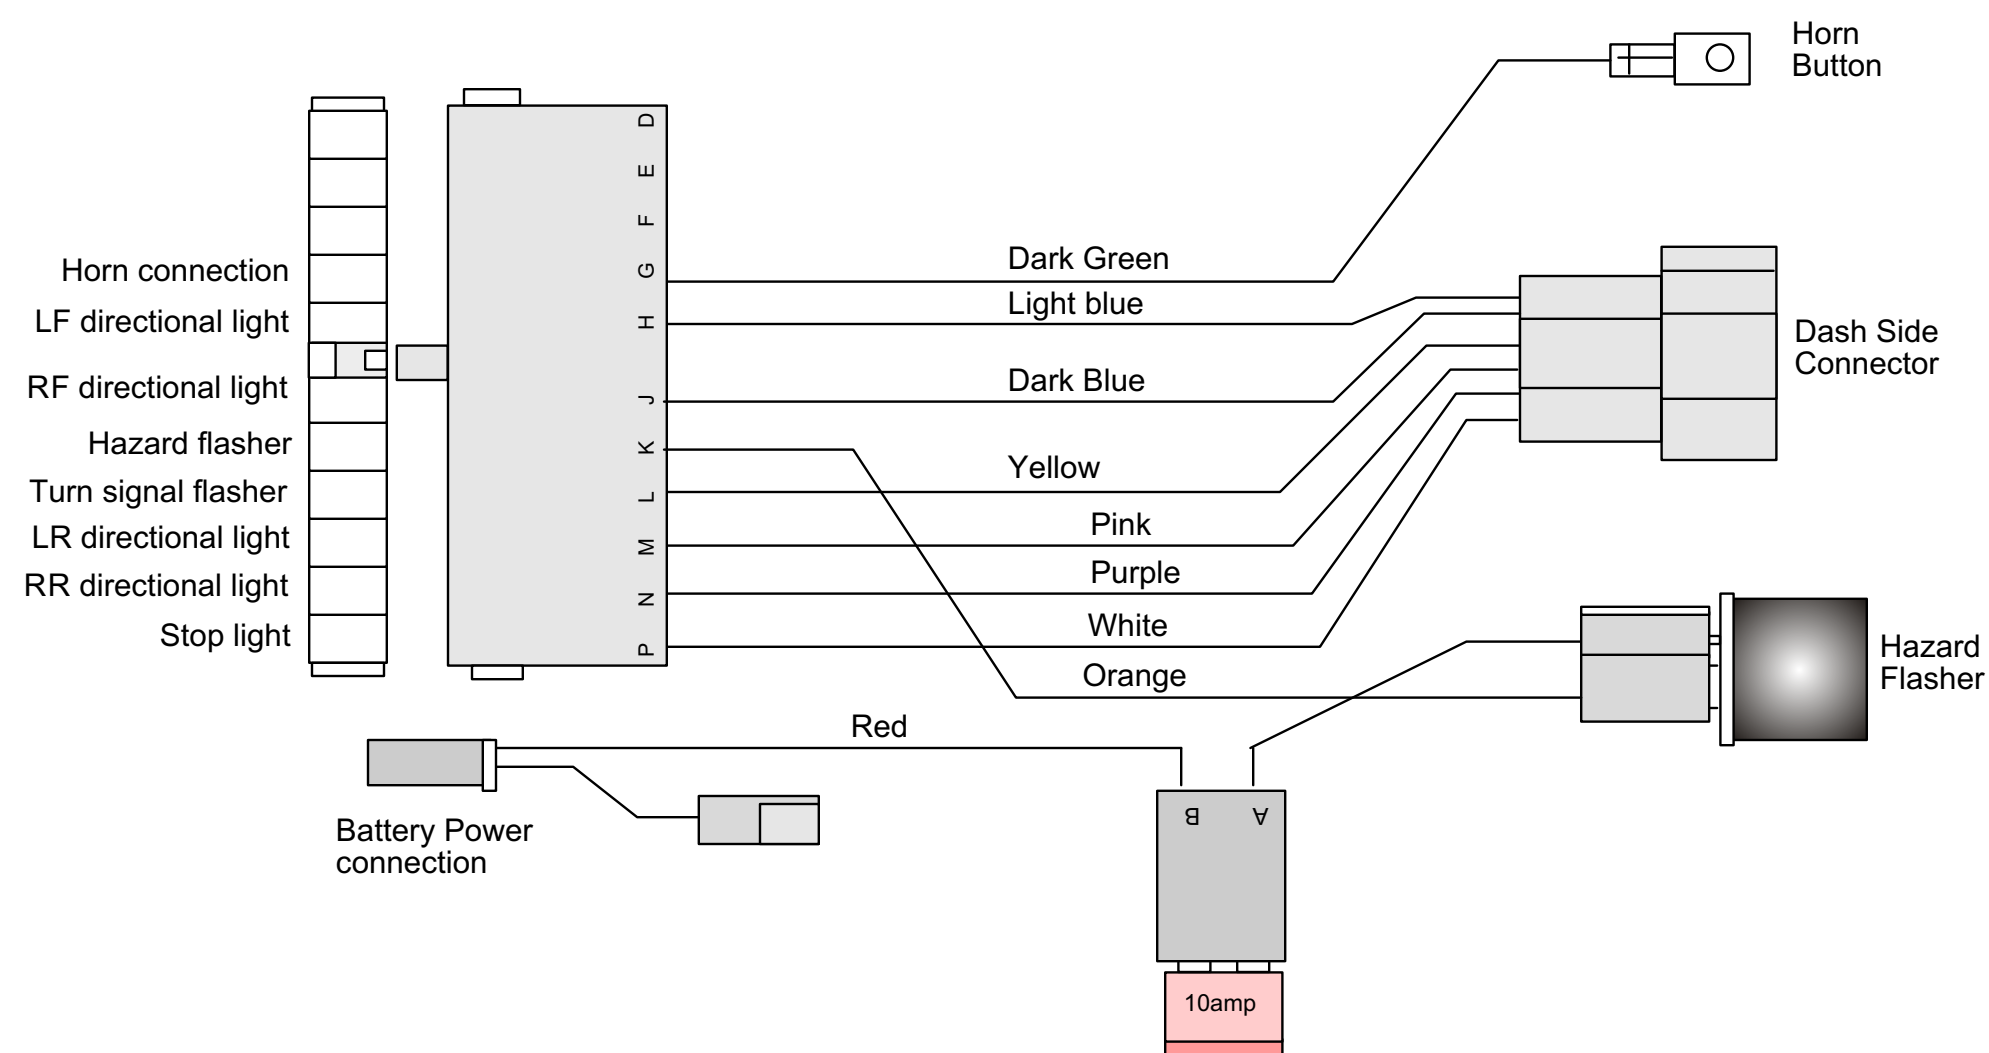

PART #:

35780**PART #: 35780****DESC: STEERING COLUMN
ADAPTER**© 1998 AAW Rev 2.0 1/6/99
35780 Instruction part number 92963629


STEERING COLUMN ADAPTER HARNESS

1956 CHEVY PASS
to
1969-1974 steering column

1. Plug the harness into the mating connector at the base of the steering column.
2. Plug the other end of the harness into the mating connector on your dash harness.
3. Connect the Dark Green wire to the horn button lead.
4. Plug the red wire to a battery power source on the fuse panel. An auxiliary battery source at the back of the cigarette lighter may also be used by first removing the existing heavy red wire and plugging it into the red pigtail wire.
5. Install a heavy duty 2 prong flasher into the "V" shaped plastic connector to enable use of the 4 way flashers.
6. Install a 10 amp fuse into the in line fuse holder.

American Autowire Systems*American Autowire makes it easy***FACTORY**
automotive
wiring **FIT**150 Heller Pl #17 W
Bellmawr, NJ 08031

856-933-0801

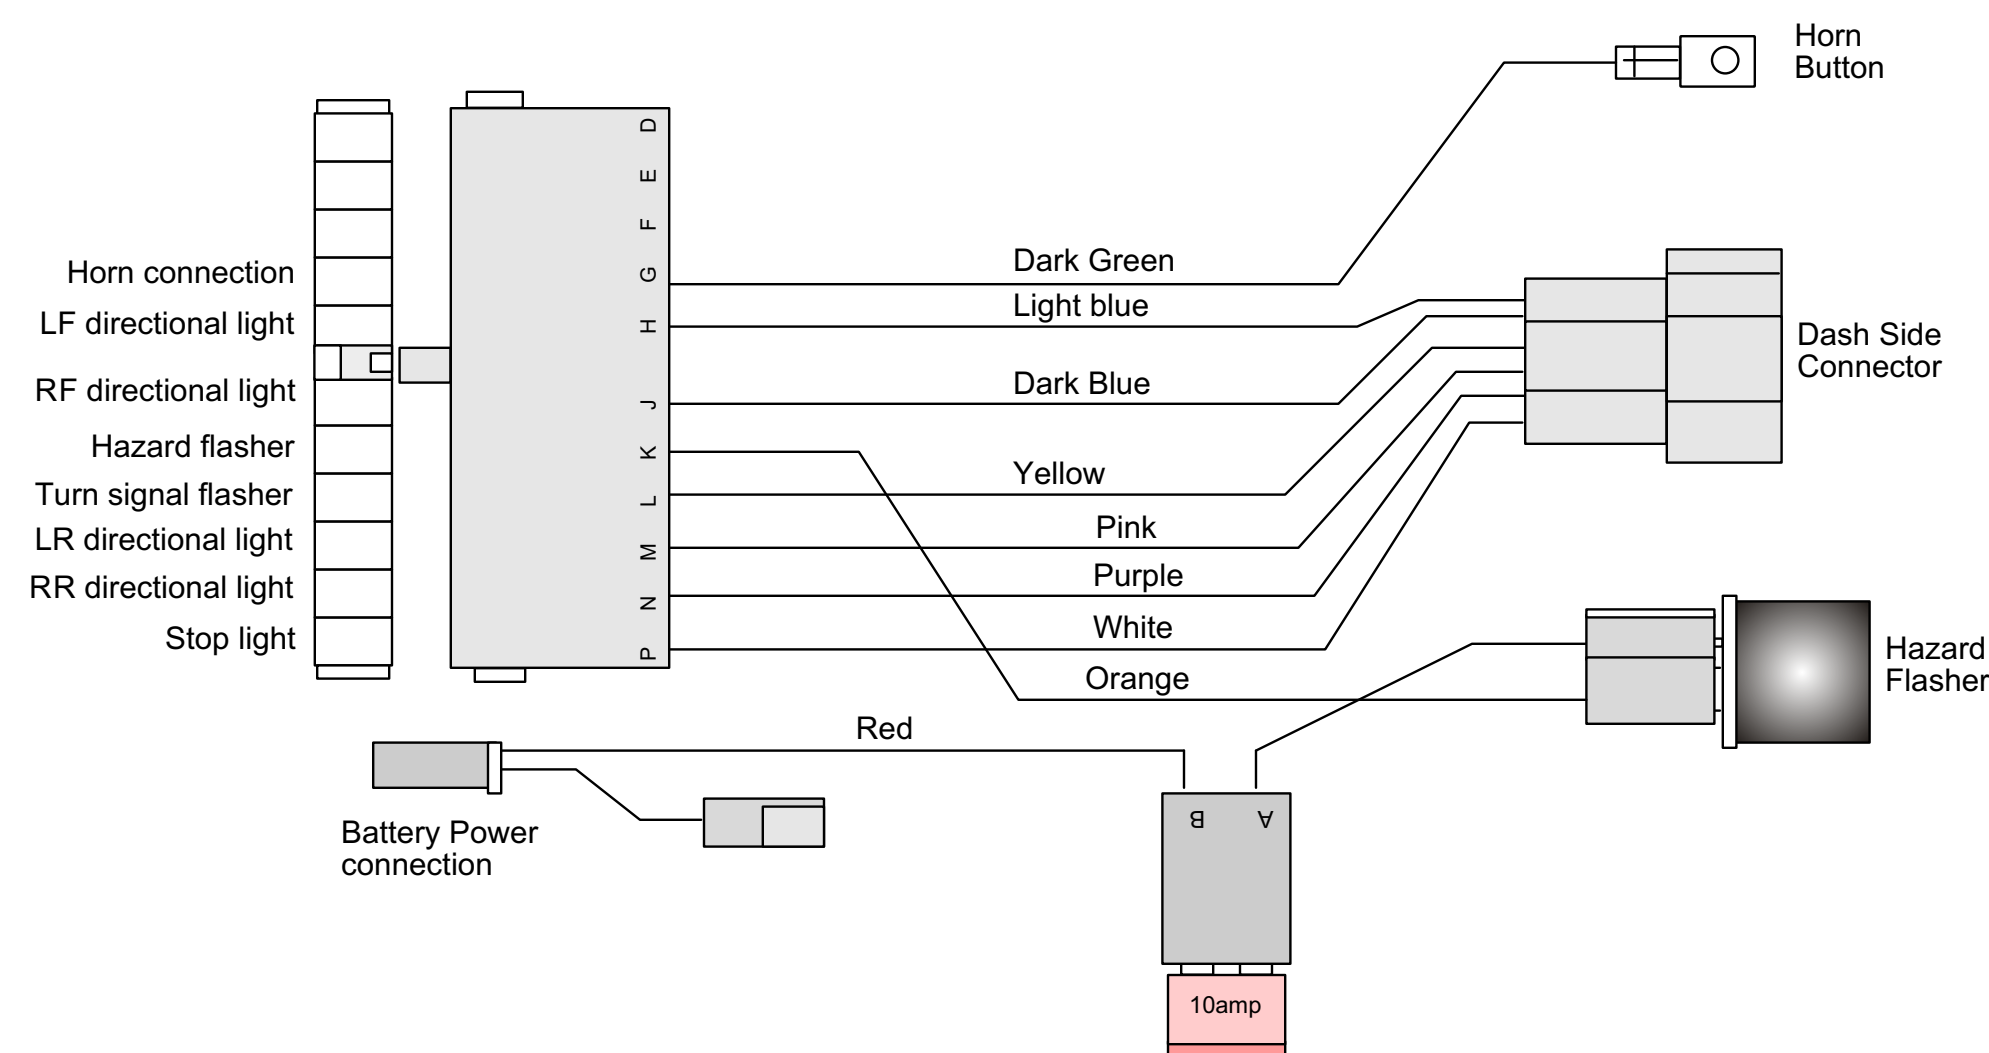

PART #:

35780**PART #: 35780****DESC: STEERING COLUMN
ADAPTER**© 1998 AAW Rev 2.0 1/6/99
35780 Instruction part number 92963629

STEERING COLUMN ADAPTER HARNESS

1956 CHEVY PASS
to
1969-1974 steering column

1. Plug the harness into the mating connector at the base of the steering column.
2. Plug the other end of the harness into the mating connector on your dash harness.
3. Connect the Dark Green wire to the horn button lead.
4. Plug the red wire to a battery power source on the fuse panel. An auxiliary battery source at the back of the cigarette lighter may also be used by first removing the existing heavy red wire and plugging it into the red pigtail wire.
5. Install a heavy duty 2 prong flasher into the "V" shaped plastic connector to enable use of the 4 way flashers.
6. Install a 10 amp fuse into the in line fuse holder.