

K&N Installation Instructions

Part Number 33-2187

This filter fits: **See current K&N catalog for complete listings**

FREE K&N DECAL** To register your warranty, please see us online at knfilters.com/register. **FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedure **MUST** be followed to ensure a proper fit and seal of the K&N Air Filter.

INSTALLATION

1. Loosen the hose clamp for the air intake hose and disconnect the hose from the Mass Air Sensor. (Fig. 1)
2. Carefully disconnect the electrical connector from the Mass Air Sensor, and then disconnect the wire harness holder from the lower Mass Air mounting stud. (Fig. 1)
3. Unfasten the two clips at the top of the air filter housing and remove the housing lid from the vehicle.
4. Remove the stock air filter.
5. Wipe out any dirt or dust that might be on the inside of the air filter housing. The airbox lid must be clean and dry so the gasket will stick to it.
6. Apply the self-adhering gasket around the sealing surface on the airbox lid. (Fig. 2)
7. Install the K&N Air Filter into the airbox base.
8. Re-install the airbox lid by engaging the two tabs on the airbox lid into the two slots on the airbox base. Hold the top of the lid at an angle while engaging the tabs so you do not roll the gasket off the lid.
9. Fasten the two clips at the top of the airbox, re-install the air intake hose onto the Mass Air Sensor and tighten the hose clamp. Re-connect the electrical connector to the Mass Air Sensor and re-attach the wire harness holder back onto the lower Mass Air mounting stud.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

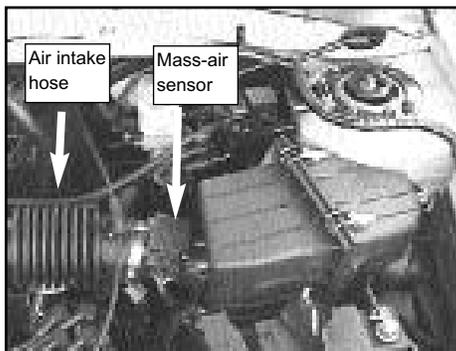


Fig. 1



Fig. 2