



# INSTALLATION INSTRUCTIONS

## Part Number 33-2272

This filter fits: **See current catalog for current listings**


**\*FREE K&N DECAL** To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). **FREE K&N DECAL\***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedure **MUST** be followed to ensure a proper fit and seal of the K&N® Air Filter.

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

### INSTALLATION:

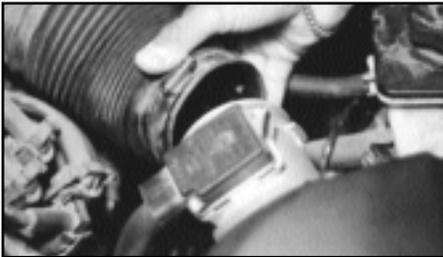

- 1) Loosen the mass air intake tube hose clamp and remove hose from mass air sensor.




- 2) Disconnect the mass air sensor electrical connector.



- 3) Disconnect the air temp. sensor electrical connector (if present).



- 4) Remove the airbox completely from vehicle by removing the three airbox retaining screws.

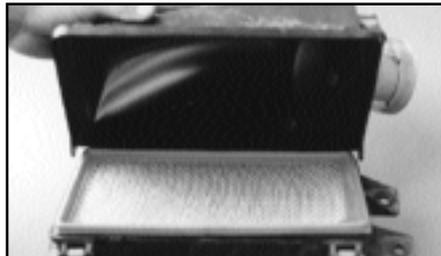


- 5) Unclip the two retaining clips and remove stock filter.



- 6) Install your K&N® Air Filter in the base of the airbox.



- 7) Line up the hinges, close the airbox and secure it with the spring clips.

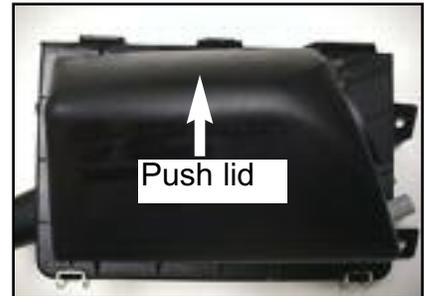

- 8) After airbox lid is fastened to the air box base push the lid in the direction shown by the arrow while pushing on the base in the opposite direction to ensure that the tabs on the lid are fully seated into the slots on the base.

- 9) Install airbox in reverse order. Reconnect the electrical connectors and intake hose and tighten down the hose clamp.