

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE FITTING THE KIT.



Your car and the engine bay should look like the ones in these pictures, if not then talk to your kit supplier. Should you still have a problem, call K&N customer services. Tel: 01925-629609. Fax: 01925-629610.

Photo A

1. Unclip and remove the electrical harness plug from the MAS (Mass Air Sensor) and the air temp sensor.

2. Unclip the air intake hose and air box lid. Unclip the MAP sensor (Manifold Absolute Pressure) from the rear of the air box lid.

3. Remove the air box lid assembly from the vehicle leaving the air box base in place.

4. Unclip and remove the MAS / intake hose assembly from the air box lid leaving the short rubber intake hose on the air box lid.

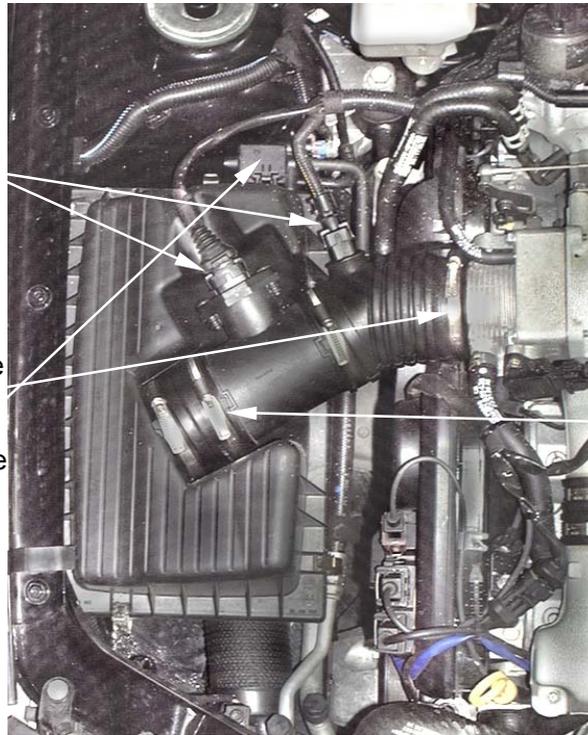


Photo B

1. Refit the original intake hose / MAS assembly onto the throttle body and tighten the hose clip. Reconnect the MAS and air intake temp sensor electrical harness plugs.

2. Fit the new filter onto the MAS / Intake hose assembly. Do not push in beyond the step as this will affect air flow. Tighten the clip until the filter just turns, Rotate the filter until the K&N logo is straight then tighten the clip one full turn (360 degrees) **no more, Do not overtighten the clip.**

3. Attach the new mounting bracket to the slam panel with the M6 screw, nut and washers supplied. Mount the studded lid of the filter to the bracket using the M6 nut and washers supplied.

4. Secure the MAP sensor to the wiring harness using the 2 plastic ties supplied.



Tuning.

CAT. Cars. No adjustments are required.

An increase in fuel may be required if further engine modifications are to be carried out.

Filter maintenance.

Under normal conditions clean and reoil the filter at approx. 40,000 miles / 65,000 Km.

Use only K&N cleaner and oil and follow the instructions carefully.

K&N filters are pre-oiled ready to fit.

This Kit Should Contain:

- 1 x Clamp On Filter.
- 1 x #60 Hose Clip.
- 1 x Bracket.
- 1 x Instruction Sheet.
- 1 x Instruction Pack :-
 - 1 x Filter Maintenance Sheet.
 - 1 x Leaflet.
 - 1 x K&N Window Sticker.
 - 1 x Million Mile Warranty.
- 1 x Fixing Kit :-
 - 1 x M6 x 20mm Screw.
 - 2 x M6 Nuts.
 - 3 x 6mm Spring Washers.
 - 2 x Flat Washers.
 - 2 x Medium Cable Ties.

FITTING YOUR 57i KIT

If you are not fitting the kit **it is essential** that the person fitting the kit (eg. Mechanic) **carefully follows these particular instructions** even if they have fitted K&N kits before. This will save you both time and money. Kits fitted incorrectly may show a loss in performance, e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

A final check under the bonnet, by yourself with the instructions, would seem sensible.

