

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE FITTING THE KIT.**If you have a problem, however small, call our Technical Department.**

Tel:- 01925 636950. Fax:- 01925 243111. Mon - Thurs 8.30 - 5pm.

- 1 Remove the three screws fixing the air box and remove the complete unit.
- 2 Unclip the accelerator cable from it's supporting bracket. **Diagram A.**
- 3 Remove the three hex screws securing the supporting bracket, lift the bracket in order to release the cables attached to it. When this is complete, remove the bracket. **Diagram A.**
- 4 Replace the two bracket front mounting screws, fitting the new accelerator cable mounting bracket to the left hand side. **Diagram B.**
- 5 Fit the accelerator cable to the new bracket. Ensuring that the cable is located at the bottom of the bracket, gently crush the top of the bracket a **small** amount in order to safegaurd against the cable becoming dislodged. **Diagram B.**
- 6 Clamp the filter unit to the intake manifold tube adjusting until the K&N logo is straight before tightening **firmly** in place. **Don't overtighten the clips.**
- 7 **Cold Air System**
Remove grille, expand the 50mm diameter cold air hose to 66cm / 26", and the 6cm diameter hose to 50cm / 20".
- 8 The 60mm cold air hose is fitted to the R H S of the vehicle and the 50mm diameter hose to the L H S.
- 9 Feed the hoses to the grille.
- 10 Feed the top ends of the cold air hoses up to the new filter and secure the ends of the hoses to finish approximately 10cm/4" from the filter (**no nearer**) with tie-wraps. **Diagram C.**
- 11 Refit the grille.
- 12 **Tuning.**
CAT. Cars. No adjustments are required.
An increase in fuel mixture may be required if further modifications are carried out.
- 13 **Filter maintenance.**
Under normal conditions clean and reoil the filter at approx. 40,000 miles / 65,000 Km.
Use only K&N cleaner and oil and follow the instructions carefully.

K&N filters are pre-oiled ready to fit.**The advantage's of K&N's cold air intake system.**

Cooler air being denser, will show positive improvements in power over filter systems that draw hot air from the engine bay.

This Kit Should Contain :-

- 1 x Air filter.
- 2 x Cold air hose assemblies.
- 1 x Instruction sheet.
- 1 x Instruction pack :-
 - 1 x Filter maintenance sheet.
 - 1 x K&N window sticker.
 - 1 x Million mile warranty card.
 - 1 x Leaflet.
- 1 x Fixing Kit:-
 - 1 x Hose Clip #44
 - 1 x Bracket
 - 4 x Plastic cable ties (35cm long).

**IMPORTANT INSTRUCTIONS
FOR ROUND ENTRY
CLAMP ON AIR FILTERS**


Gently tighten the hose clip to the point where the filter will just rotate on the pipe or intake flange. Reposition the K&N logo straight, then **give the clip two turns i.e. 360 , no more.**

FITTING YOUR OWN 57i KIT


If not, **it is essential** that the person fitting the kit (e.g. mechanic) **carefully follows these particular instructions** even if he has fitted K&N kits before. This will save you both time and money. Kits incorrectly fitted may show a loss in performance e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

A final check under the bonnet, by yourself, with the instructions, would seem sensible.

Drawing A

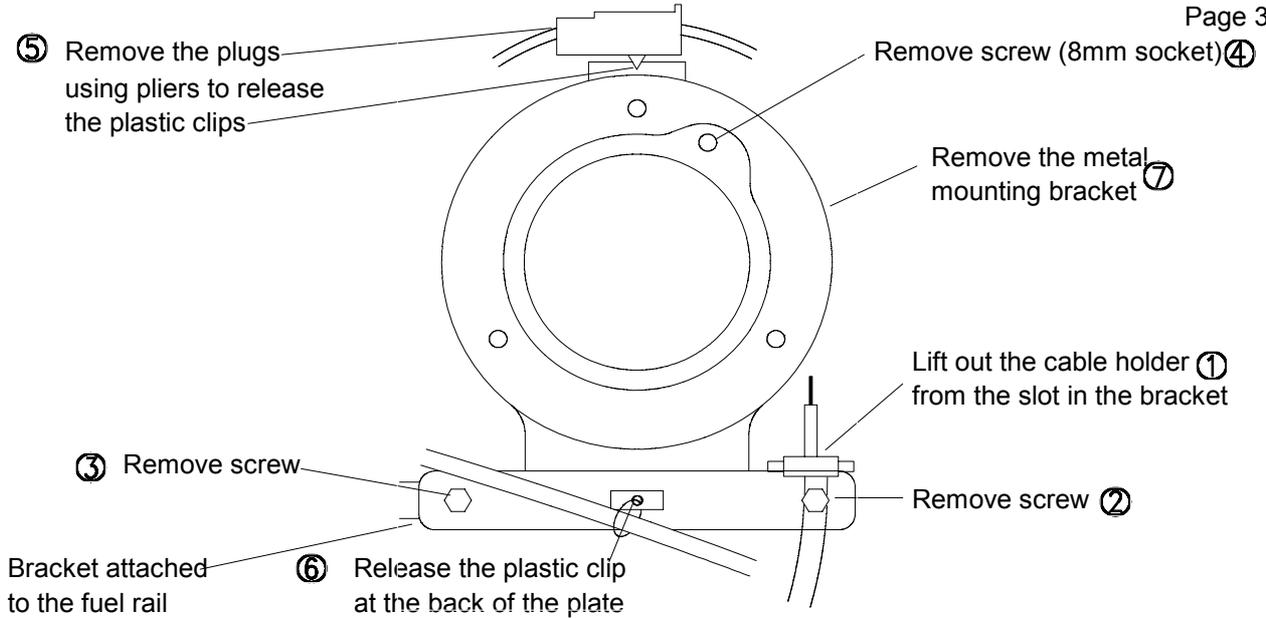

Drawing B

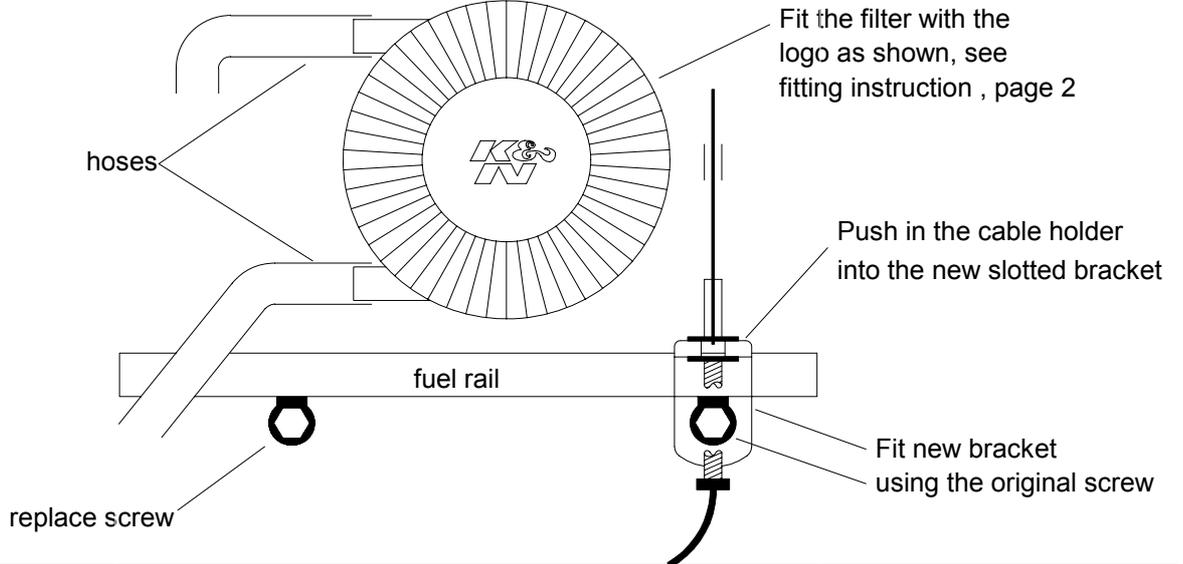

Drawing C

